



9.5" Ford Oval Installation Guide

P/N: 901460,61,62,66,69,87

Installation Instructions




Included In Package:

- 1- Ford Oval
- 2- 10-32 Hex Nuts
- 2- 10-32 Washer
- 2- 10-32 Socket Set Cup Screw

Installation Tools Needed:

- 10mm Wrench
- 8mm Wrench
- 7mm Wrench
- Pliers
- Flat Head Screw Driver

Tailgate Installation

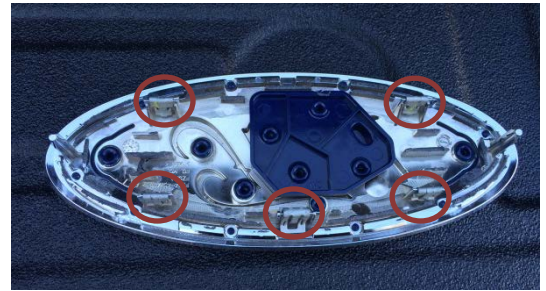

Step 1:

Remove tail gate inner panel.

Step 2:

Factory Oval has FIVE clips that need to be pushed to remove oval



Step 3:

Insert the two 10-32 socket set cup screws in one upper and one lower location. As pictured above.

***This is not same location for Front Grille installation**



Step 4:

Install Defenderworx oval into factory location. Use provided washers and nuts to secure oval to tailgate.



Step 5:

Confirm you have properly installed before driving vehicle



9.5" Ford Oval Installation Guide

P/N: 901460,61,62,66,69,87



Included In Package:

- 1- Ford Oval
- 2- 10-32 Hex Nuts
- 2- 10-32 Washer
- 2- 10-32 Socket Set Cup Screw

Installation Tools Needed:

- 10mm Wrench
- 8mm Wrench
- 7mm Wrench
- Pliers
- Flat Head Screw Driver

Grille Installation



Step 1:

Use flat-head screwdriver to remove (10) retaining clips. Remove plastic cover. Keep clips and cover.

Step 2:

Remove the top (4) grille screws with 10mm wrench (center) and (2) plastic tree clips (outer) with flat-head screwdriver. Keep screws and clips

Step 3:

Firmly pull out plastic cover around headlamp. Repeat other side.



Step 4:



Use flat-head screwdriver to remove (3) tree clips on each side of grille for a total of (6) clips. Keep clips.

Step 5:

Remove (1) 8mm bolts that secure lower grille to truck on each side for a total of (2) 8mm bolts. Keep bolts.

Step 6:

Unclip (2) electrical plugs on top side of the factory grille.

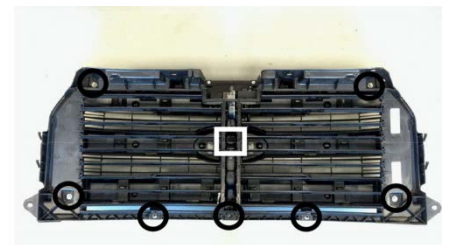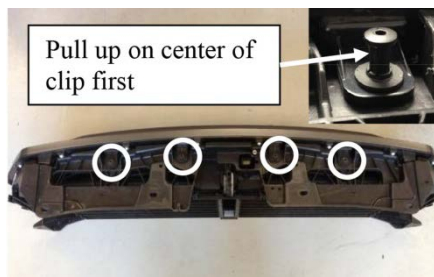

Step 7:

Pull factory grille assembly straight up and out.

Step 8:

Remove (4) plastic clips on top of grille assembly. Keep clips

Step 9:

Remove (7) 10mm nuts and (1) 7mm bolt in center of grille. Keep rear assembly for installation.



9.5" Ford Oval Installation Guide

P/N: 901460,61,62,66,69,87



Included In Package:

- 1- Ford Oval
- 2- 10-32 Hex Nuts
- 2- 10-32 Washer
- 2- 10-32 Socket Set Cup Screw

Grille Installation

Installation Tools Needed:

- 10mm Wrench
- 8mm Wrench
- 7mm Wrench
- Pliers
- Flat Head Screw Driver



Step 10:

Remove (2) nuts from rear of factory oval



Step 11:

Insert the two 10-32 socket set cup screws in the outer locations.

***This is not same location for rear tailgate installation**



Step 12:

Mount Defenderworx oval to factory grille Using provided hex nuts and washers.



Step 14:

Confirm you have properly installed before driving vehicle

Step 13 :

Repeat steps 1-9 in reverse order to reassemble and install grille.