



2145 Ford F-150 2009-2014

Installation Instructions



50 Min.

NOTE: Before starting this installation make sure all the hardware is included and this part number matches your vehicle.

2145-46 - FORD F 150 [09-14]







12		8 mm X 25 mm FLANGE HEAD BOLT	12		8 mm U - NUT
12		8 mm HEX FLANGE NUT			




3X



3X

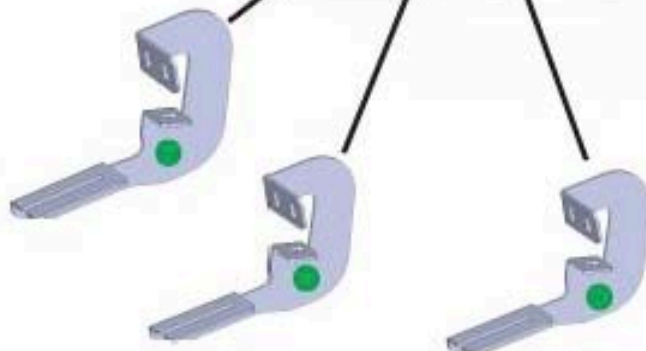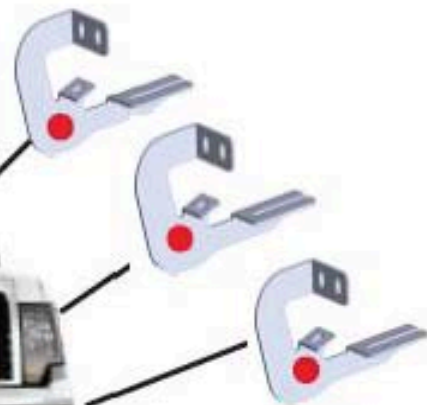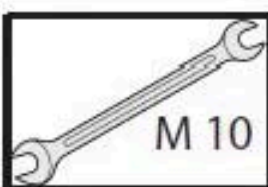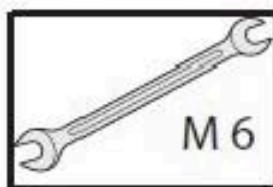

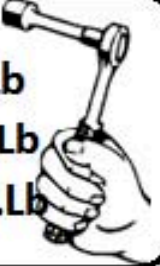


M6 = 8 Ft.Lb
M8 = 18 Ft.Lb
M10 = 35 ft.Lb

ATTENTION PLEASE! : DO NOT TIGHTEN ALL OF THE SCREWS UNTIL ALL OF THE PARTS ARE INSTALLED.
 NE PAZ SERRER L'ENSEMBLE QU'APRES TOUTES LES PHASES DU MONTAGE, ET UNE FOIS LES MARCHE PIEDS SONT CENTRES
 NO DAR APRIETE AL CONJUNTO HASTA HABER FINALIZADO TODAS LAS FASES DE MONTAJE Y TENER CENTRADAS LAS ESTRIBERAS

Keep your Romik accesories clean. To prevent corrsion and to maintain your high quality finish, wax or polish regularly with quality stainless polish. Use a non abrasive type automotive wax. Any use of abrasive soaps, polishes or waxes can be detrimental to the finish.



FRONT-MIDDLE-BACK

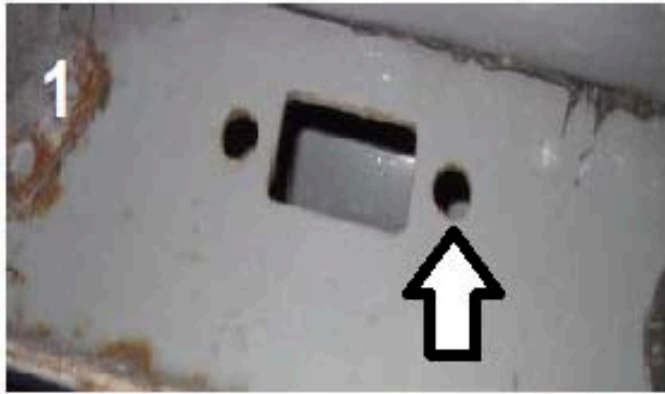

- 1) Locate mounting points as shown on image #1
- 2) Install 8 mm U-Nut as shown on image #2
- 3) Install mounting bracket with supplied M8 hardware as shown on image #3 do not tighten
- 4) Repeat same procedure on all 3 brackets do not tighten
- 5) Loosen M8 hardware on back of steps
- 6) Install steps onto brackets and hand tight only
- 7) Proceed to tighten bracket hardware M8 to 18 ft lbs
- 8) Proceed to tighten step hardware M8 to 18 ft lbs
- 9) Repeat same procedure on opposite side

For Technical support please call 1-866-717-6645

WARNING: Use of powertools will void the warranty

