


Prosport Aluminum Oil Catch Can Dual Baffle Instructions

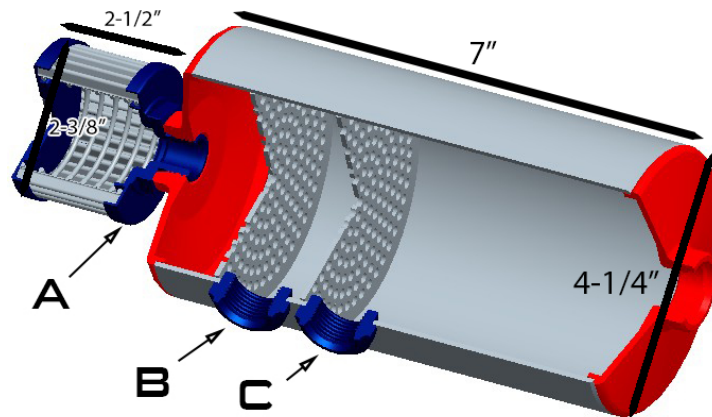

An oil catch installs between your crankcase vent and intake system, replacing the traditional factory vent lines and catching oil that would otherwise enter the intake system.

This is a universal part, so there are no vehicle specific installation instructions, just configurations. You can usually find write ups on forums with detailed images explaining how to install an oil catch can on your specific vehicle.

Configurations:

- 1 - Sealed Single Inlet Instructions. (A) Plugged, (B) Outlet, (C) Inlet.
- 2 - Vented Single Inlet Instructions. (A) Vented, (B) Plugged, (C) Inlet
- 3 - Sealed Dual Inlet Instructions. (A) Outlet, (B) Inlet, (C) Inlet
- 4 - Vented Dual Inlet Instructions. (A) Vented, (B) Inlet, (C) Inlet

Inlet: PCV / Valve cover source

Outlet: Intake source (pre throttle body naturally aspirated / pre turbo)