Cube Light Mounting Brackets (09-14 F150)

Contents:

(1) Left Bracket(1) Right Bracket


Tools Required:

10mm Socket and Ratchet Cutting Tool (Air Saw, Rotary Tool, or Similar)



Step 2\\

Hold the Cube Light Bracket up to the hinge and mark where the plastic cowl will need to be trimmed. Using a cutting tool, trim the cowl until the Cube Light Bracket aligns with the factory hood hinge bolts.

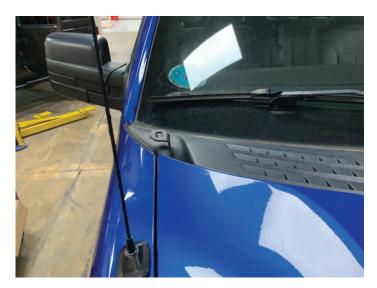

Step 3\\

Carefully remove the hood hinge bolts and install the Cube Light Brackets. Align the hood hinge to the chassis using the mark made in Step1. **Note: It may be helpful to have an assistant hold the hood. Repeat the process on the other side. Install is now complete.



Step 1\\

Locate the (2) 13mm hood hinge bolts. Using a marker, mark when the hinge in relation to the chassis for ease of future re-alignment.