



REAR SHOCK 0-1" LIFT

(2009-2018 F150)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Rear Shock

TOOLS REQUIRED

- Metric Socket Set
- Jack and Jack Stands
- Phillips Head Screwdriver

SKU # T543352

STEP 1




Begin by raising and supporting the rear of the vehicle using a jack and jack stands. Support the rear axle using the jack. Using a lug nut socket remove the rear wheels from the vehicle.

STEP 2



If equipped with fender liners, remove the fasteners securing the liner to the vehicle. Remove the liner.

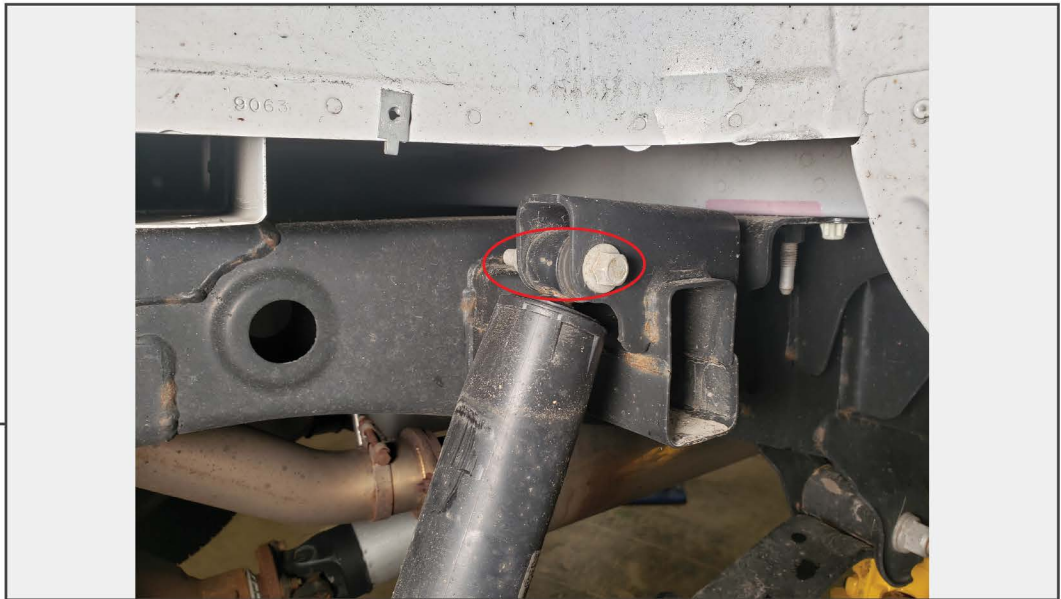

STEP 3

With the fender liner removed, locate the upper shock mount. Remove the upper shock bolt using a 15mm & 18mm socket and ratchet.



STEP 4

Locate the lower shock mount. Remove the lower shock bolt using a 15mm & 18mm socket and ratchet. Remove the shock from the vehicle. Install the new shock reusing the factory hardware. Torque fasteners to 66 ft. lbs.