



# SMOKED LED MIRROR MOUNTED TURN SIGNAL

(2009-2014 F150)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Light
- (2) RH Light
- (2) Adapter Wiring Harness
- (2) Plug Adapters

### TOOLS REQUIRED

---

- Gloves
- T20 Torx Bit
- Soft Pry Tool

SKU: T543848 T544359

## STEP 1




While wearing gloves, carefully remove the mirror glass. Tilt the glass down so that the top edge is accessible.

## STEP 2




The glass is clipped into the mirror housing, firmly pull the glass away from the mirror housing to dislodge it from the clips. If equipped with heated mirrors remove the power cables by unclipping them from the back of the mirror.

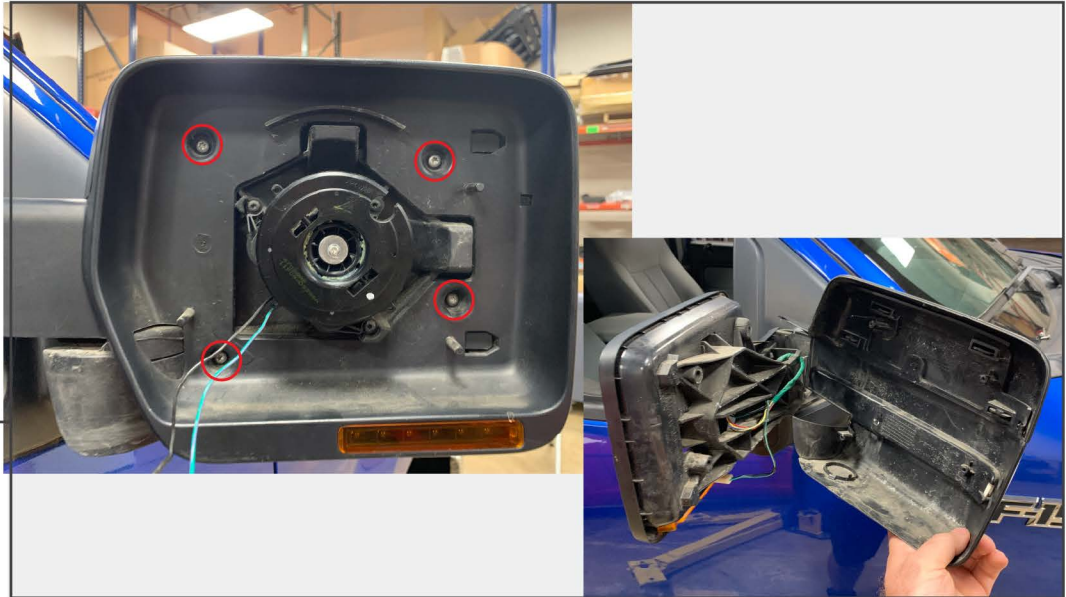

## STEP 3

Using a T20 Torx bit, remove the (4) screws that secure the mirror shell to the vehicle. Pull the shell away from the mirror housing.

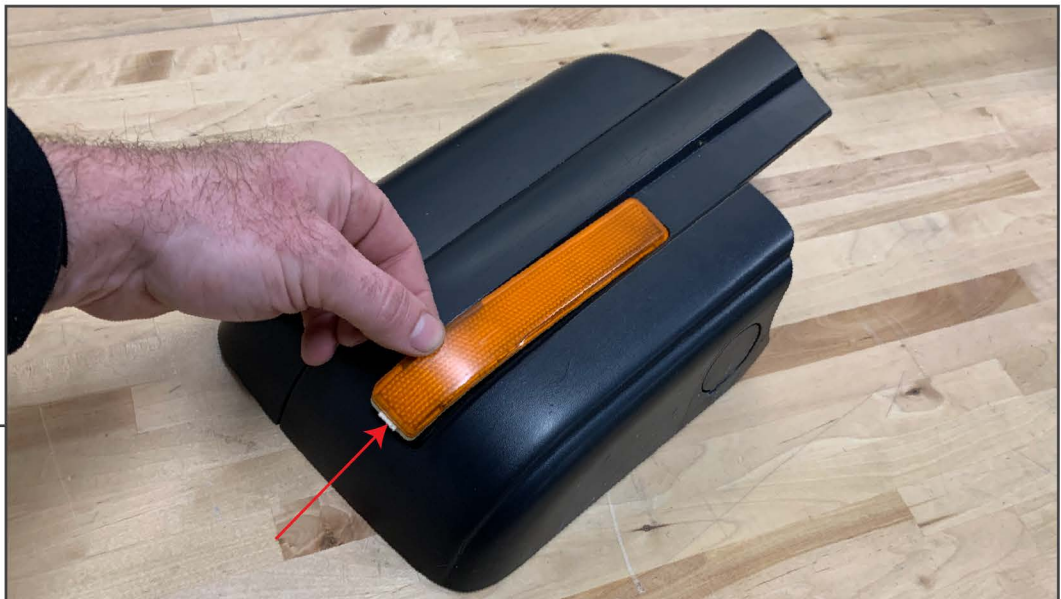


## STEP 4

Remove the factory orange reflector from the outer mirror shell. Pry on the outer edge to unclip it from the housing.




## STEP 5

Pass the lights wiring through the mirror shell and clip the light into the mirror shell.

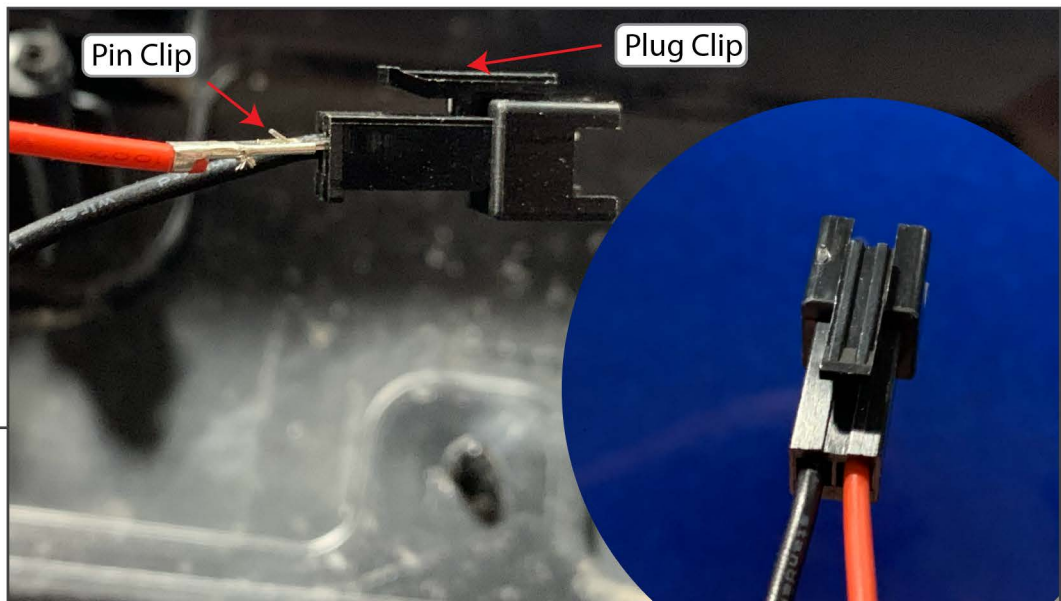


## STEP 6

Insert the wiring pins coming off the light into the supplied plug. \*\*Note the orientation of the pin clip to the plug as well as the location red wire in the plug. If the wires are not in the correct orientation the light will not work.

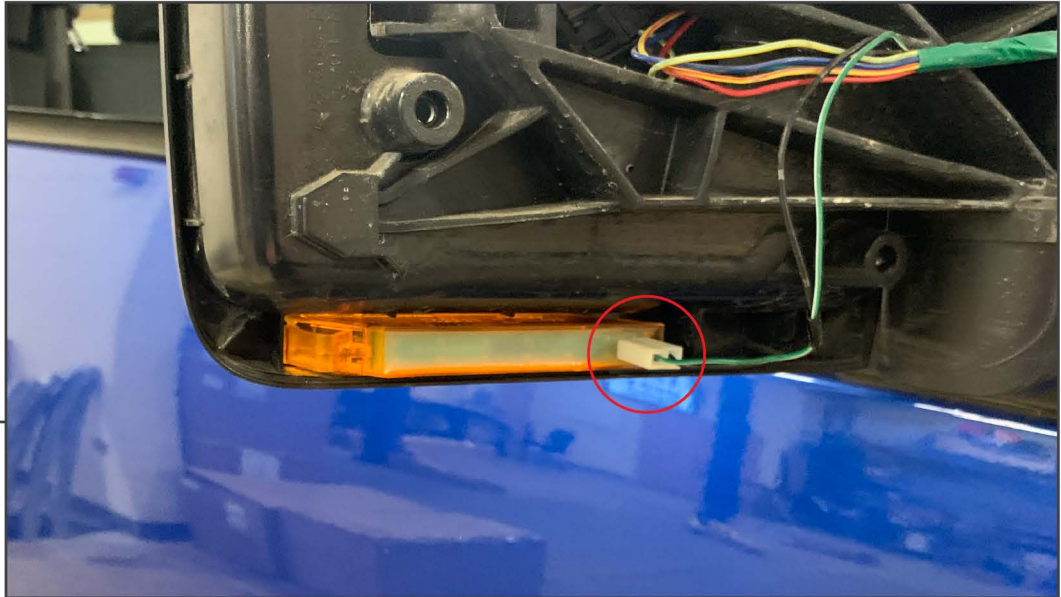

**STEP 7**

Remove the factory wiring harness from the light.

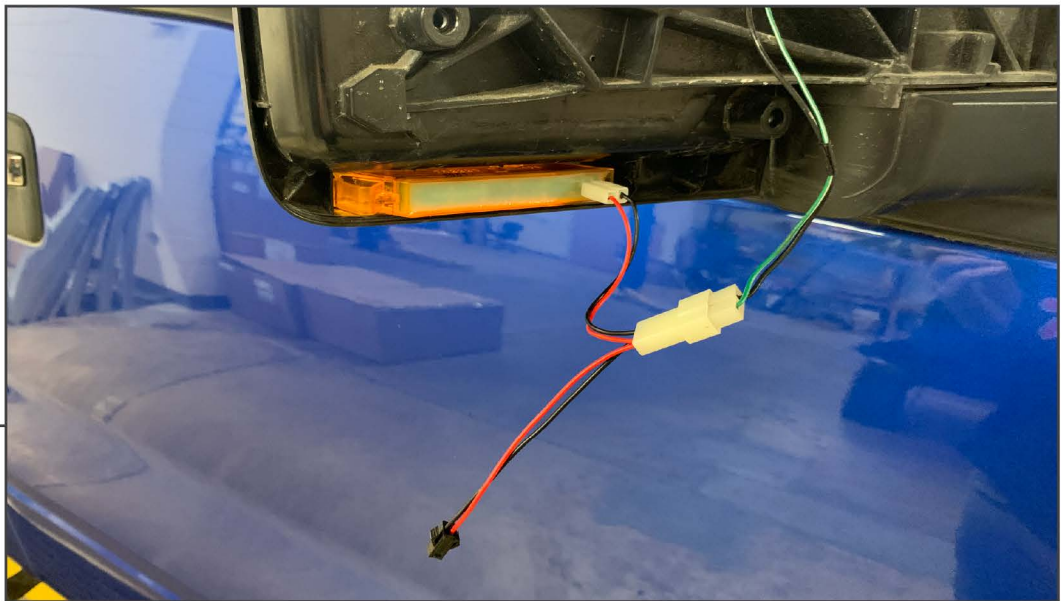

**STEP 8**

Install the supplied adapter harness. Plug the assembled plug from step 6 into the adapter harness.



---

## STEP 9

Test the light by turning on the respective turn signal. Once the light is confirmed working, follow steps 1-3 in reverse order to complete the install.