

Wire Mesh Grille Instruction

FORD 2009-2014 F-150 Lower.


Hardware:

2-- bolts 2-- nuts 4--washers

Tools Required: Socket Set / Adjustable Wrench/ cut tooling

NOTE: Be Careful not to scratch the grills Surface.

(1) Before installation, please check new mesh grille fitment for your vehicle model. Open the vehicles hood to gain access to the backside of the bumper opening.

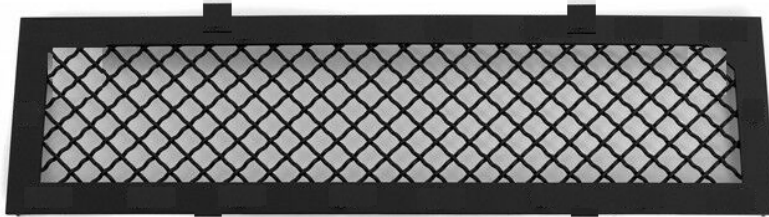

(2) Remove the mesh grille from its protective packaging

(3) The angled tabs without mounting holes will need to be at the bottom of the mesh grille. Now Slide the angled tabs behind the lower lip on the bumper opening and rock the mesh grille into place.

(4) Attach the upper mounting tabs on the mesh grille to the factory mounting locations using the nuts, bolts and flat washers.

(5) Make sure the grille is centered to your liking and secure all hardware

(6) Re-install grille bumper, installation complete now.



These instructions are for reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend a professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!