

INSTALLATION INSTRUCTIONS

KICKER

9370, 9390, 9516, 9519, 9520, 9530, 9546, 9552, 9558, 9560 and 9590

PS / B / C

Parts List:

- a) 1- Kicker Driver side
- b) 1- Kicker Passenger side
- c) 2- Mounting plate
- (1) **Hardware kit includes:**
- d) 8- Plastic flat washer
- e) 2- Round plastic gasket
- f) 2- Square plastic gasket
- g) 4- Plastic tube cover

- 8- 3/8 x 1 1/2" Flat washer
- 8- 3/8" Nut
- 8- 3/8 x 1 1/2" Carriage bolt
- 2- 3/8 x 1 1/2" Flat head bolt
- 2- 3/8x5 1/2x2" Hex bolt
- 2- 3/8" Flat washer
- 2- White plastic washer

Not Includes:

B type main bar


Required tools:

9/16" Wrench Hand drill Pencil
7/32" Allen wrench 7/16" Bit


Instructions:

Aprox. Installation time: 50 min.

1. Read carefully and understand instructions before beginning installation. If you can not find any listed part, please stop installation and call to your distributor to get the missing parts, **on the last page mentions Bed Bar B, these accessories are sold separately.**

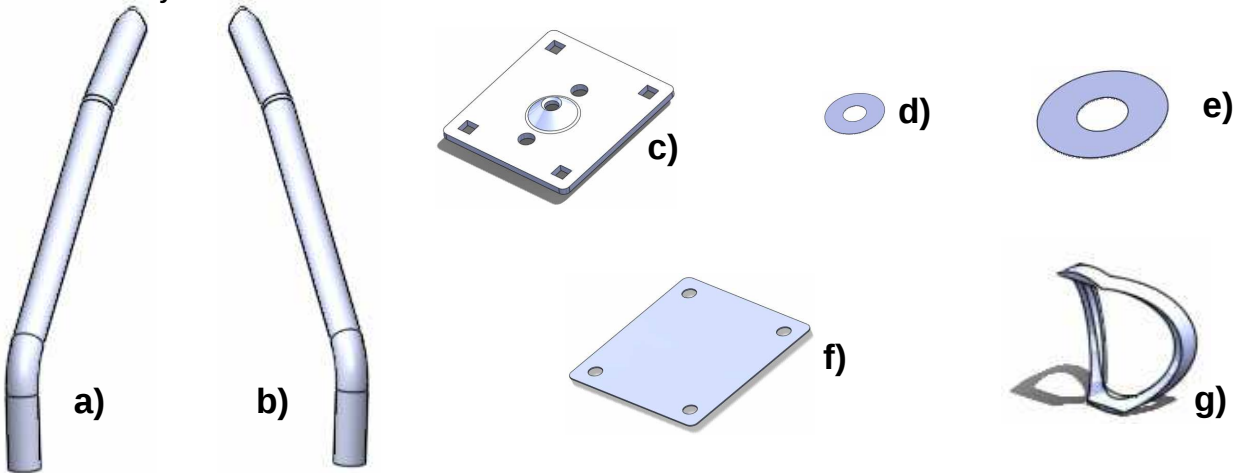

Img. 1

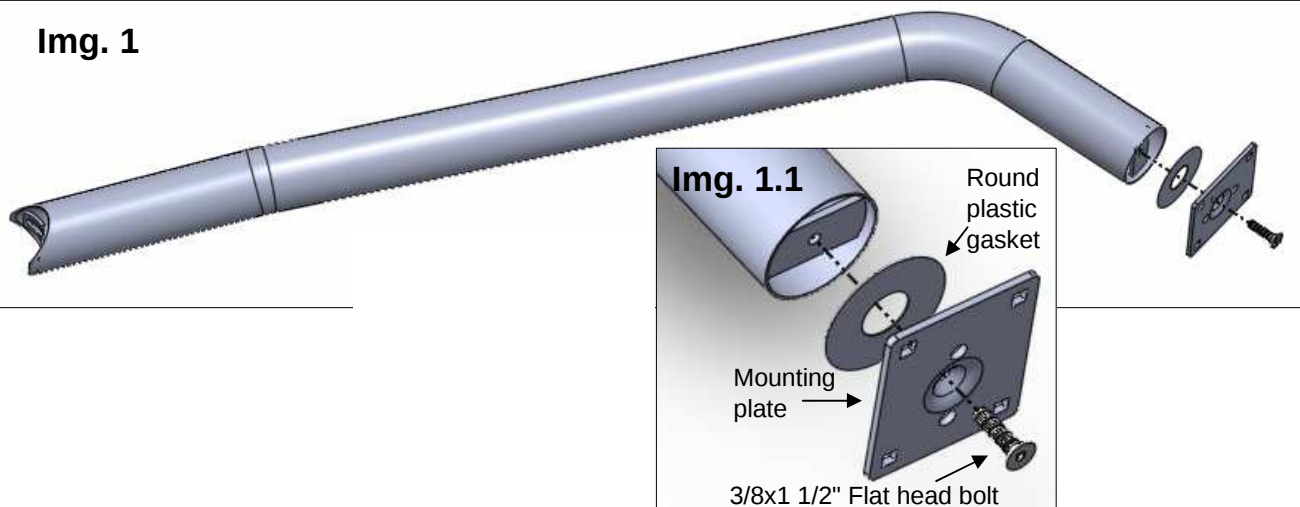

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTALLATION INSTRUCTIONS

KICKER

9370, 9390, 9516, 9519, 9520, 9530, 9546, 9552, 9558, 9560 and 9590


PS / B / C

3. Place the kicker to the main bar, mark with a pencil the 4 points to be drilled. See Image 2 and 2.1


4. Remove the part to drill with a 7/16" bit. See Image 3

5. Place again the Kicker and attach to the main bar and the floor of the box. See image 4 y 4.1


Img. 2

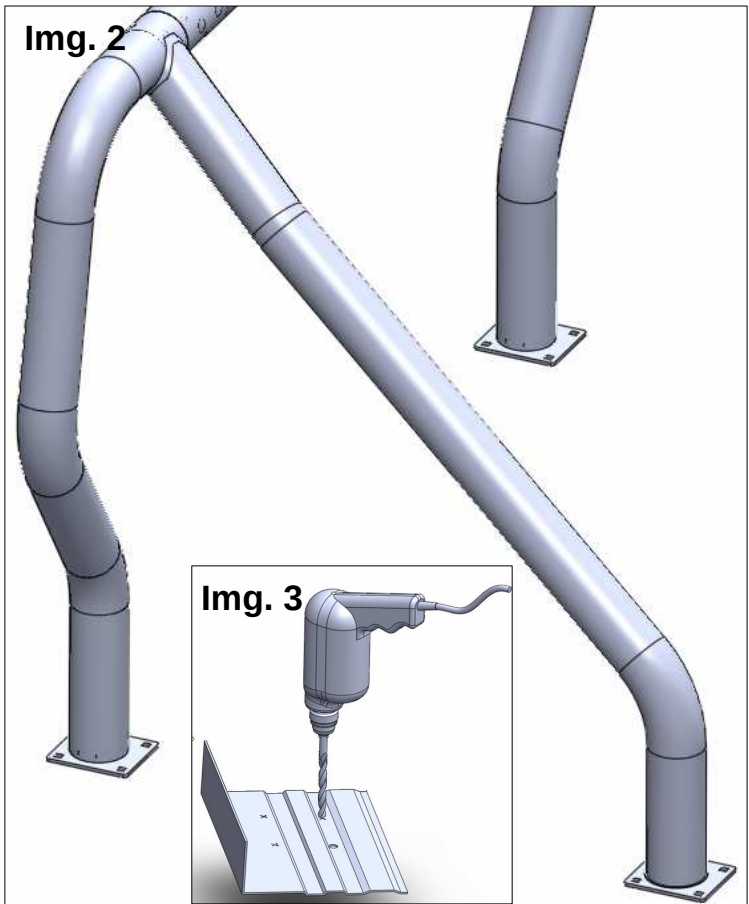


Img. 2.1

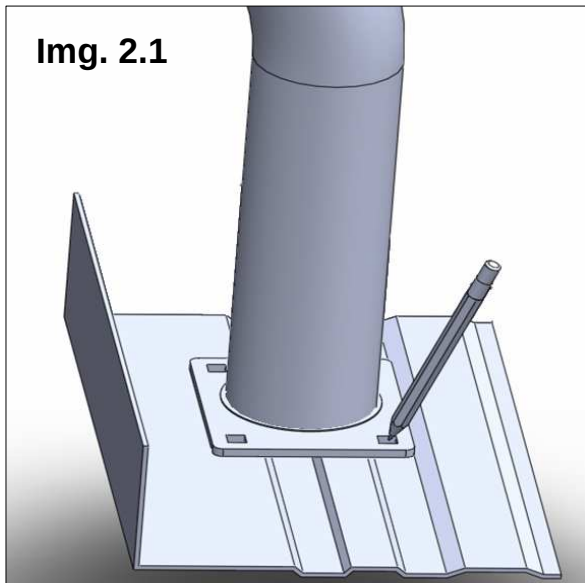


Img. 3

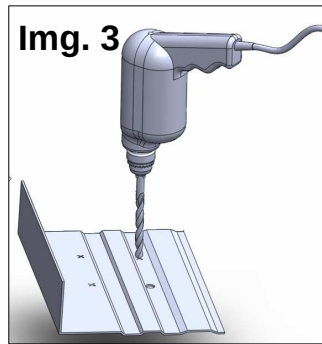

Img. 4

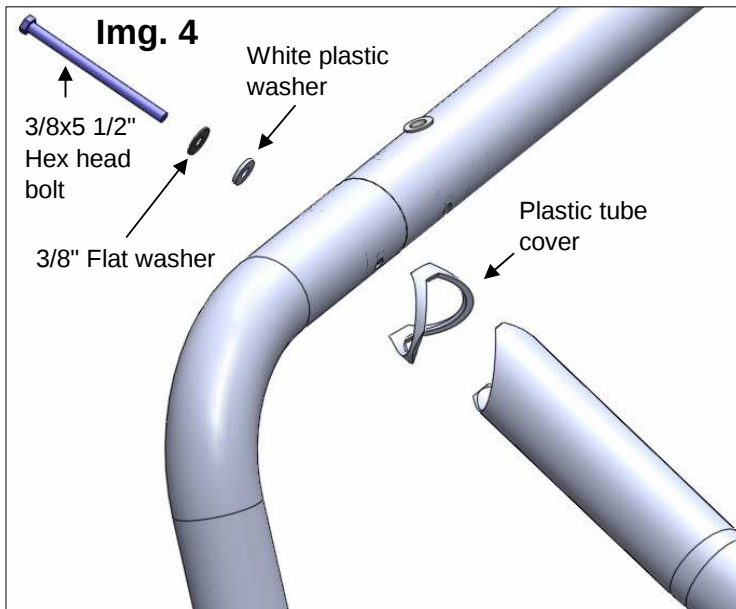

Img. 4.1

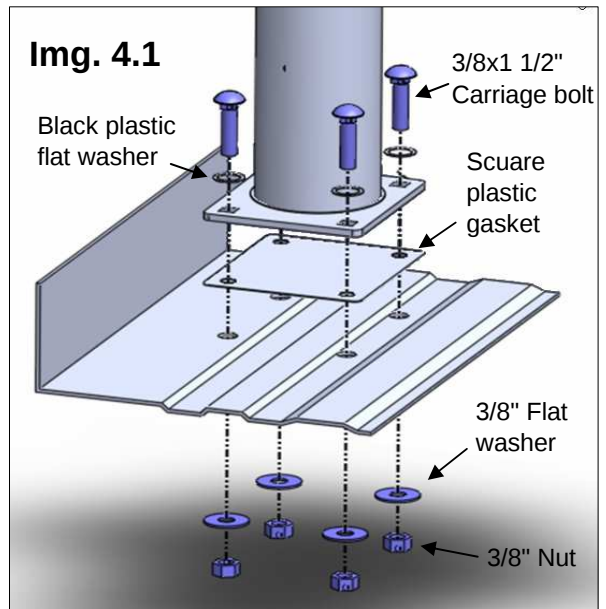

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:


INSTALLATION INSTRUCTIONS

KICKER

9370, 9390, 9516, 9519, 9520, 9530, 9546, 9552, 9558, 9560 and 9590


PS / B / C

Img. 5

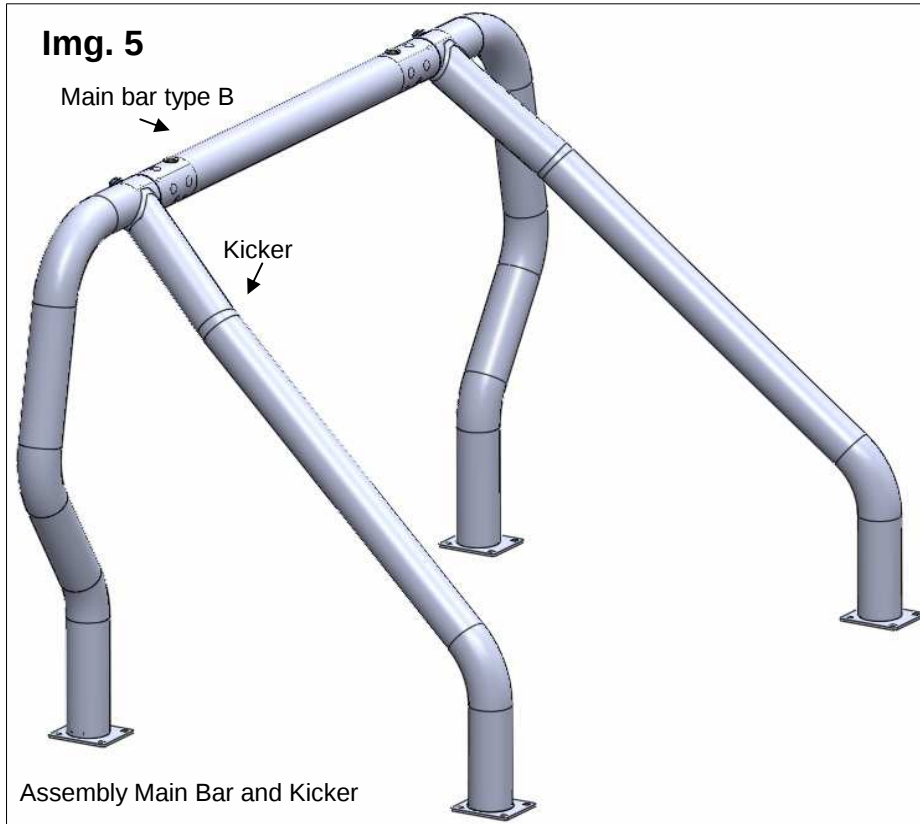


Acquiring the necessary parts, you can make the following settings. Images 6, 6.1 and 6.2


Img. 6

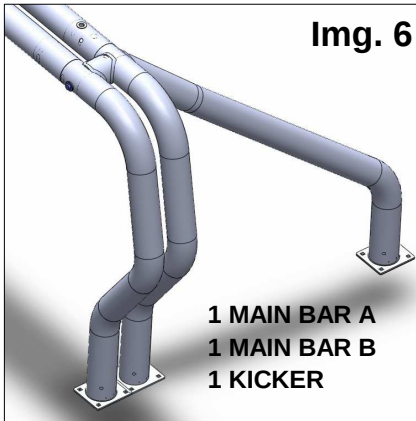

Img. 6.1

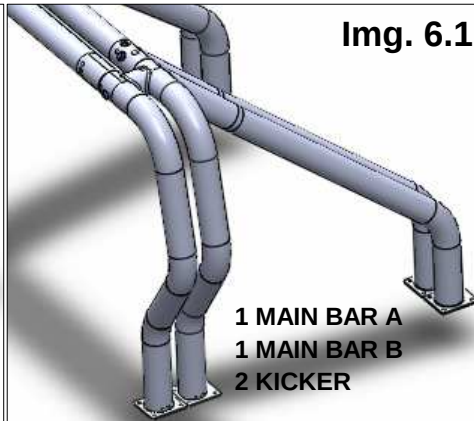

Img. 6.2

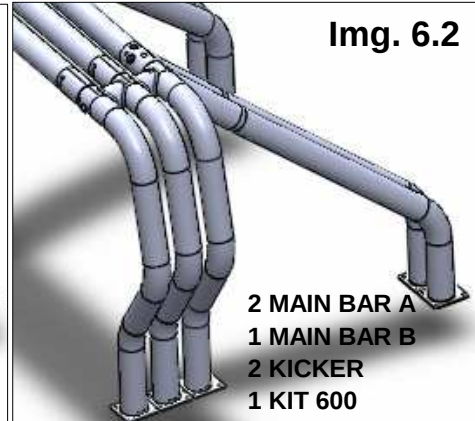

8. Align Bed Bar, and then tighten all bolts, from bottom to up.
9. Periodically it may need a bolts re-tighten.
10. Fill the warranty card and place it inside your vehicle's glove box.

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTRUCCIONES DE INSTALACIÓN

BED BAR TIPO A

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS / B / C

Lista de Partes:

a) 1- Tubo lateral izquierdo

b) 1- Tubo lateral derecho

c) 1- Tubo central

d) 2- Placas de montaje

e) 2- Espaciadores de tubo

1- Kit de tornillos que incluye:

f) 8- Rondana pequeña de plástico

g) 2- Empaque redondo de plástico

h) 2- Empaque rectangular de plástico

i) 4- Cubre filos de plástico

4- Tornillos C/Coche 3/8X 5"

8- Rondana Plana. 3/8" X 1 1/2"

8- Tuerca de 3/8"

8- Tornillo cab. coche de 3/8X1 1/2"

2- Tornillo cab. plana 3/8"X1 1/2"

2- Tornillo cab. hex. 3/8x5 1/2x2"

2- Rondana plana de. 3/8"

2- Rondana blanca de plástico

No incluye:

Bed Bar. tipo B

Kicker

Herramienta Requerida:


Llave o dado de 9/16" Taladro Lápiz

Llave allen de 7/32" Broca de 7/16"


Instrucciones:

Tiempo aprox. de instalación: 50 min

1. Lea y comprenda perfectamente las instrucciones antes de comenzar la instalación. Si alguna de las partes listadas no se encuentra, no proceda con la instalación y llame a su distribuidor inmediatamente para obtener los componentes necesarios, **en la ultima pagina menciona al Bed Bar tipo B y Al Kicker, estos accesorios se**

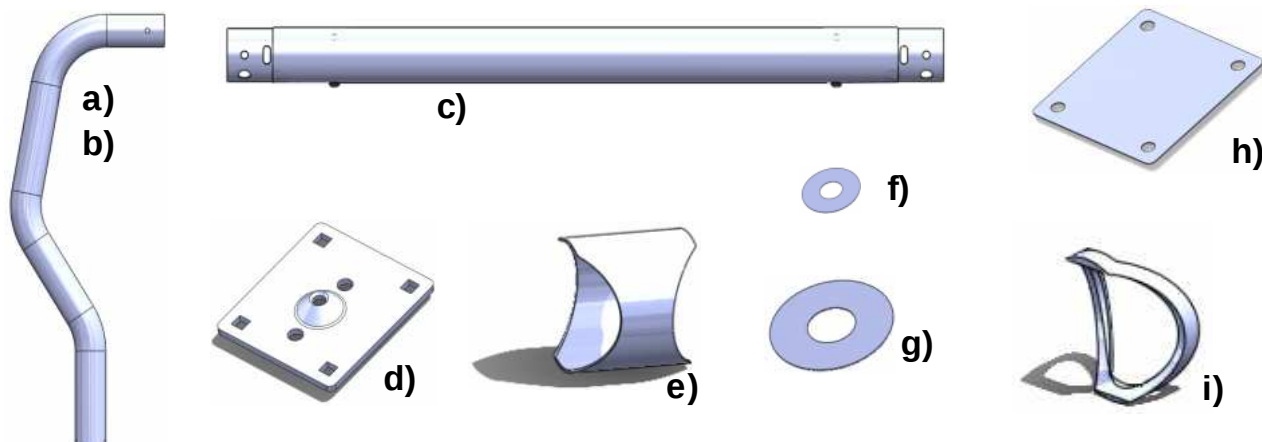


Img. 1

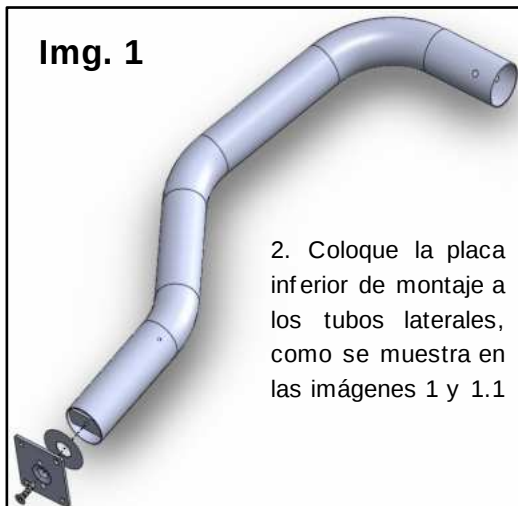

2. Coloque la placa inferior de montaje a los tubos laterales, como se muestra en las imágenes 1 y 1.1

Img. 1.1

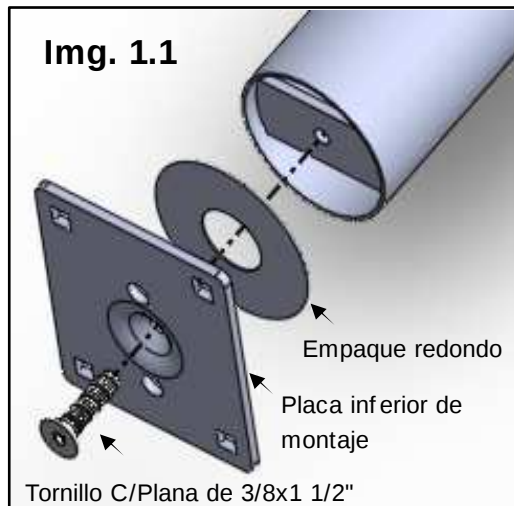

Empaque redondo
Placa inferior de montaje
Tornillo C/Plana de 3/8x1 1/2"

Recomendaciones de cuidado y mantenimiento:

Diseño:

Calidad:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.


INSTRUCCIONES DE INSTALACIÓN

BED BAR TIPO A


90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS / B / C


Img. 2

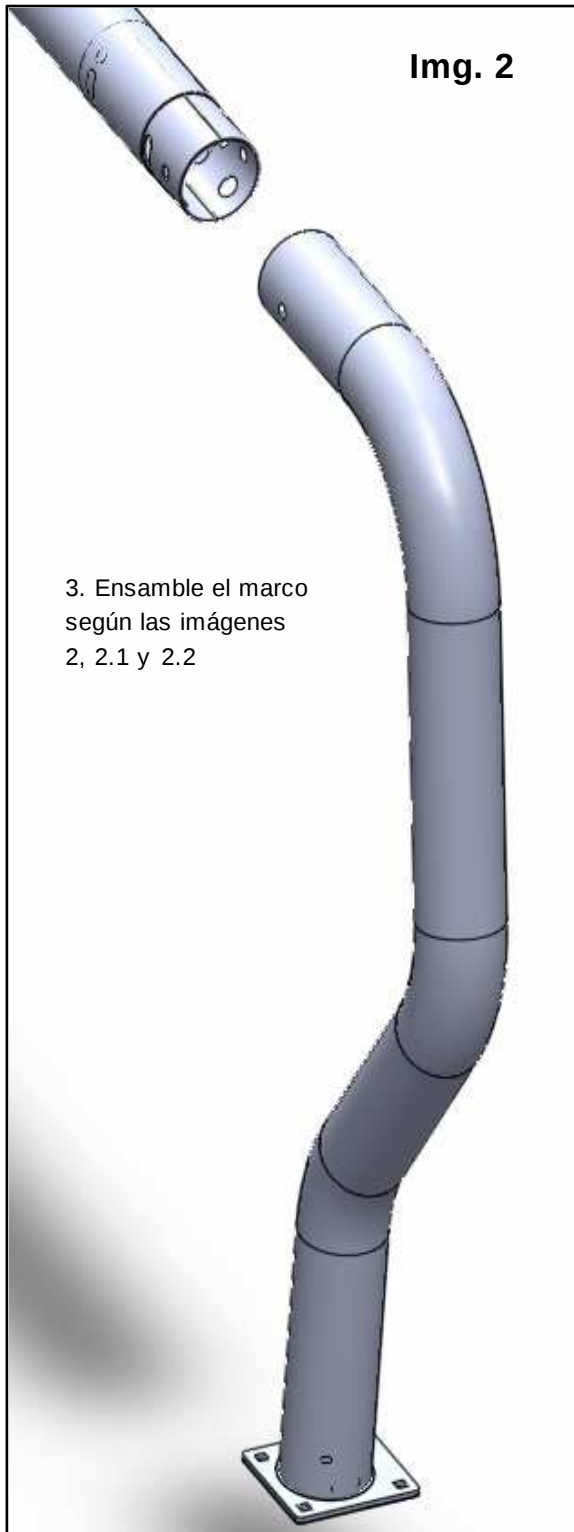

Img. 2.1

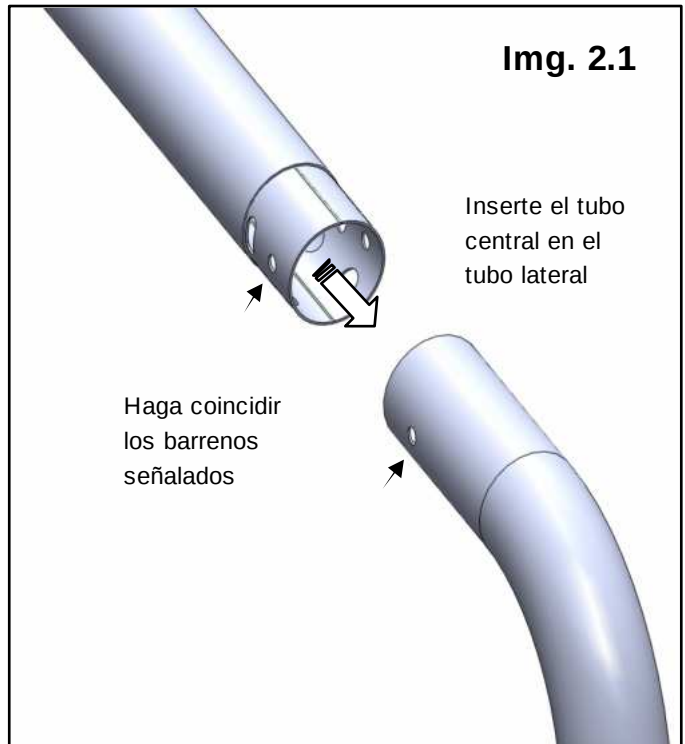

Img. 2.2

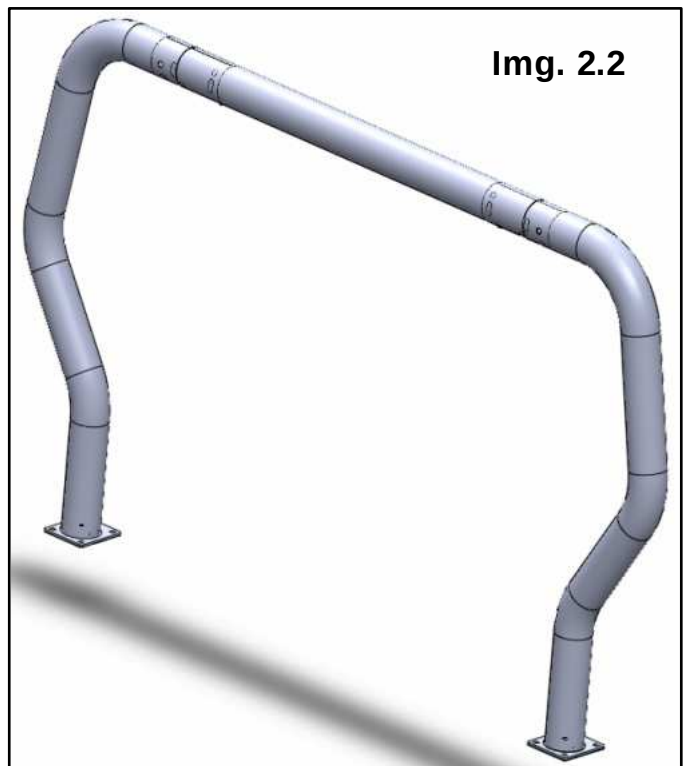

Recomendaciones de cuidado y mantenimiento:

Diseño:

Calidad:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.

INSTRUCCIONES DE INSTALACIÓN

BED BAR TIPO A

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001


PS / B / C

3. Coloque el marco sobre el piso de la caja, y marque con un lápiz los puntos donde se harán los barrenos de 7/16" para fijar el marco, tanto del lado del conductor como el lado del pasajero. Imagen 3


4. Retire el marco y haga los barrenos. Imagen 4

5. Coloque nuevamente el marco y fíjelo al piso de la caja. Imagen 5



Img. 3

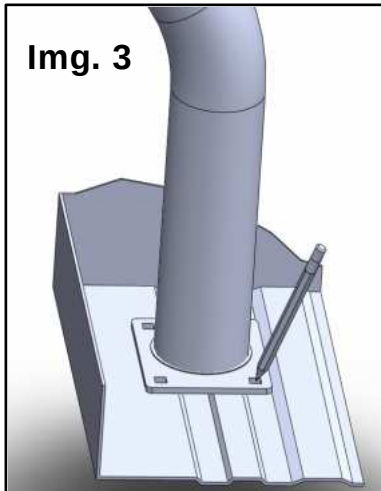

Img. 4

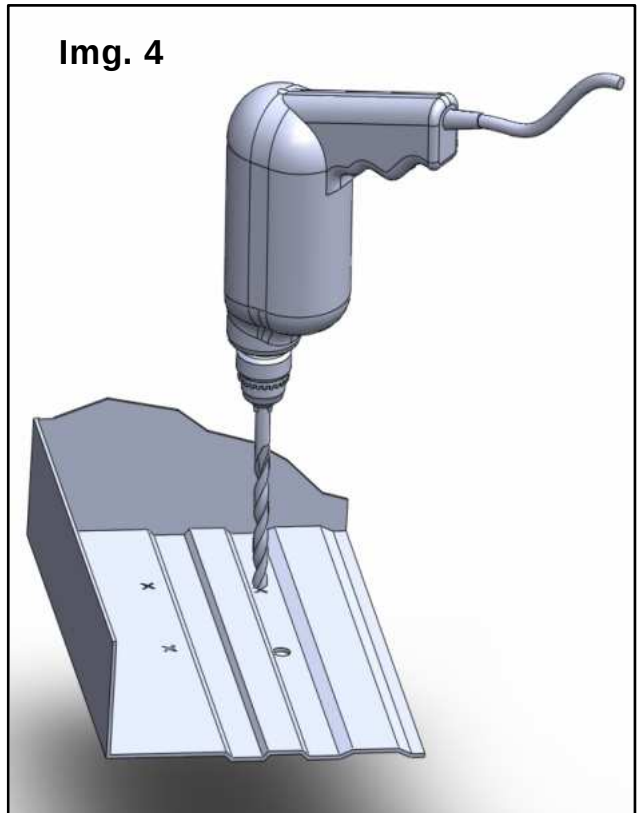

Img. 5

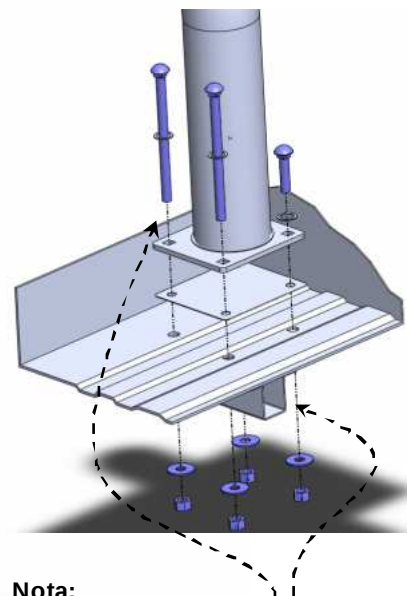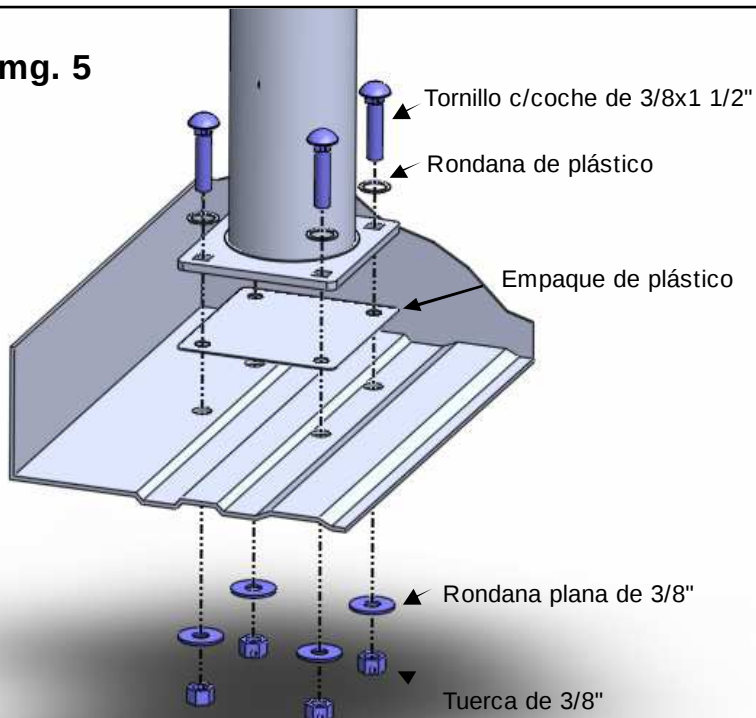

Nota:

En caso de perforar algún riel de refuerzo de la caja, utilice los tornillos c/coche de 3/8x5"

Recomendaciones de cuidado y mantenimiento:

Diseño:

Calidad:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.

INSTRUCCIONES DE INSTALACIÓN


BED BAR TIPO A

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS / B / C

6. Guíese con el instructivo que contiene el Bed Bar tipo B para ensamblarlo, ya que lo tenga armado continúe con el paso 7.

7. La imagen 6 y 6.1 le muestra como ensamblar su Bed Bar tipo A con un tipo B

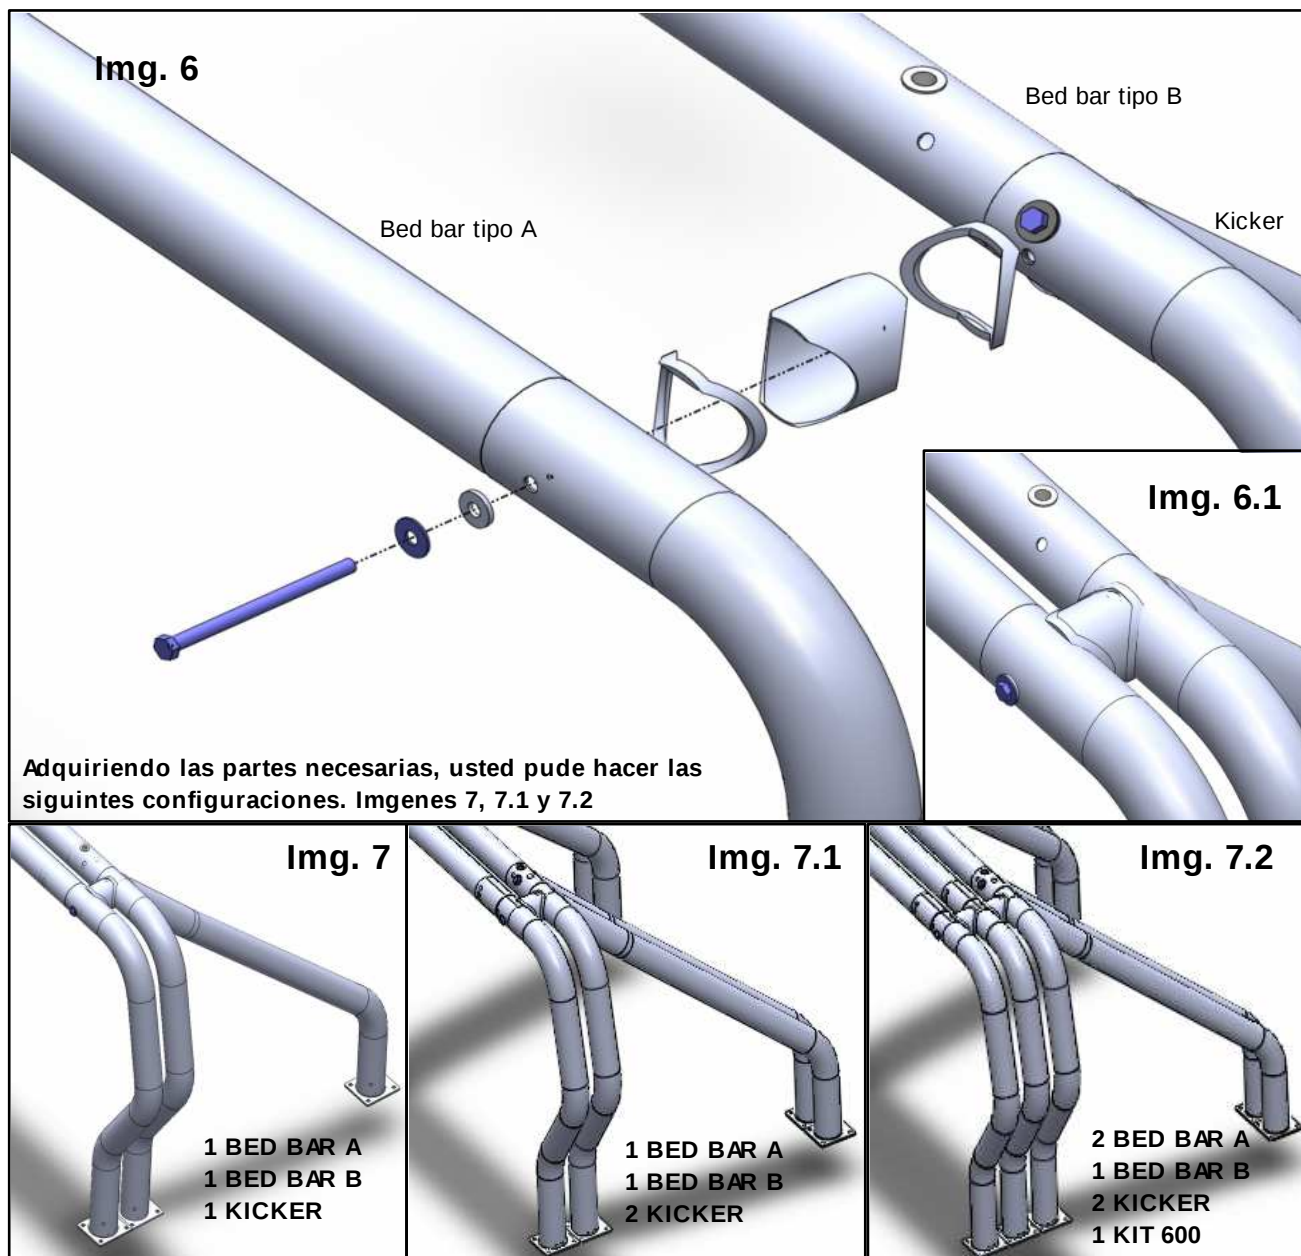

8. Haga cualquier ajuste final a la alineación del Bed Bar y apriete toda la tornillería, comenzando por los brackets.

9. Reapriete la tornillería periódicamente.

10. Llene la tarjeta de garantía y colóquela en su vehículo.

Recomendaciones de cuidado y mantenimiento:

Diseño:

Calidad:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.

INSTALLATION INSTRUCTIONS

A type MAIN BAR

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS / B / C

Parts List:

- | | |
|--------------------------------|--------------------------------|
| a) 1- LEG Driver side | i) 4- Plastic cover |
| b) 1- LEG Passenger side | 4- 3/8 x 5" Carriage bolt |
| c) 1- Cross Bar | 8- 3/8 x 1 1/2" Flat washer |
| d) 2- Mounting plate | 8- 3/8" Nut |
| e) 2- Tube spacer | 8- 3/8 x 1 1/2" Carriage bolt |
| (1) Hardware kit includes: | 2- 3/8 x 1 1/2" Flat head bolt |
| f) 8- Plastic flat washer | 2- 3/8x5 1/2x2" Hex head bolt |
| g) 2- Round plastic gasket | 2- 3/8" Flat washer |
| h) 2- Rectangle plastic gasket | 2- White plastic washer |

Not Includes:

B type Main bar
Kicker


Required tools:

9/16" Wrench	Hand drill	Pencil
7/32" Allen wrench	7/16" Bit	


Instructions:

Aprox. Installation time: 50 min.

1. Read carefully and understand instructions before beginning installation. If you can not find any listed part, please stop installation and call to your distributor to get the missing parts, **on the last page mentions Main Bar B and Kicker, these accessories are sold separately.**

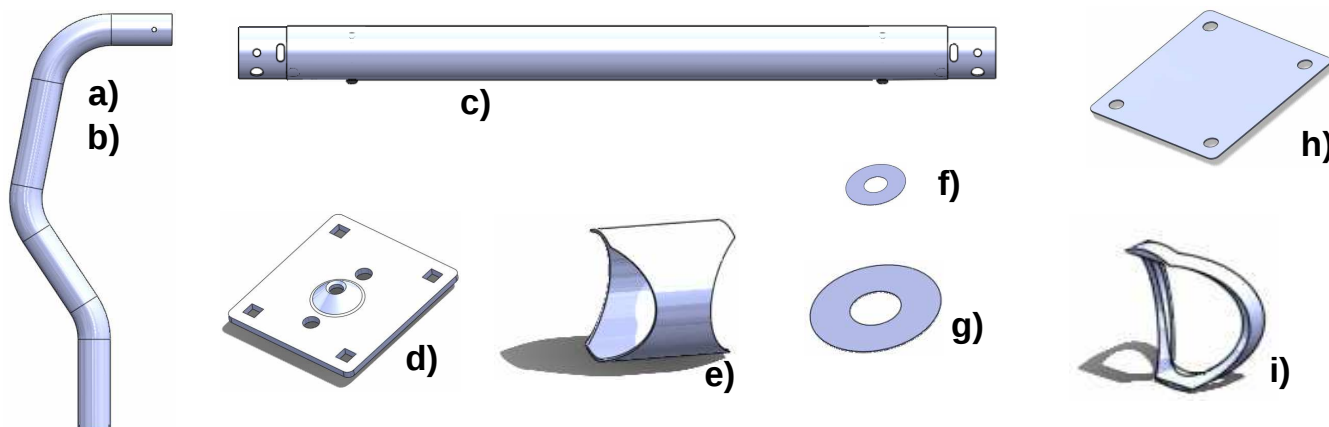


Pict. 1

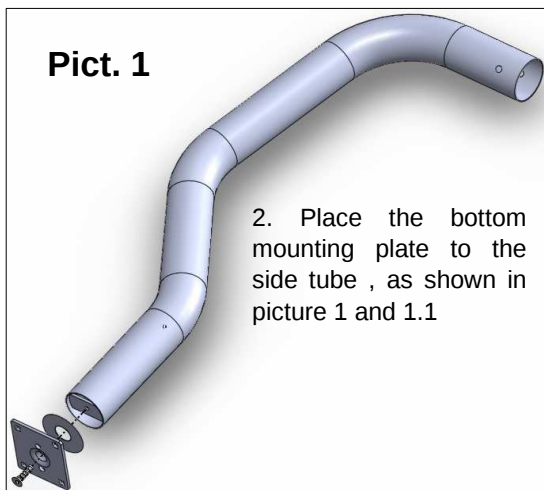

2. Place the bottom mounting plate to the side tube, as shown in picture 1 and 1.1

Pict. 1.1

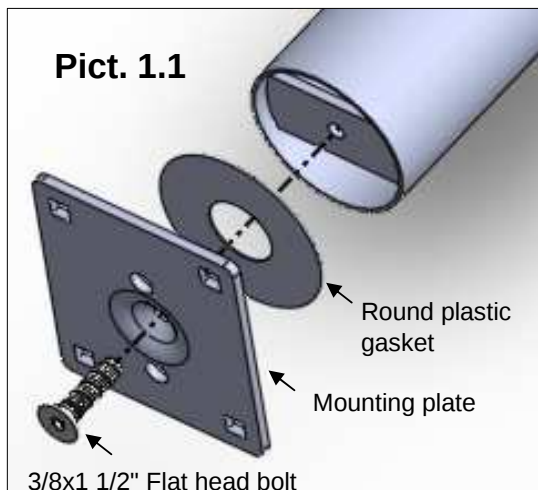

3/8x1 1/2" Flat head bolt

Round plastic gasket

Mounting plate

Cleaning and care instructions:

Design:

Quality:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.


INSTALLATION INSTRUCTIONS

A type MAIN BAR

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001


PS / B / C

Pict. 2

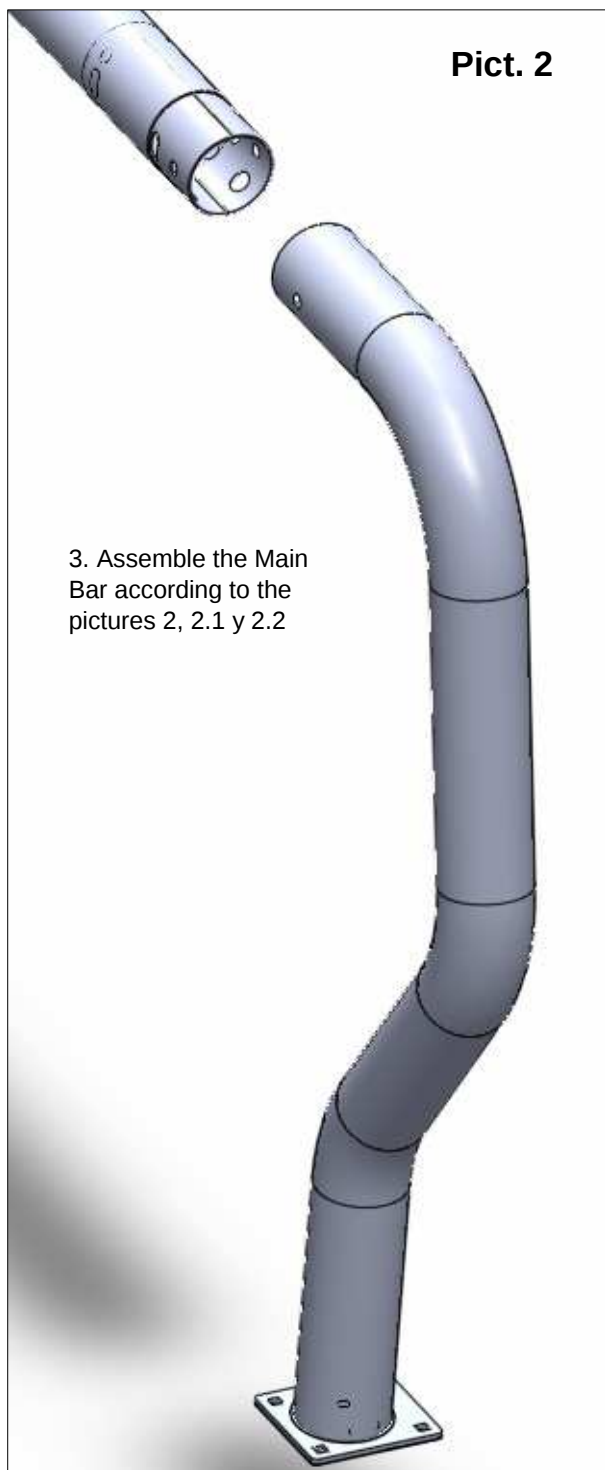

3. Assemble the Main Bar according to the pictures 2, 2.1 y 2.2


Pict. 2.1

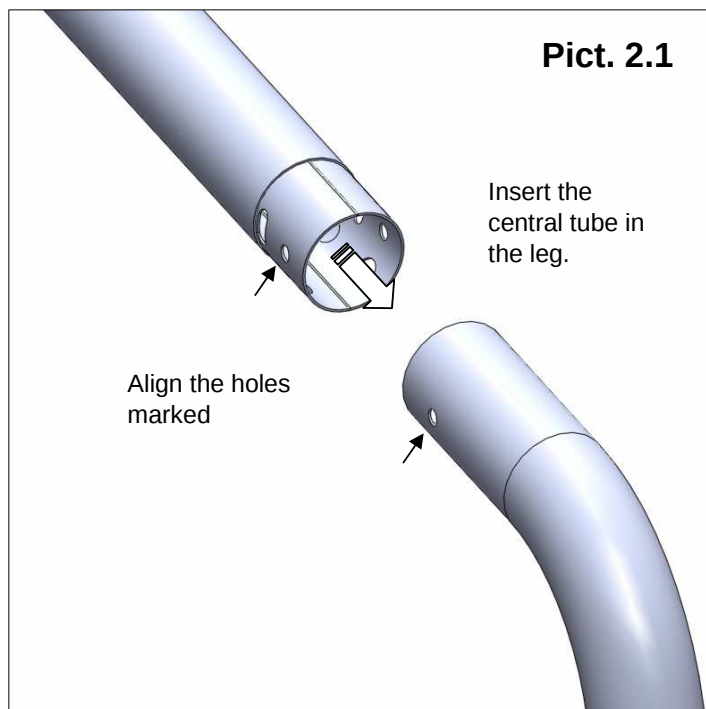

Insert the central tube in the leg.

Align the holes marked

Pict. 2.2

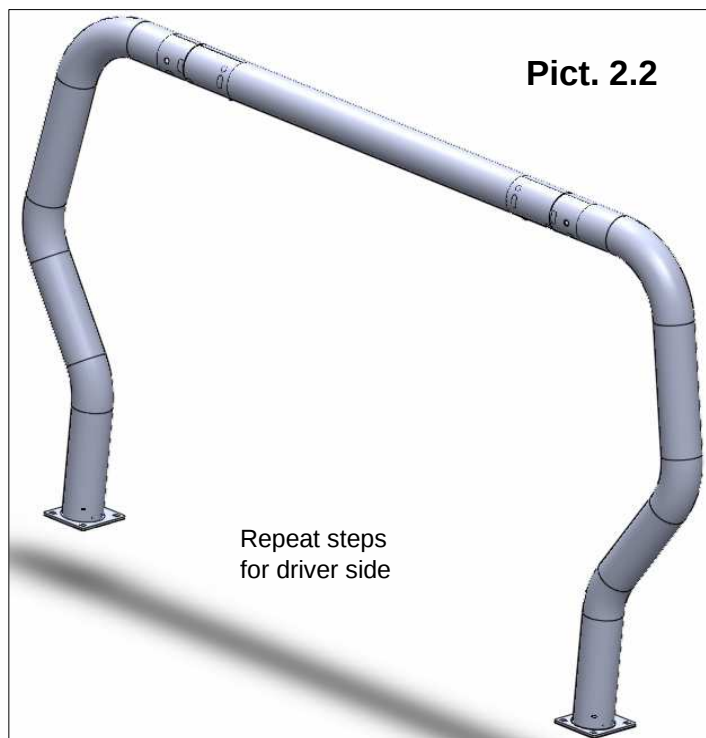

Repeat steps for driver side

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTALLATION INSTRUCTIONS

A type MAIN BAR

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001


PS / B / C

3. Place the frame on the floor of the box, with a pencil mark the locations. to set main bar on both sides of the truck pict 3


4. Remove the Main bar and drill 7/16" holes pict 4

5. Relocate the Main bar, and attach it to the floor of the box. Pict 5



Pict. 3

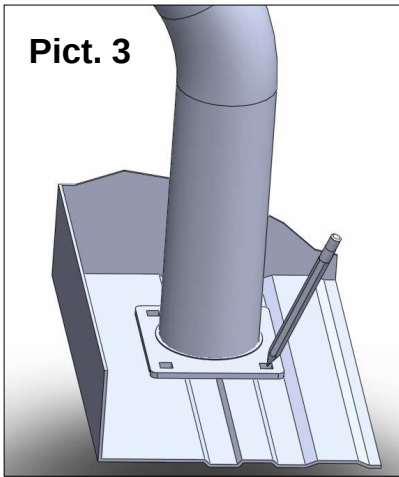

Pict. 4

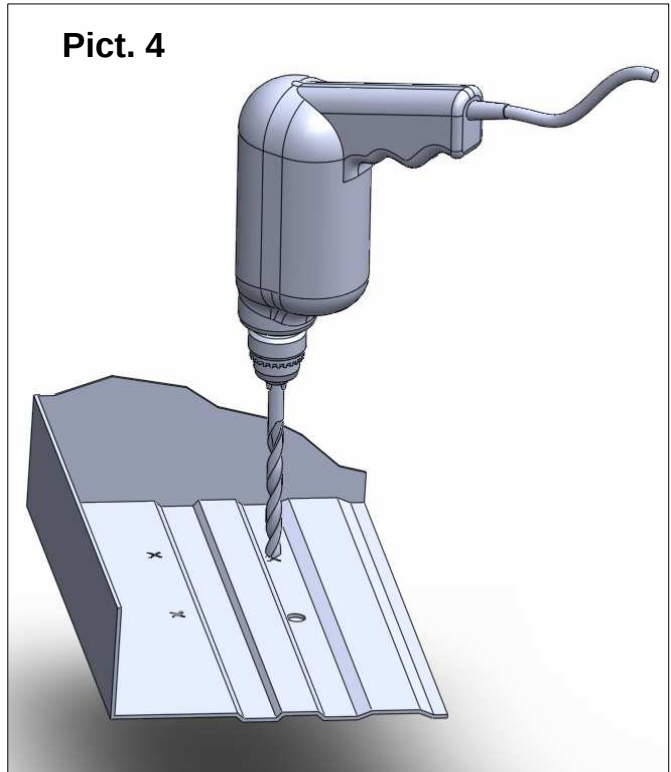

Pict. 5

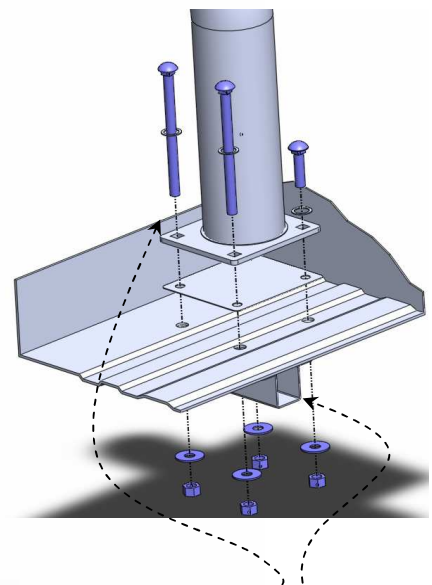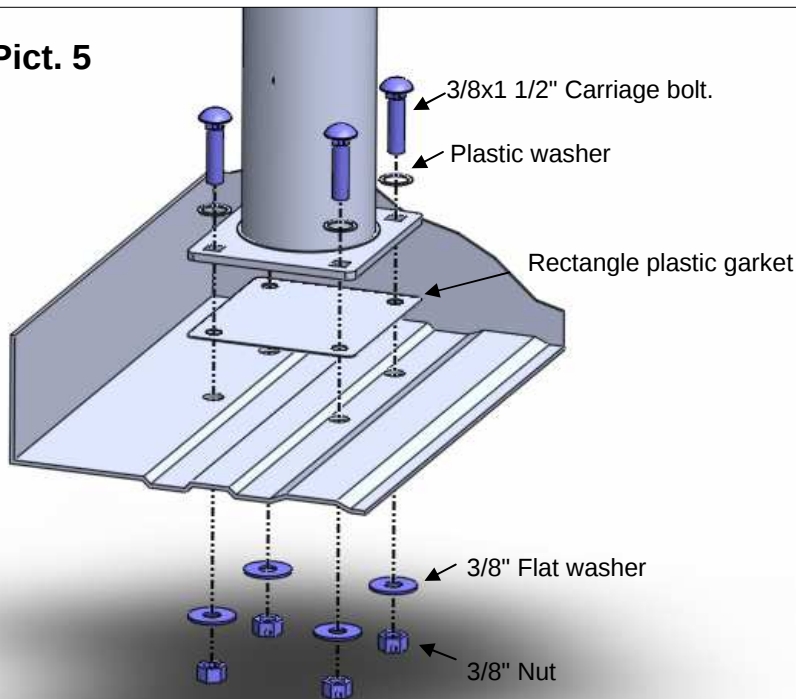

If case of drilling a rail reinforcement of the box, use the 3/8x5" carriage bolts.

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTALLATION INSTRUCTIONS





A type MAIN BAR

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS / B / C

6. Follow the instructions contained in the B Bar B to assemble, and to keep the armed continue with step 7.

7. 6 and 6.1 The image shows you how to assemble your Bed Bar with a Type A Type B

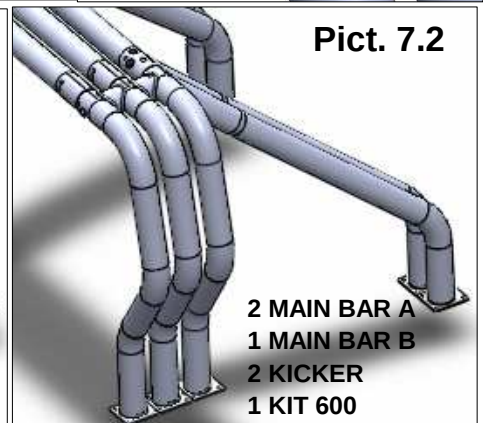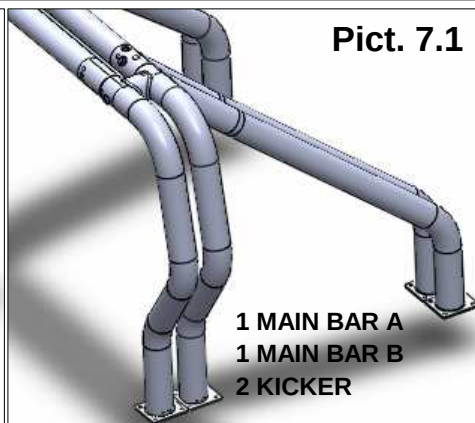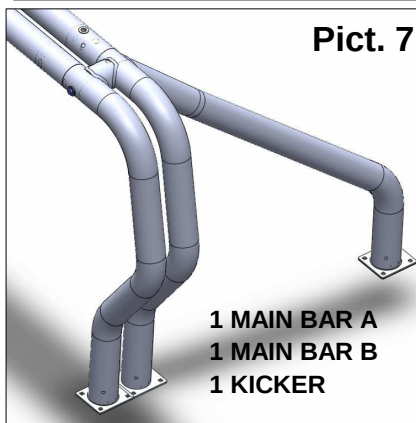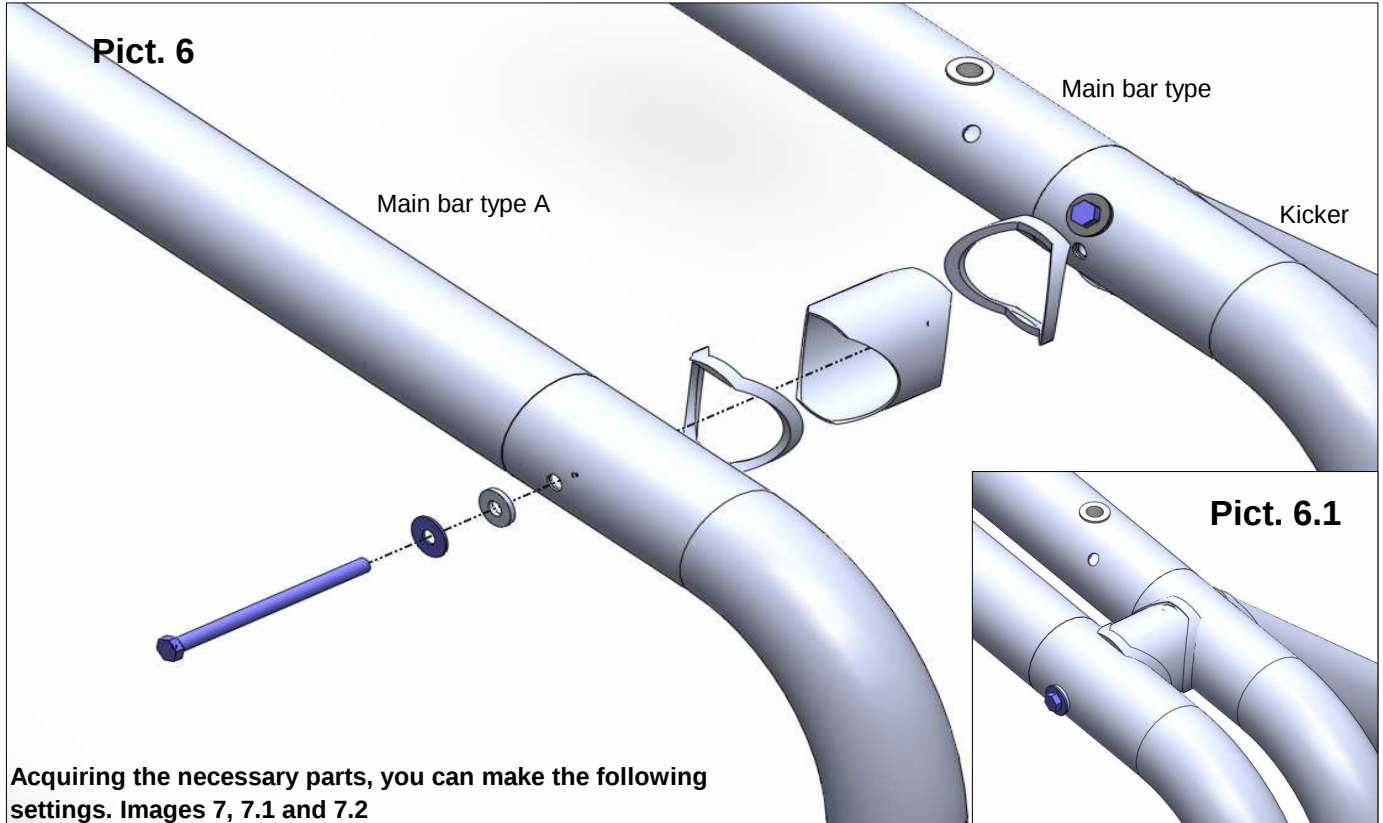

8. Align Bed Bar, and then tighten all bolts, from bottom to up.

9. Periodically it may need a bolts re-tighten.

10. Fill out the warranty card and place it inside your vehicle's glove box.

Cleaning and care instructions:

Design:

Quality:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.