



COLD AIR INTAKE

(2015-2020 F-150; 5.0L ENGINE)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Intake Tube
- (1) Air Filter
- (1) Heat Shield
- (2) Intake Couplers
- (4) Hose Clamps
- (1) Filter Adapter
- (4) M4 x 12mm Bolts
- (4) M4 Nuts
- (1) Large Weatherstrip
- (1) Small Weatherstrip
- (1) Allen Key

TOOLS REQUIRED


7mm, 10mm, 13mm Sockets
Ratchet

SKU # T555890

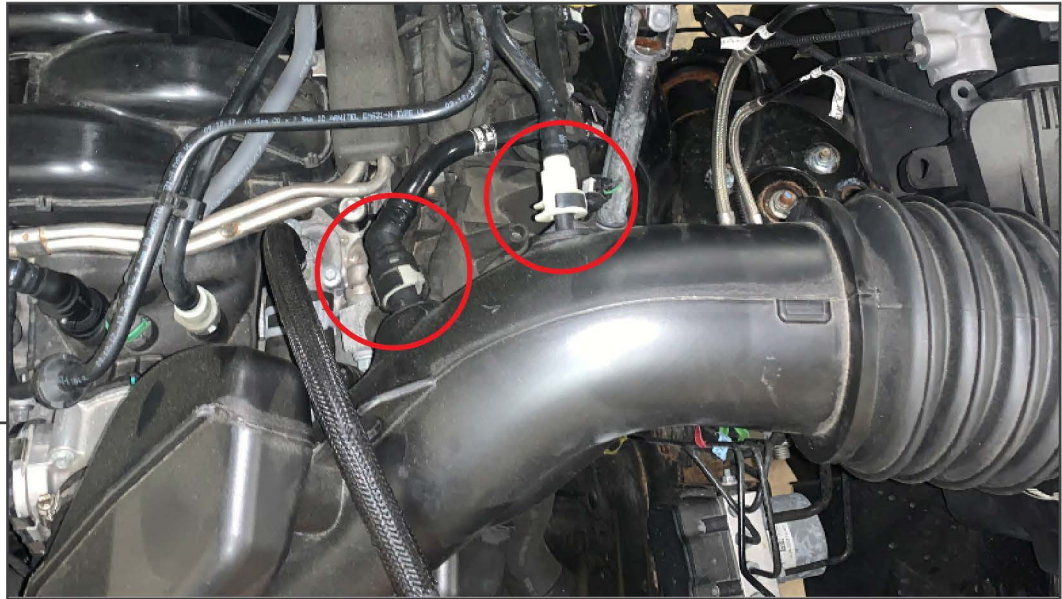

STEP 1

Lift the white tab on the PCV hose, then remove the PCV hose from the intake tube. Press in the gray tab on the emissions hose, then remove the emissions hose from the intake tube.

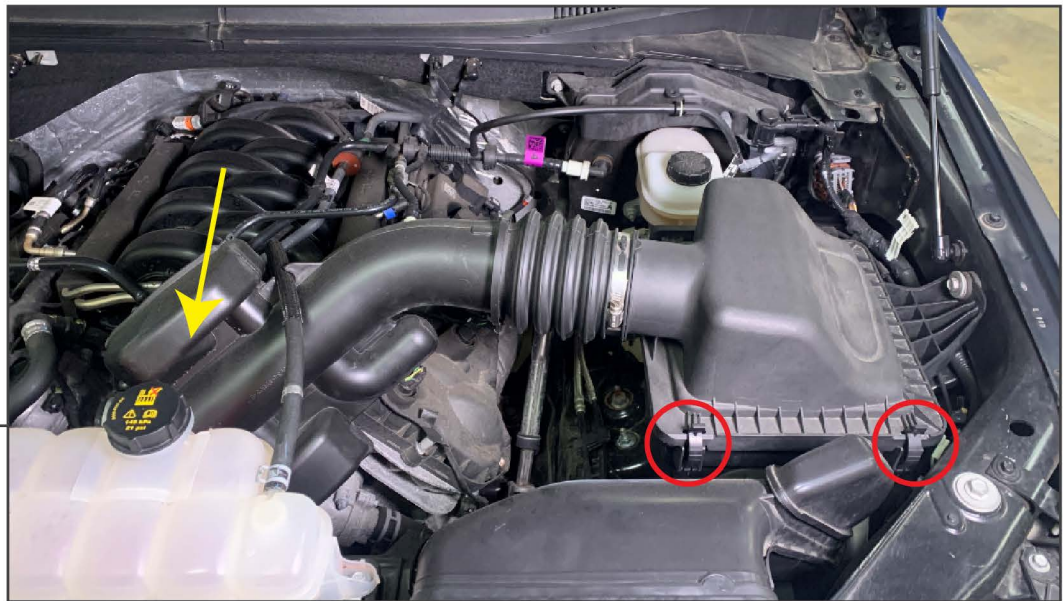


STEP 2

Un-clip the air box lid from the air box by unlatching (2) clips. Dislodge the (1) coolant line from the intake tube. Loosen (1) hose clamp at the throttle body using a 7mm socket. Remove intake tube from the vehicle.



STEP 3

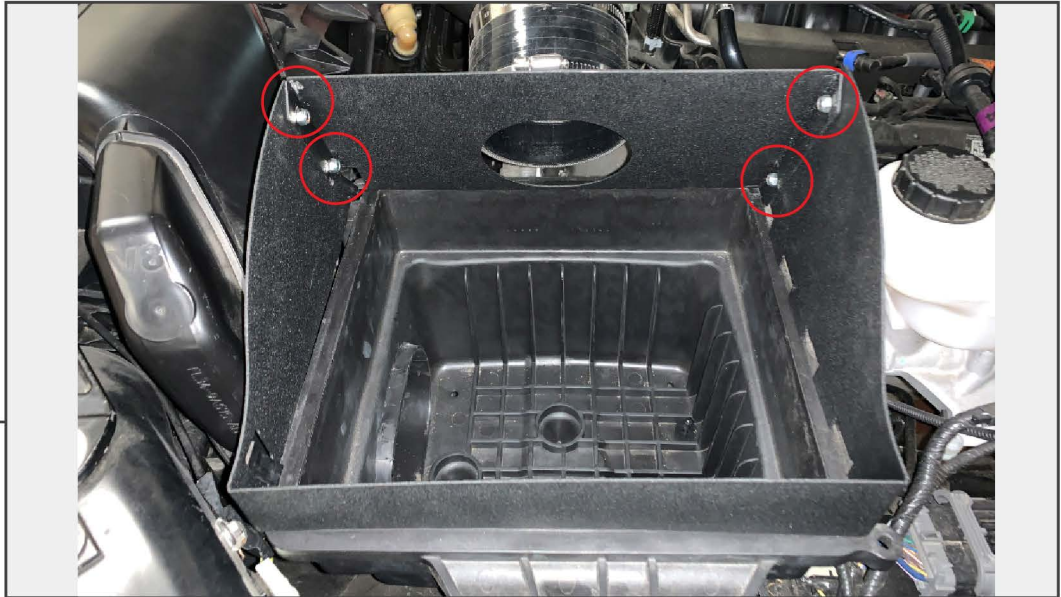

Using (4) M5x0.8 x 10mm Allen bolts, assemble the heat shield. Place the air filter and air filter adapter into the vehicle lower air box, then place the heat shield onto the vehicle lower air box. Secure the heat shield to the air box using the (2) original front clips.


STEP 4



Position the intake tube in between the heat shield and the throttle body. Using (2) couplers and (4) hose clamps, secure the intake tube to the throttle body and the air filter adapter.



STEP 5

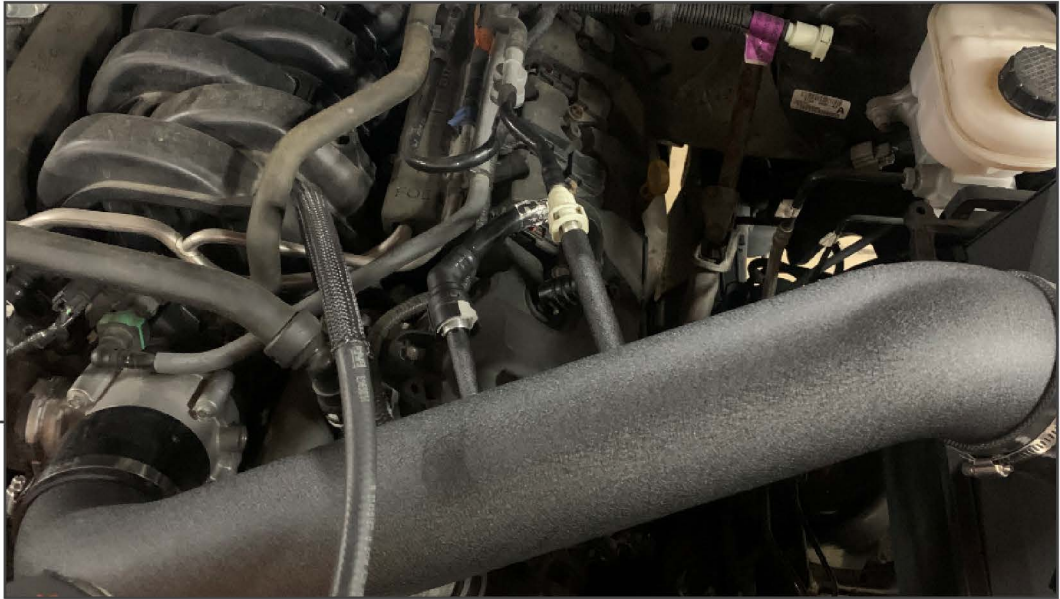

Plug the vehicle EVAP and PCV hoses into the intake tube. Ensure each line clicks into place.

STEP 6



Ensure all hose clamps are tight. Install (1) weatherstrip around the top of the heat shield.

Installation is now complete.