



LOW PROFILE HARD ROLLING TONNEAU COVER

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Tonneau Cover
- (1) LH Side Rail
- (1) RH Side Rail
- (6) Clamps with Thumb Screws
- (2) Studs with Thumb Screws
- (2) Wing Nuts
- (6) Allen Bolts
- (2) Allen Keys

TOOLS REQUIRED

- Allen Key (Provided)
- Rotary Tool
- Permanent Marker

STEP 1

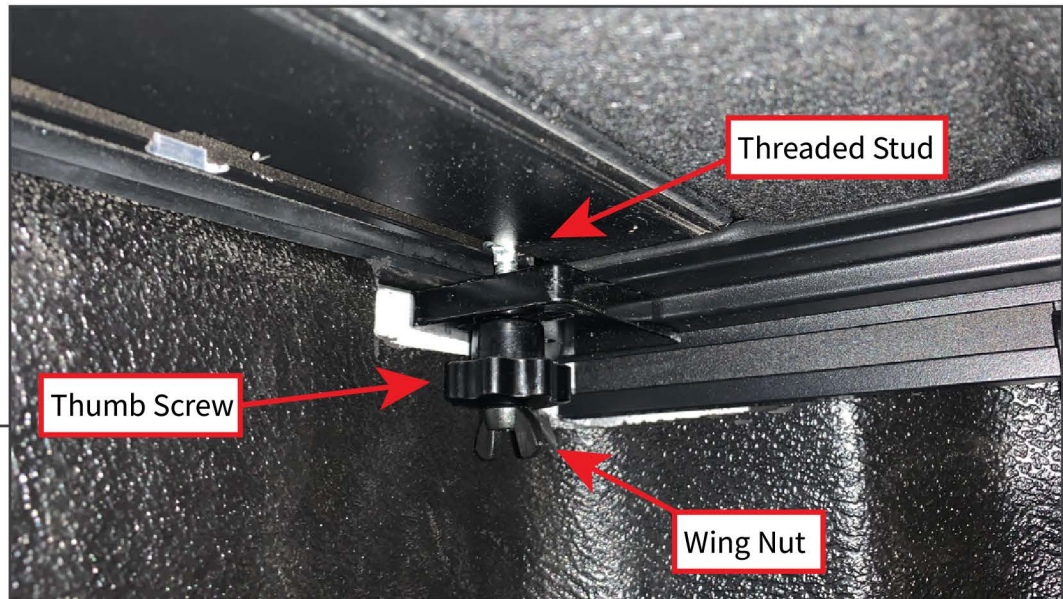
Slide (3) clamps with thumb screws into the side rail. Align the side rail to the bed side of the vehicle. While tightening the (1) Allen bolt per clamp, tighten the lower thumb screw to level the side rail to the bed side.

Note: The extended portion of the side rail faces the cab of the vehicle. If vehicle has plastic bed liner that interferes with the side rails, see step 2.

**STEP 2
(Plastic Bed
Liner Vehicles)**

If vehicle is equip with plastic bed liner, use the side rail as a template and trace the outline of the side rail using a permanent marker. Use a rotary tool to cut the bed liner along the template.

Note: Ensure not to cut too deep to prevent damaging vehicle bed.

STEP 3

Insert the (2) threaded studs through the front rail of the tonneau cover. Once inserted, place the tonneau cover onto the side rails, making sure the studs go through the front side rail brackets. Tighten the thumb screws to secure the front of the tonneau cover to the side rails. Thread (1) wing nut after the thumb screw on each side to lock the tonneau cover into place.

STEP 4

Unroll the tonneau cover and close tailgate. Ensure the tailgate properly closes, adjust as necessary. Pull the release cable from under the tonneau cover to open tonneau cover.

STEP 5

To secure tonneau cover open, insert the (2) elastic band hooks into the (2) hold downs on the upper portion of the tonneau cover.

Installation is now complete.