

Window Visor Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


| KIT CONTENTS: | |
|----------------------------|-----|
| Description | Qty |
| Regular Cab Kit | 2 |
| Super Cab & Super Crew Kit | 4 |

Tools Required:



- Rubbing Alcohol
- Clean Towel

Front Installation

1. Lower front windows into the down position. The key will need to be in the accessory position.
2. Wipe down weather-strip with rubbing alcohol that comes in contact with window visor. **Note: it is important that the weather-strip is thoroughly cleaned for proper adhesion of the 3M tape.**
3. Determine which visor corresponds with the Driver and Passengers side front doors. Start on either side of the vehicle as the same steps are repeated for the other side.
4. Remove 3M tape liner and insert the top flange into the weather stripping channel from the outside of the vehicle.
5. Slide the visor towards the rear of the vehicle so that rear tab is in the channel.

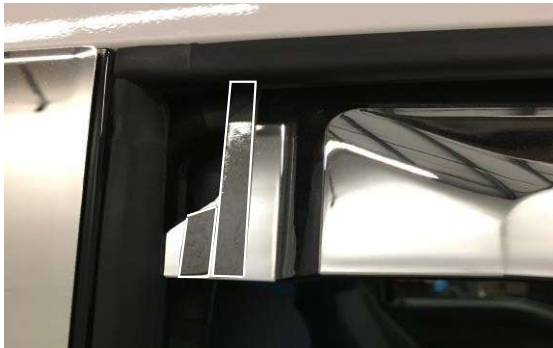

6. Work the upper flange into the weather stripping channel down the length of visor as shown below.
7. Lift up and push back from the front end of the window visor moving up and over the window trim.

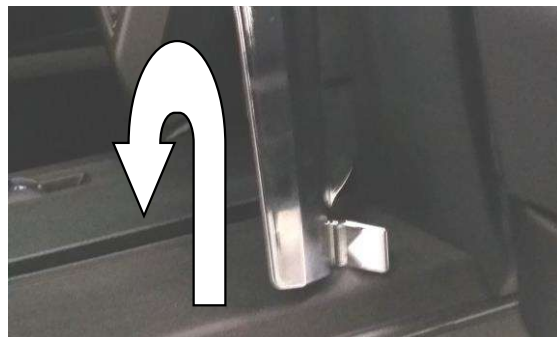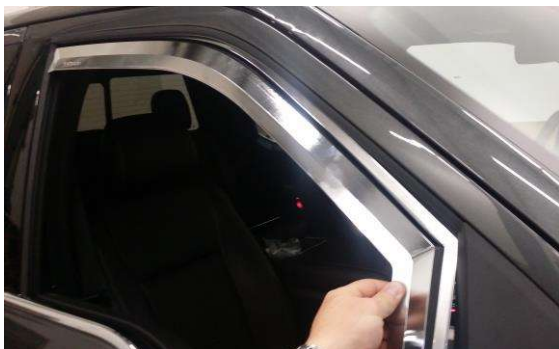

Ford Licensed Window Visors

8. The hook slides in-between the mirror and the weather stripping sitting on top of the rubber window trim for support. Firmly press the hook into place.



9. With the visor installed and seated in the window track, roll up the window carefully in manual mode. This is done by slowly lifting up the button half way in short succession. Raise the window until it is all the way up.



10. Lower the window one inch (manual mode) and repeat step 8, raising the window until it is fully seated.
11. Repeat step 9 for a minimum of 5 times. This will calibrate the window motor for the increased resistance of the window visors.
12. 6. Roll Window up until it is fully seated. Allow 12-24 hours for the tape to cure before use.

Rear Installation

1. Determine which visor corresponds with the Driver and Passengers side rear doors. Start on either side of the vehicle as the same steps are repeated for the other side.
2. Lower rear windows into the down position. Test fit visors in window track to determine proper alignment.
3. The vehicle surface temperature must be a minimum of 15°C (60°F).
4. Remove visor and wipe down weather-strip with rubbing alcohol that comes in contact with window visor. **Note: it is important that the weather-strip is thoroughly cleaned for proper adhesion of the 3M tape.**
5. Remove 3M tape liner and place rear window visor into channel. Place inner corner in position and swing rear up being careful not to contact the weather-strip with the tape until in position.



6. Roll Window up until it is fully seated. Allow 12-24 hours for the tape to cure before use.