



LIGHTWEIGHT LOW PROFILE HARD TRI-FOLD TONNEAU COVER

(2015+ F-150 - 5.5' BED)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Tonneau Cover
- (1) Bulkhead Gasket
- (1) LH Side Rail
- (1) RH Side Rail
- (2) Tonneau Mounting Brackets
- (2) Tonneau Mounting Studs
- (4) Side Rail Clamps
- (2) Tonneau Locking Brackets
- (2) Drain Tubes
- (1) 17mm Wrench
- (1) 2.5mm Allen Key

TOOLS REQUIRED

- 17mm Wrench (Provided)
- 2.5mm Allen Key (Provided)
- Scissors
- Isopropyl Alcohol
- Microfiber Cloth

SKU # T564720
Edited: 06/16/2022

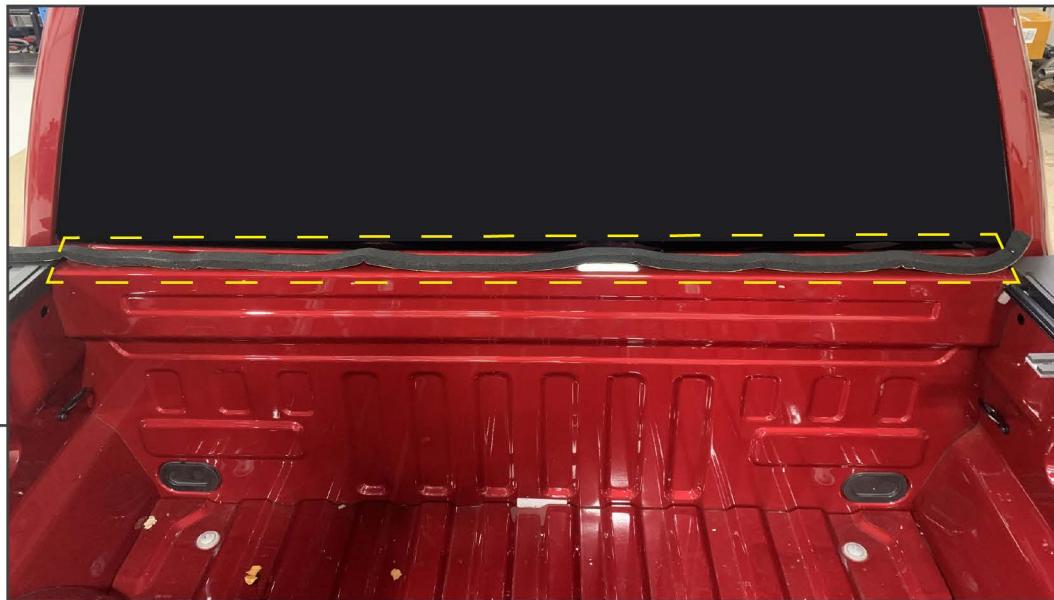

STEP 1

Test fit the bulkhead gasket to the vehicle bulkhead, and cut to the appropriate size. Do not install the bulkhead gasket over the vehicle plastic side rails. Once cut to size, clean the bulkhead using isopropyl alcohol and a microfiber cloth, and adhere the gasket to the bulkhead.



STEP 2

Install (1) tonneau cover mounting bracket onto the side rail, and slide the bracket towards the drain tube fitting at the opposite end of the side rail. Do not tighten into place, this bracket will be used for adjustment later.

Repeat this step for the remaining side rail.

STEP 3

Place the side rail to the vehicle bed rail, ensuring the drain tube fitting is facing downwards and towards the vehicle cab. Align the side rail to the furthest rear point before the tailgate area. Once adjusted, tighten the (2) mounting clamps. Attach the drain tube at the front of the rail. Route the tube out of the bed using an existing hole or you will need to drill a hole to pass the tube through.

Repeat this step for the remaining side rail.

STEP 4


Install (1) tonneau locking bracket to the side rail. Using the Allen screw at the bottom, loosely secure into place. This bracket will be used for adjusted later.

Repeat this step for the remaining locking bracket.

STEP 5

Lift the tonneau cover onto the tonneau cover side rails, ensure the cover is centered. Then, unfold the cover towards the tailgate, and adjust as necessary.

Proper fitment allows for approximately 3/4" overhang over the front and rear of the bulkhead and the tailgate.

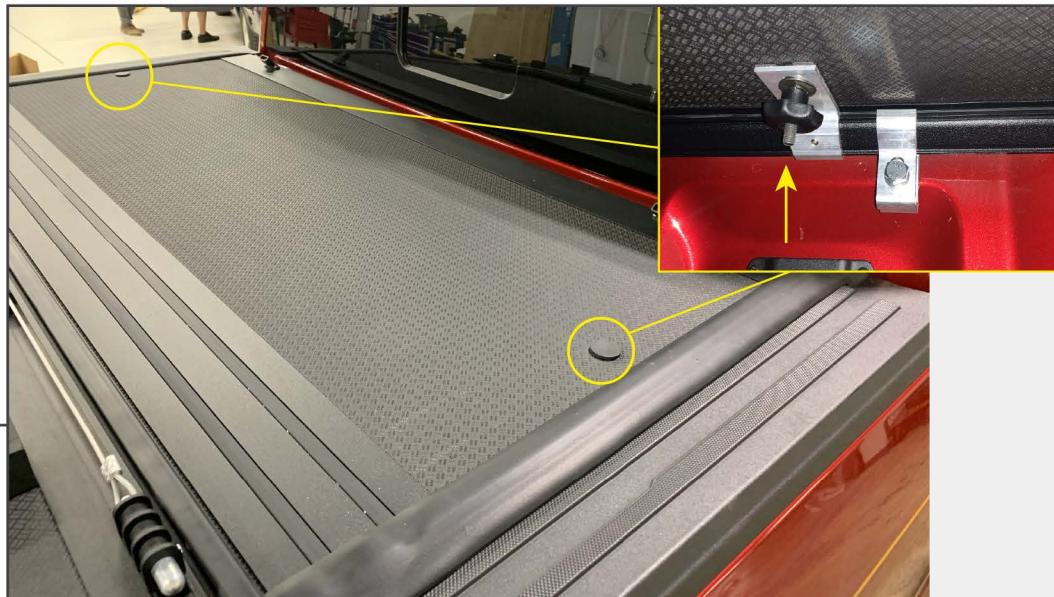STEP 6


Install (2) tonneau mounting studs into the holes in the first panel on the tonneau cover, ensuring the studs go through the previously installed (2) tonneau cover mounting brackets. Secure into place using the (2) thumb screws, (2) flat washers, and (2) lock washers.

STEP 7



Unfold the tonneau cover and ensure the tonneau cover locks into place. Adjust as necessary to achieve desired fitment. Once properly adjusted, tighten all mounting clamps and set screws until secure.

STEP 8

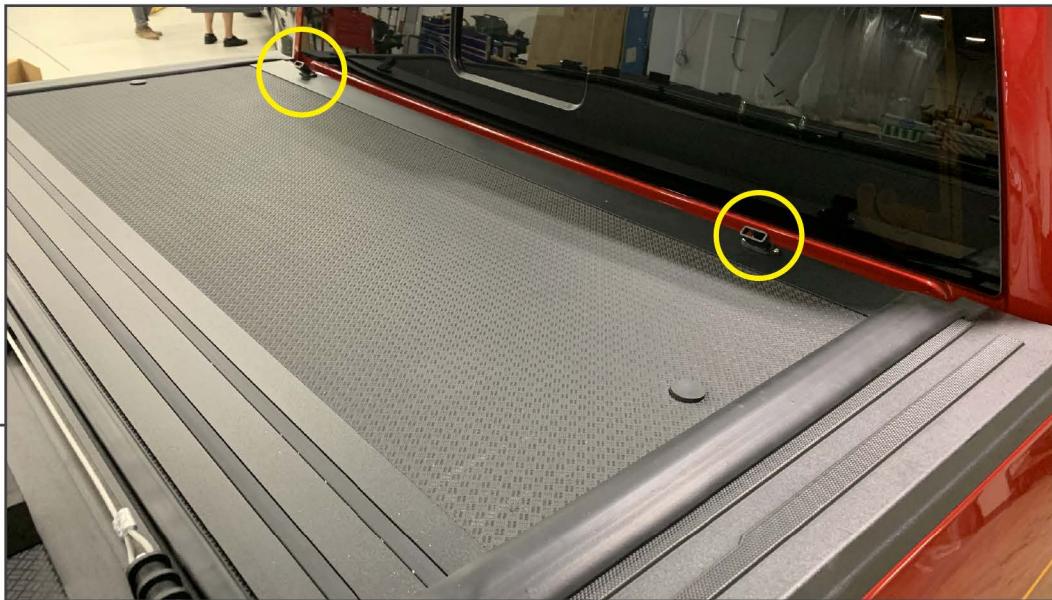

To store, fold the tonneau cover, and secure the last panel to the retaining clips using the attached straps.

Installation is now complete.