



MOLDED MUD GUARDS

(2021+ F-150)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Mud Guard
- (1) RH Front Mud Guard
- (1) LH Rear Mud Guard
- (1) RH Rear Mud Guard
- (1) LH Rear Bracket
- (1) RH Rear Bracket
- (2) Plastic Push Clips
- (2) M6 Bolts
- (2) M6 Flat Washers
- (2) M6 Threaded Clips
- (8) Metal Clips
- (10) Phillips Screws
- (10) Screw Flat Washers
- (6) Screw Threaded Clips

TOOLS REQUIRED

- Phillips Head Screwdriver
- Panel Removal Tool
- 7mm Socket
- Ratchet

STEP 1 (FRONT)



Remove (2) 7mm screws from the inner plastic wheel well panel. Do not remove the plastic panel from the vehicle.

STEP 2



Align the mud guard to the vehicle, and loosely secure the mud guard using (2) Phillips head screws and (2) screw flat washers.


Note: Ensure the (2) upper tabs are folded under the fender lip.

STEP 3



Secure the top of the mud guard using (2) metal clips in between the indicated lines.

STEP 4

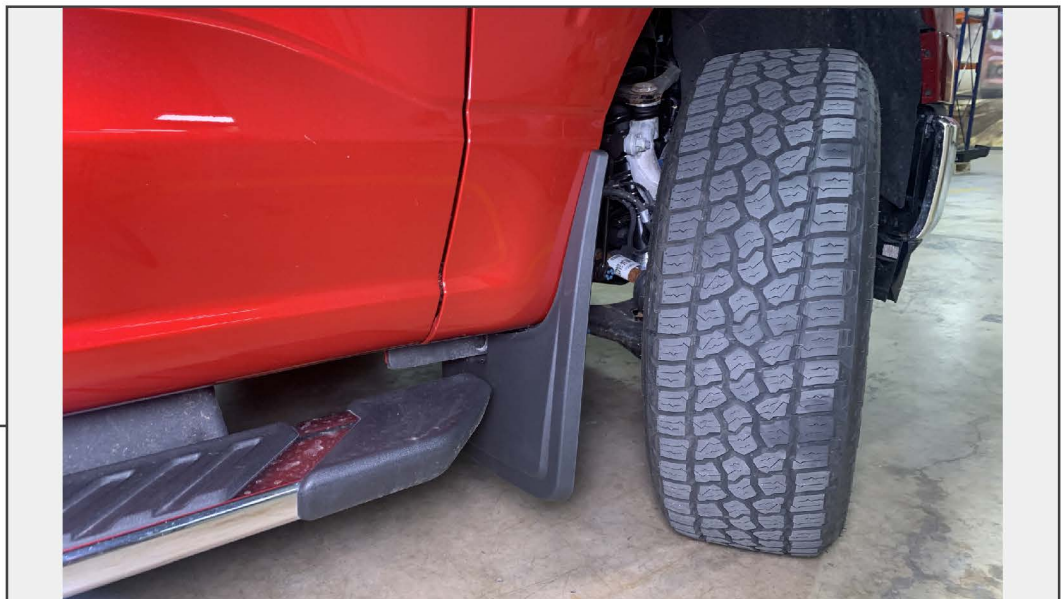

Tighten the (2) Phillips screws until secure. Repeat steps 1-4 to the opposite side of the vehicle.

Front installation is now complete.

STEP 5 (REAR)



Remove (2) plastic push clips inside the wheel well. Remove (2) plastic push clips from under the bed side.

STEP 6




Loosely secure the bottom of the mud guard to the vehicle using (2) Phillips screws, (2) screw flat washers, and (2) threaded screw clips.

STEP 7



Fold the (2) tabs around the fender lip. Secure the top of the mud guard to the vehicle using (2) metal clips.


STEP 8

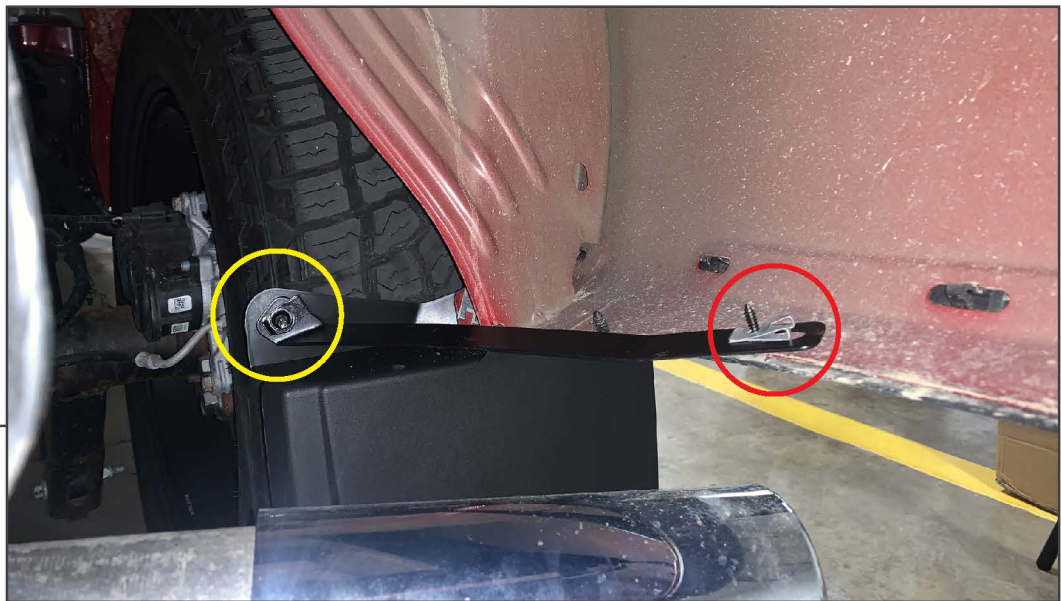

Install (1) LH rear mounting bracket to the bed using (1) Phillips screw, (1) screw flat washer, and (1) threaded screw clip. Secure the bracket to the mud guard using (1) M6 bolt, (1) M6 flat washer, and (1) M6 threaded clip.

**STEP 9**

Insert (1) plastic push clip into the bottom of the mud guard.

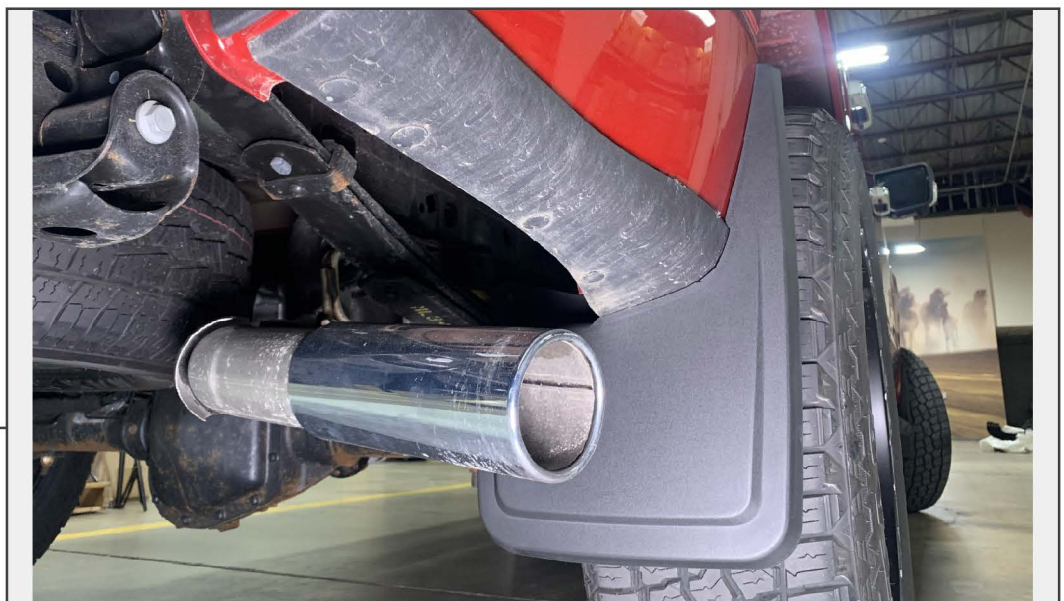**STEP 10**

Tighten all mounting hardware. Repeat steps 5-10 to the opposite side of the vehicle.

Installation is now complete.