

ROOF SPOILER

(2015+ F-150)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Roof Spoiler
- (2) Adhesion Promoter Pads

TOOLS REQUIRED


Isopropyl Alcohol Microfiber Cloth





STEP 1

Clean the roof of the vehicle around the third brake light using isopropyl alcohol and a microfiber cloth, allow to fully dry. Test fit the spoiler before peeling the tape backing, and clean the double sided tape adhesion areas using the (2) adhesion promoter pads.

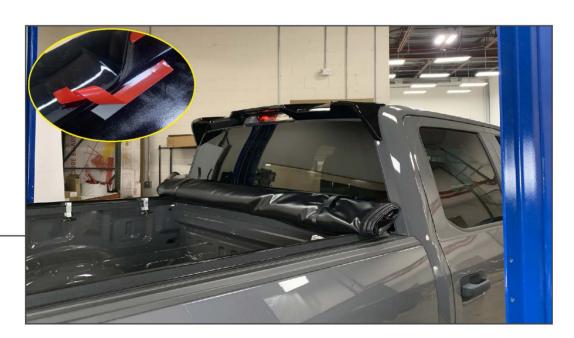

STEP 2

Peel the red tape backing from the spoiler, and install the spoiler to the vehicle. Install the spoiler using firm pressure to ensure proper adhesion.

Installation is now complete.