

TAIL LIGHTS

SKU # AMFMAC00203

Product Installation Instructions


Fits 2009-2014 Ford F150

STEP 1



Remove Two 8mm bolts on the top and bottom.

STEP 2

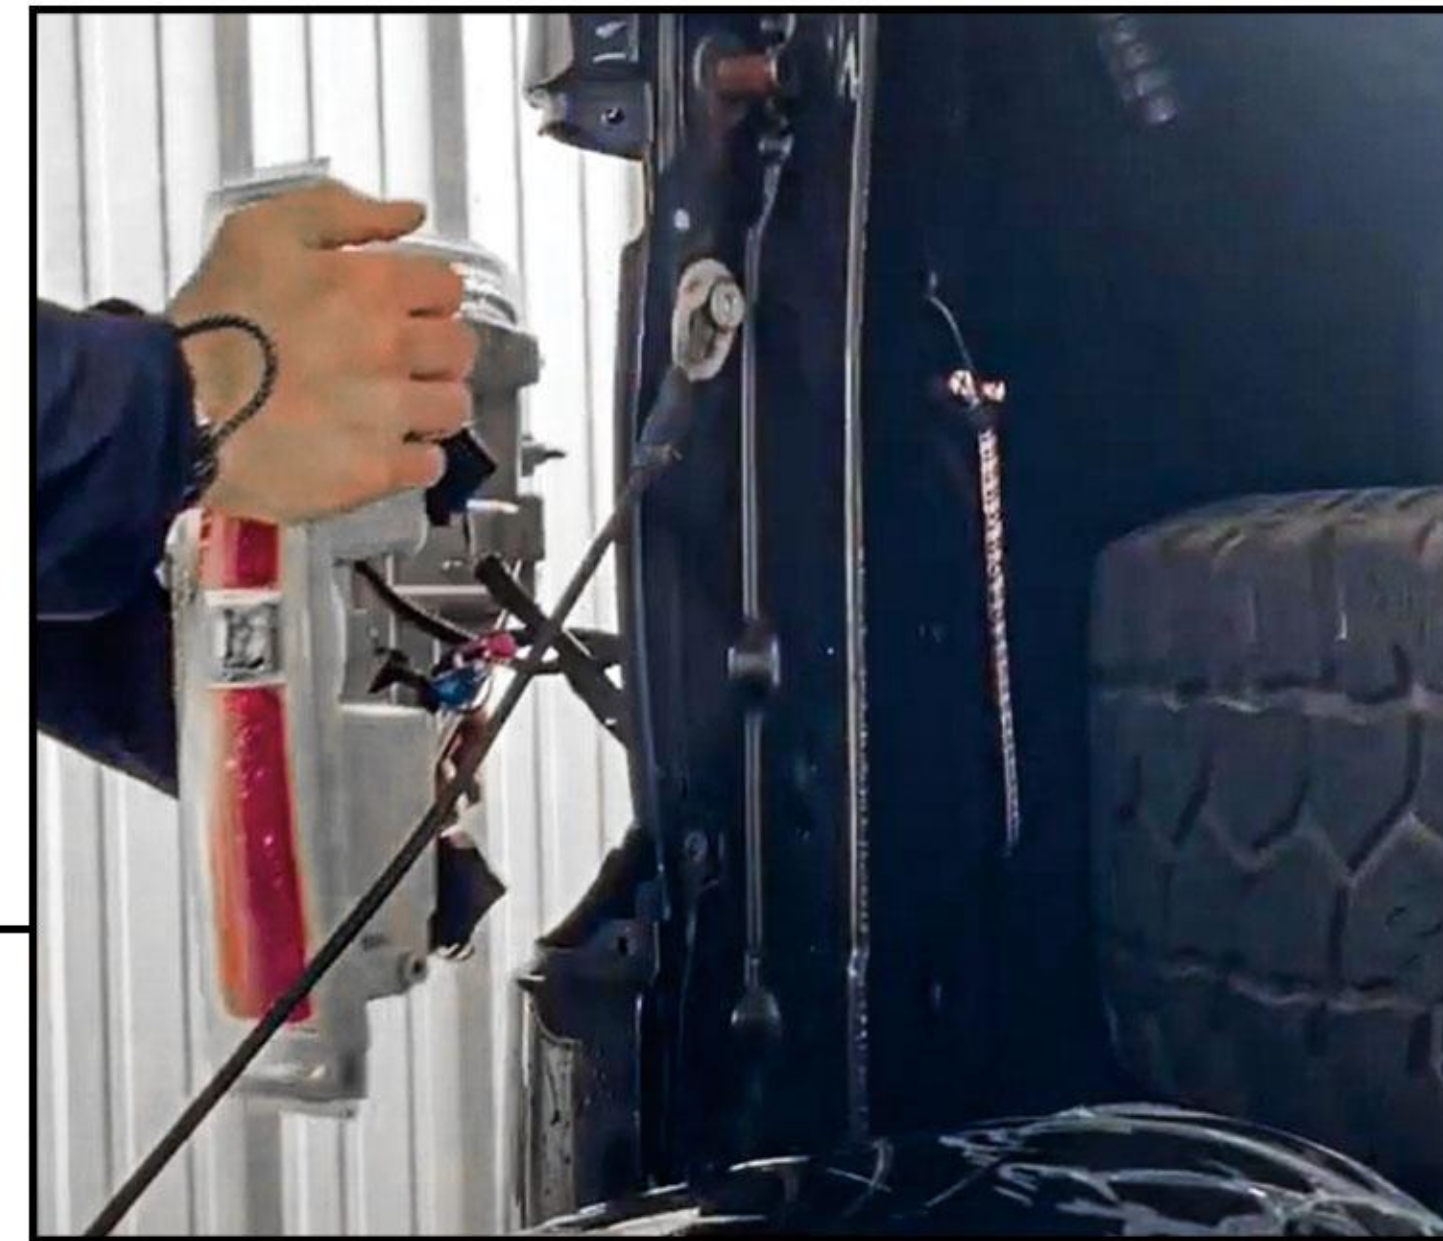

Pull the taillights off the vehicle and unplug the wire harness.

STEP 3



Plug the new taillights harness into the original wire harness.

STEP 3



Simply do the removal steps in reverse to reinstall the new taillights.

STEP 4



Do the same on the other side to complete the taillights installation.