

LED TAIL LIGHTS

SKU # AMFMAC00208 AMFMAC00201

Product Installation Instructions

Fitment : 2009-2014 Ford F150

STEP 1




Remove Two 8mm bolts on the top and bottom.

STEP 2



Pull the taillights off the vehicle and unplug the bulbs.

STEP 3

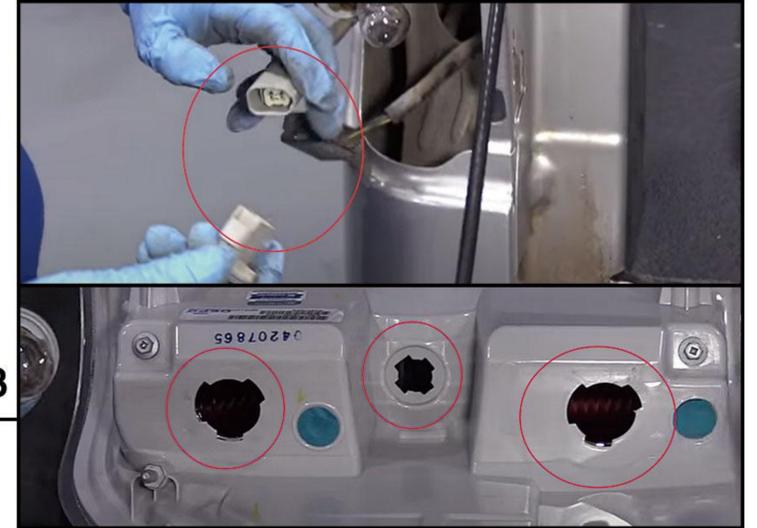

Pull the bulbs off and install them in the new housing.

STEP 4



Plug the bulb wire harness into the original wire harness.

STEP 5



Simply do the removal steps in reverse to reinstall the new taillights.

STEP 6



Do the same on the other side to complete the taillights installation.