



Installing the Safe

STEP 1 Empty the armrest box of all contents including the mat at the bottom.

STEP 2 Place the top panel of the safe into the armrest box through the diagonal of the armrest box. Then open the lid and raise the panel to the top of the armrest box.

STEP 3 Put the brackets into the armrest box through the safe door. Note there are **two studs** on both sides of the top panel. Check that the pre-drilled holes in the brackets align with the studs in the panel.

STEP 4 Hand tighten the 4 Nuts on to the exposed studs, then use the Open-ended wrench to tighten the nuts. Do not overtighten.

STEP 5 Using the safe bracket pre-drilled holes as a template, use the center punch to make pilot holes in the armrest wall.

STEP 6 Secure the safe brackets by screwing the Self-tapping Screws through the pilot holes punched into the walls of armrest. Do not overtighten.

STEP 7 Plug in the USB extension

Setting the Combination

The factory preset combination is 0-0-0-0

Please keep the safe door open when changing the combination.


To change the combination, insert the coding pin provided into the hole in the side of the lock.



Remove the coding pin to lock in the combination.

Test the lock operation before closing the safe door.

Please note: The combination can only be changed again by setting the saved combination and inserting the pin. Please record the combination on the card provided.

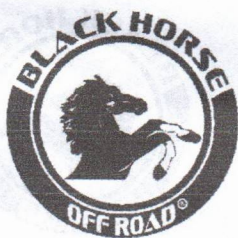

BLACK HORSE OFF ROAD®

Installation Instructions

Workhorse Auto Safe

Part# ASFF06 Fits: - FORD F150 2022-2023

Parts List:

- 4 Self-Tapping Screws
- 4 Nuts
- 1 USB Extension

Tools Needed:

- Open-ended Wrench
- Center Punch
- Phillips Screwdriver

