

**STEP 1**




Clean the bumper with exterior detailer, and allow to dry.

**STEP 2**



Press fog lights directly into the opening of the front bumper firmly. The lights have four brackets in the back (2 top, 2 bottom) and they snap onto the edges of the openings.

**STEP 3**

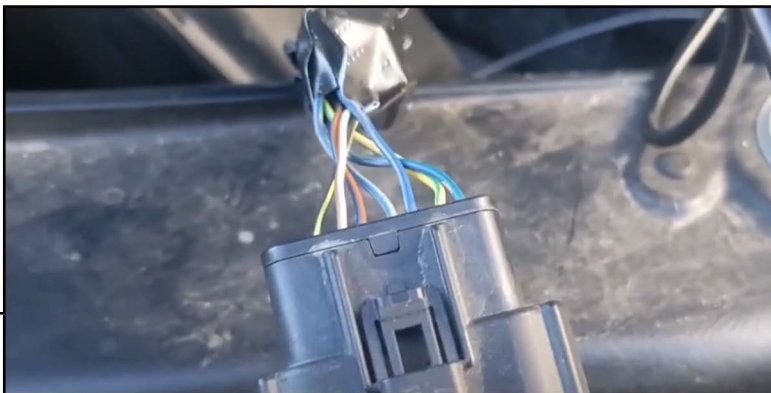

Identify the wire harness that comes out of the back of the driver's side headlight: the wire all the way to the right is going to be your directional for the driver's side; the third wire from the right is going to be your DRLs; the brown wire is going to be your headlight; the black and yellow wire is the ground in the harness. Use the included scotchlok connectors to splice onto those wires, and install and hook up the lights.

**STEP 4**



Repeat steps 1-3 for the remaining fog light.

Installation is now complete.