



CXR SERIES LED HEADLIGHTS

(2018-2020 F-150 - WITH OEM HALOGEN HEADLIGHTS)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Pair of LED Headlights
- (1) DRL Harness
- (1) Dielectric Grease Packet

TOOLS REQUIRED

- Panel Removal Tool
- 7mm, 8mm, 10mm Sockets
- T-25 Torx Socket
- Socket Wrench

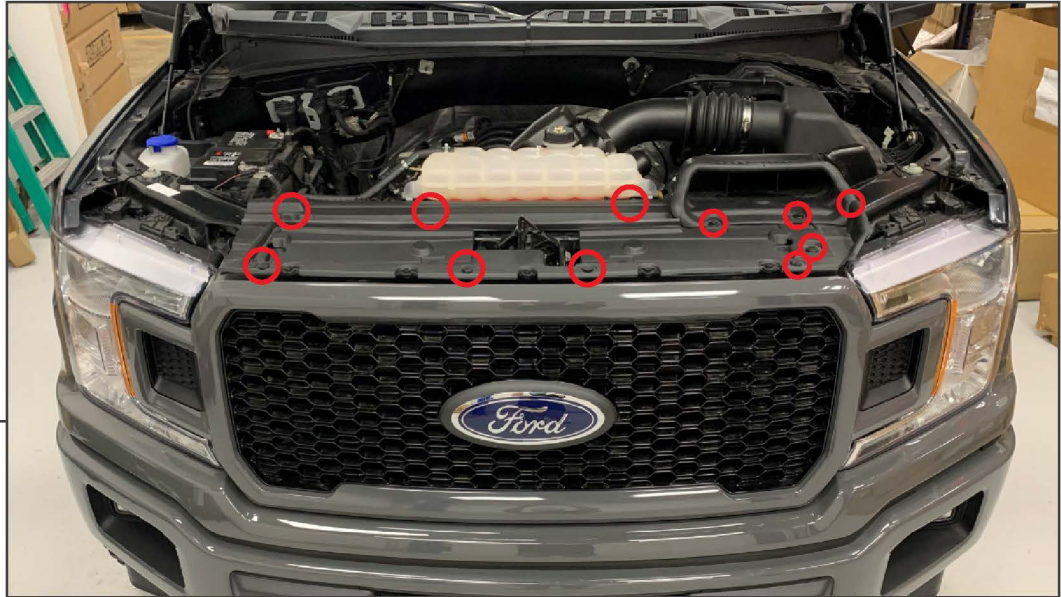


STEP 1

Remove (11) push clips from the upper grille cover. Remove the cover from vehicle.



STEP 2

Remove (4) 10mm bolts from the top of the grille.

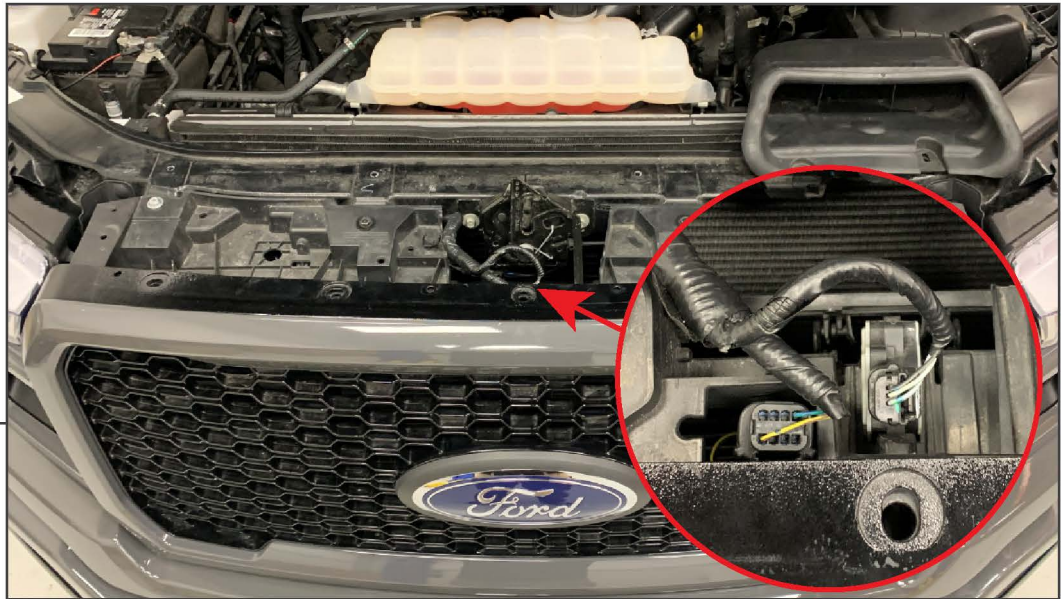

STEP 3

Unplug the (2) electrical connectors from the top of the grille by pushing in the plastic tab on each connector.



STEP 4

Remove (2) 7mm bolts from inside the fender well.

Repeat this step for the opposite side of the vehicle.

STEP 5




Firmly pull the trim panel away from the vehicle to dislodge the clips. Repeat this procedure to the opposite side. Remove the trim panel from the vehicle.

STEP 6




Remove (2) 8mm bolts from the bottom of the grille assembly. Remove the grille assembly from the vehicle.

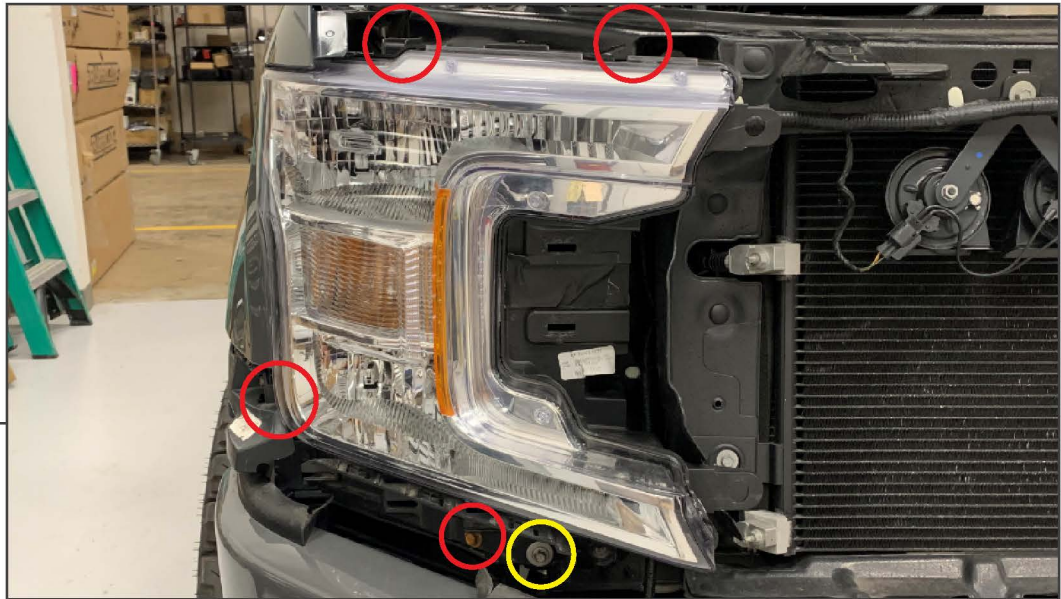

STEP 7


Remove (4) 10mm bolts, and (1) 8mm bolt from the headlight assembly. Remove and unplug the connectors from the headlight assembly.

Repeat this step for the opposite side of the vehicle.

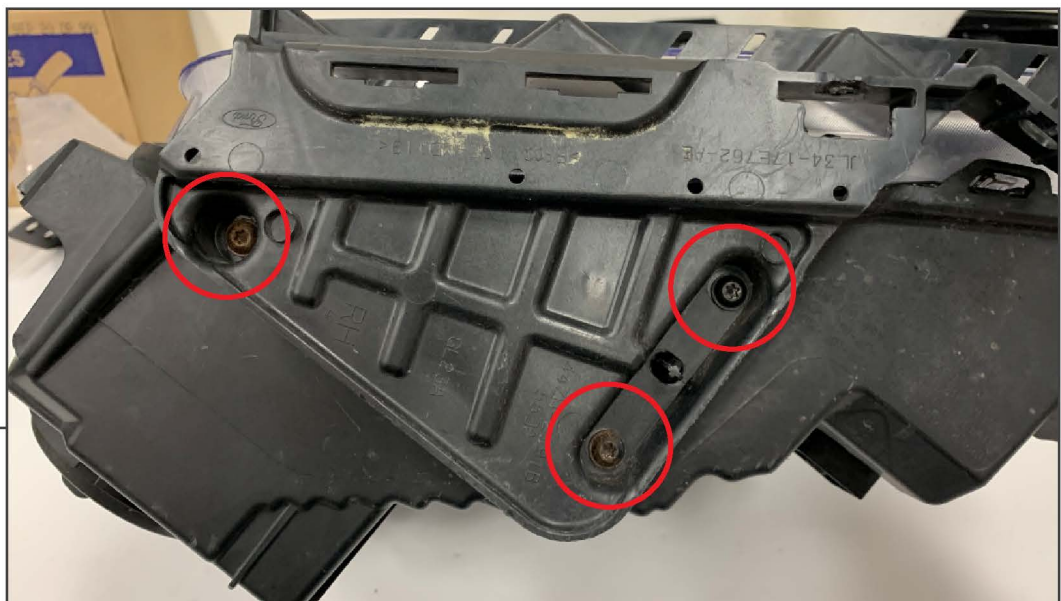


STEP 8

Remove the lower headlight mount from the headlight assembly by removing (3) T-25 Torx screws. Transfer the lower headlight mount to the new headlight assembly reusing the original T-25 Torx screws.

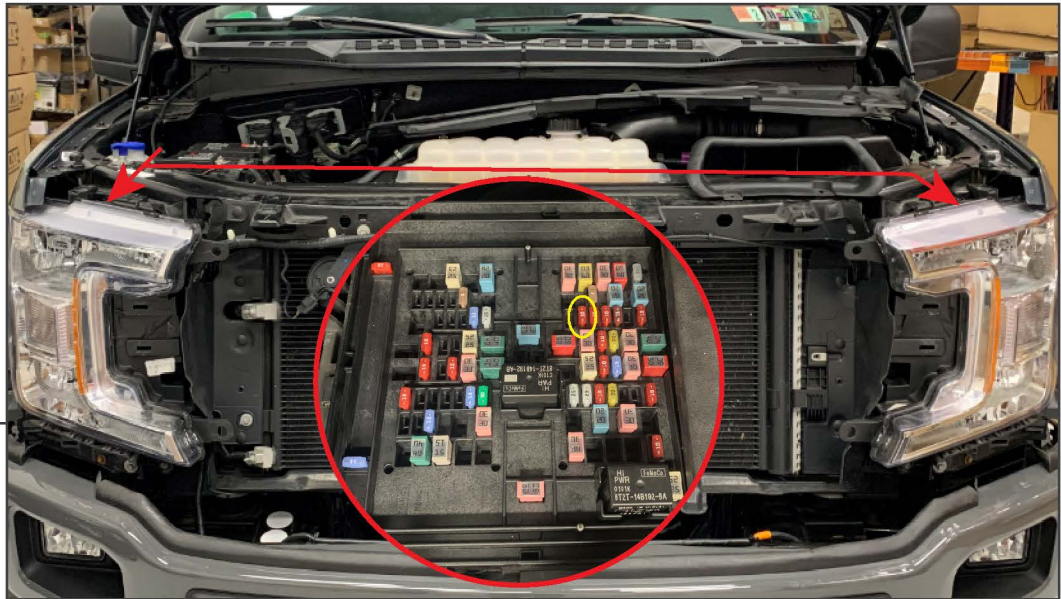

STEP 9

Route the provided DRL wiring harness neatly from the fuse box, across the engine bay to both headlight assemblies. Replace the indicated fuse with the DRL harness. Secure the DRL harness from any hot/moving components using cable ties.

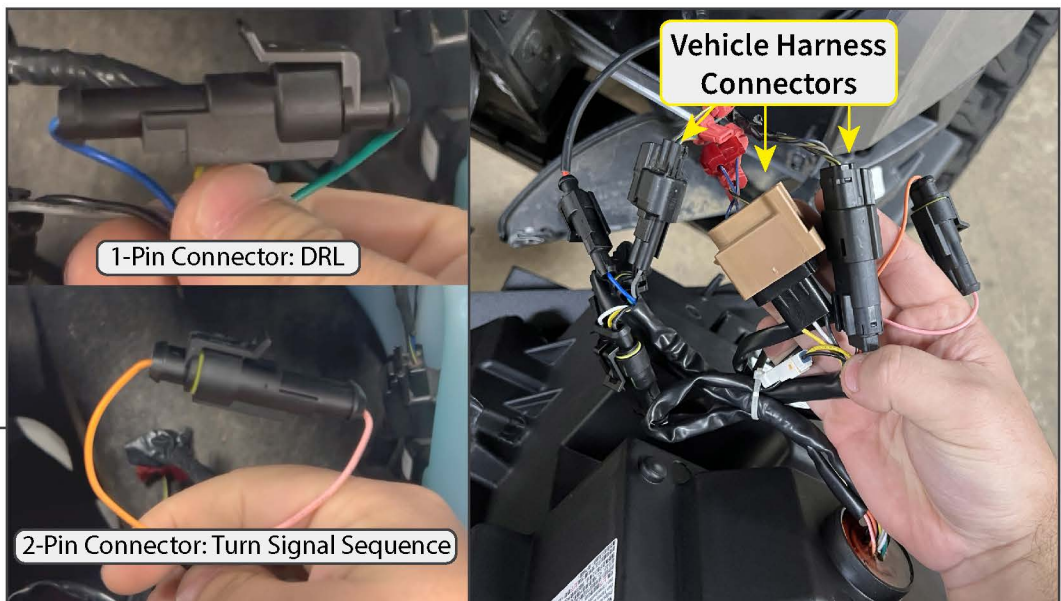

STEP 10

- Plug in the (3) original vehicle wiring harnesses to the new headlight wiring harnesses.
- Plug in the routed DRL harness into the single pin connector on the headlight. If desired, plug in the headlight single pin connectors together to allow the DRL to flash with the turn signal.
- Plug in/Unplug the two pin connector to toggle the sequential turn signals.



STEP 11

Fit the new headlights into the vehicle, and secure each headlight using the OEM headlight mounting hardware on each side of the vehicle.

Install all vehicle body panels and covers following steps 1-7 in reverse order.

Installation is now complete.