



---

# LED PROJECTOR HEADLIGHTS WITH DRL

(2015-2017 F-150)  
(2018-2020 RAPTOR)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Headlight
- (1) RH Headlight
- (2) OEM HID Harnesses
- (1) DRL Harness

### TOOLS REQUIRED

---

- 7mm, 8mm, 10mm Sockets
- T-25 Torx Socket
- Ratchet
- Panel Removal Tool
- Flathead Screwdriver

**STEP 1**




Remove (1) plastic push clip from the top of the headlight cover.

**STEP 2**



Remove (2) 7mm screws from the inner fender liner/flare.

**STEP 3**

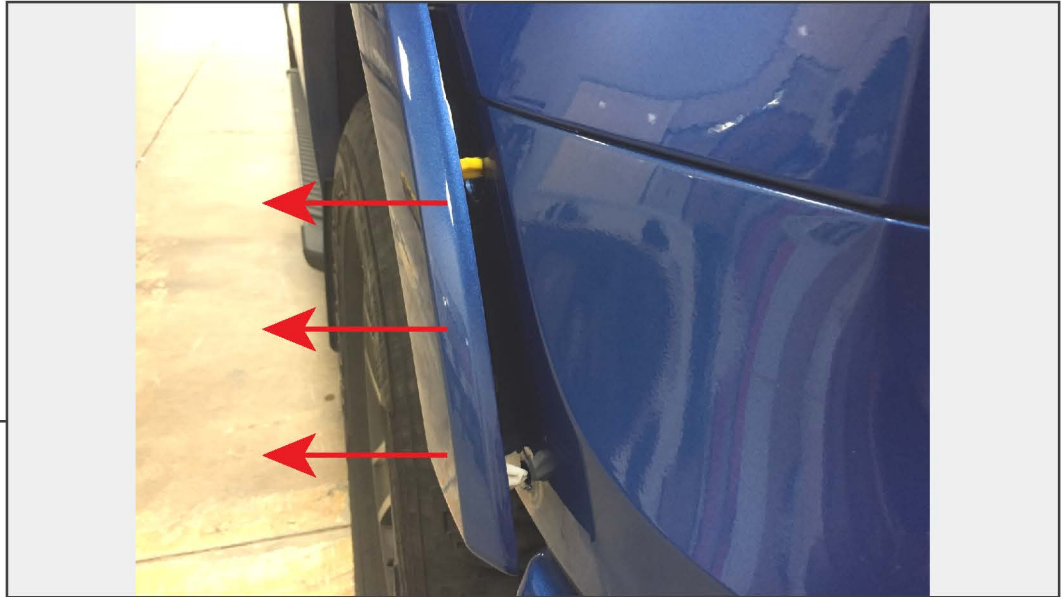


Using a panel removal tool, gently pry the fender flare away from the headlight cover.

**STEP 4**




Carefully pry the headlight cover from the headlight assembly to dislodge the retaining clips. Set the cover aside.

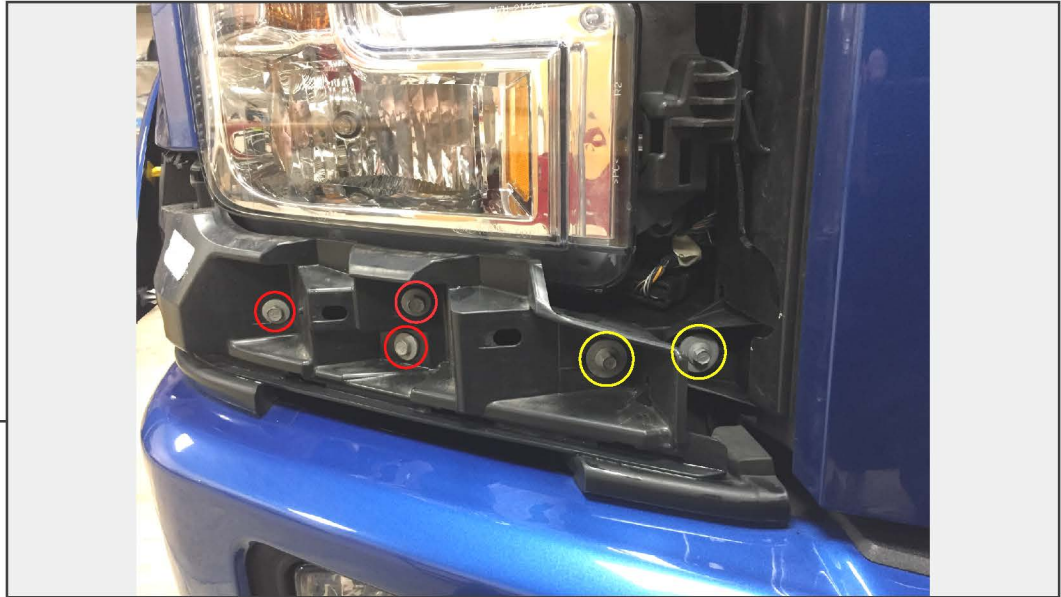

**STEP 5**

Remove (3) 10mm bolts and (2) 8mm bolts from the lower portion of the headlight assembly.

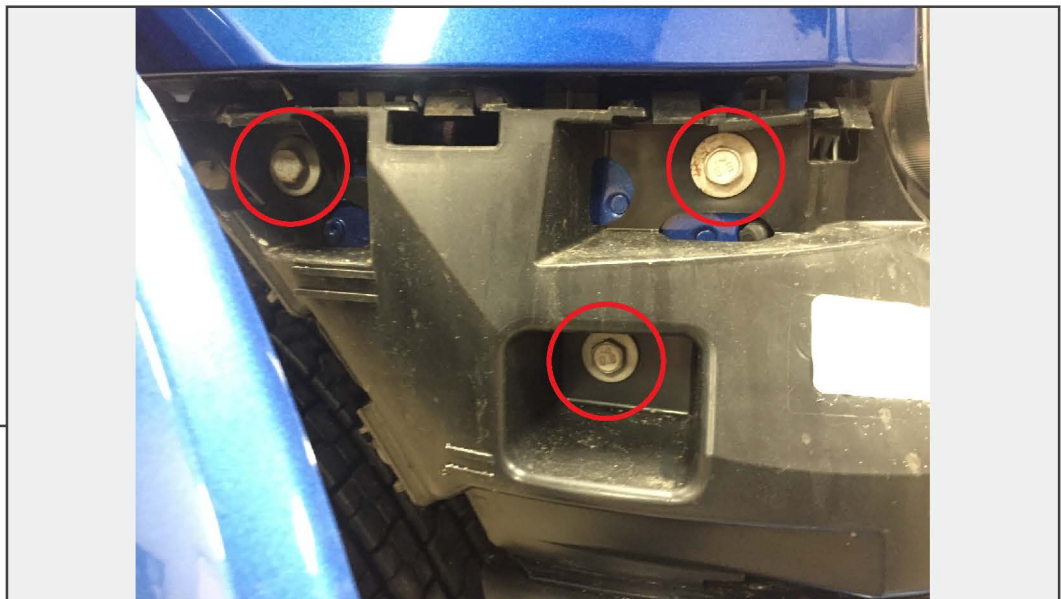

**STEP 6**

Remove (3) 10mm bolts from the side lower portion of the headlight assembly.

**STEP 7**



Remove (2) 10mm bolts from the top of the headlight assembly.

**STEP 8**



Remove (1) 10mm bolt located in between the headlight and the vehicle grille.

**STEP 9**




Using a flathead screwdriver, pry upwards on the locking tab while pulling the headlight forwards.

**STEP 10**



Carefully pry the headlight from the locating retainer.

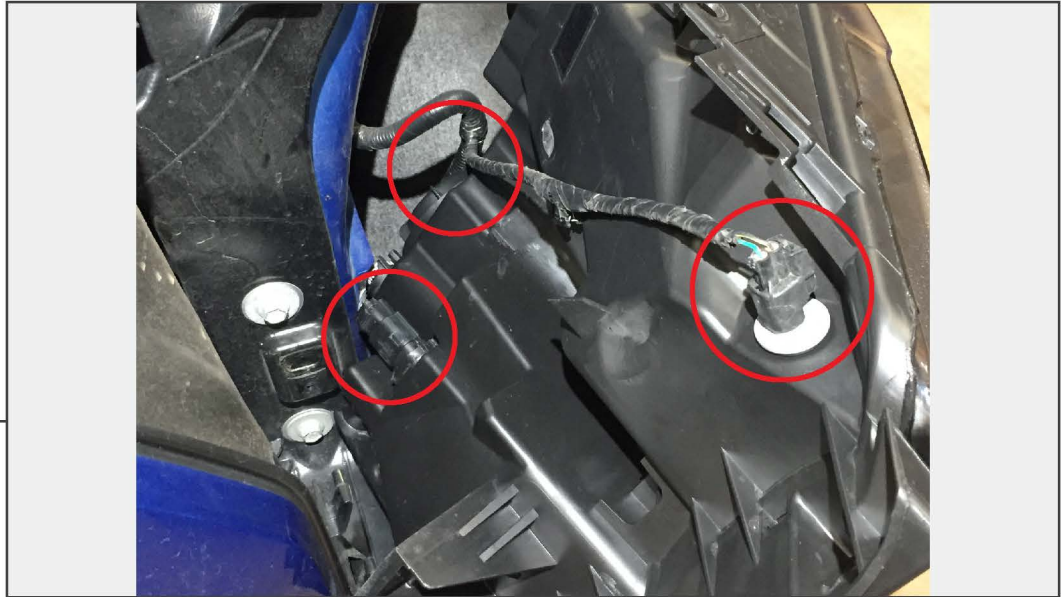

**STEP 11**


Unplug the (3) electrical connectors from the headlight, then remove the headlight from the vehicle.



**STEP 12**

Route the DRL harness across the front of the vehicle, and plug each end into the included headlight assembly harness. Fit the fuse tap end of the wiring harness into **fuse # 113**

OEM LED Wiring Harness

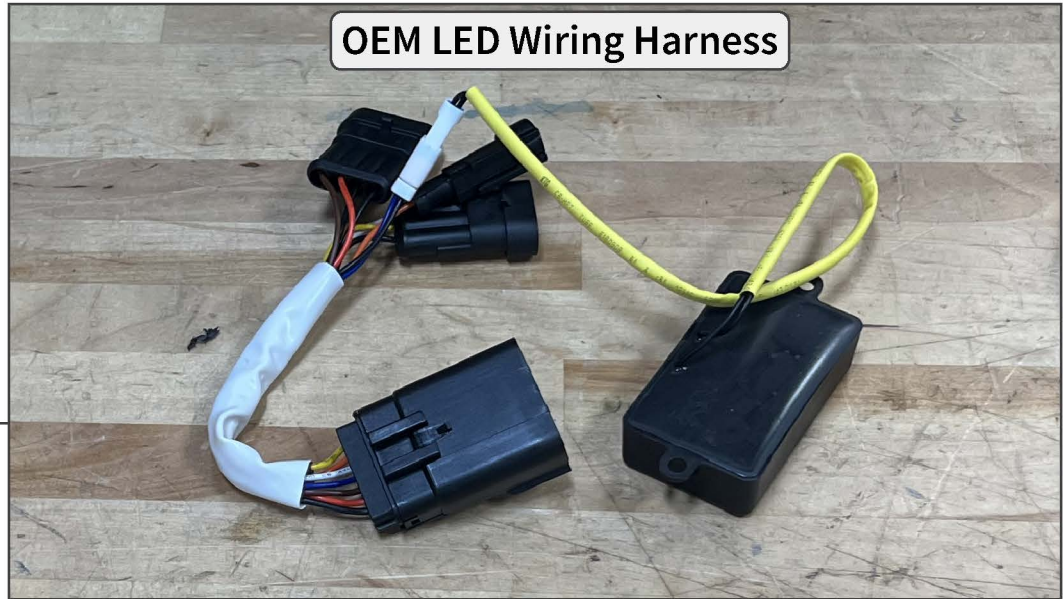

**STEP 13**

Determine the required wiring harness for the vehicle. The pre-installed harness is OEM Halogen headlights. If the vehicle has OEM LED headlights, remove the pre-installed harness and install the OEM LED harness.



**STEP 14**

Remove the lower mounting bracket from the original headlight assembly by removing (3) T-25 Torx screws. Then, secure the mounting bracket to the new headlight using the original T-25 Torx screws.



**STEP 15**

Plug all headlight harness connectors into the vehicle wiring harness. Plug the DRL harness into the (1) DRL harness connector [blue wire].

Secure the headlight to the vehicle using all OEM hardware.



**STEP 16**

Re-assemble the vehicle following steps 1-10 in reverse order.

Installation is now complete.