

# LED PROJECTOR HEADLIGHTS WITH DRL

(2015-2017 F-150)  
(2018-2020 RAPTOR)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) LH Headlight  
(1) RH Headlight  
(2) OEM HID Harnesses  
(1) DRL Harness

### TOOLS REQUIRED

---

7mm, 8mm, 10mm Sockets  
T-25 Torx Socket  
Ratchet  
Panel Removal Tool  
Flathead Screwdriver

**STEP 1**



Remove (1) plastic push clip from the top of the headlight cover.

**STEP 2**



Remove (2) 7mm screws from the inner fender liner/flare.

**STEP 3**



Using a panel removal tool, gently pry the fender flare away from the headlight cover.

**STEP 4**




Carefully pry the headlight cover from the headlight assembly to dislodge the retaining clips. Set the cover aside.

**STEP 5**



Remove (3) 10mm bolts and (2) 8mm bolts from the lower portion of the headlight assembly.

**STEP 6**

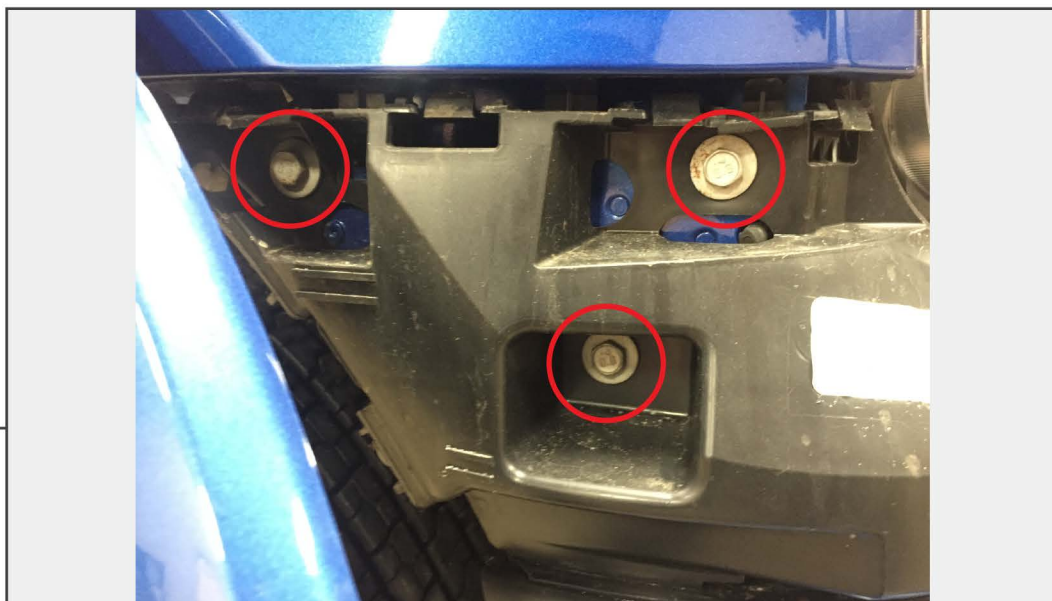

Remove (3) 10mm bolts from the side lower portion of the headlight assembly.



**STEP 7**



Remove (2) 10mm bolts from the top of the headlight assembly.

**STEP 8**



Remove (1) 10mm bolt located in between the headlight and the vehicle grille.

**STEP 9**




Using a flathead screwdriver, pry upwards on the locking tab while pulling the headlight forwards.

**STEP 10**



Carefully pry the headlight from the locating retainer.

**STEP 11**

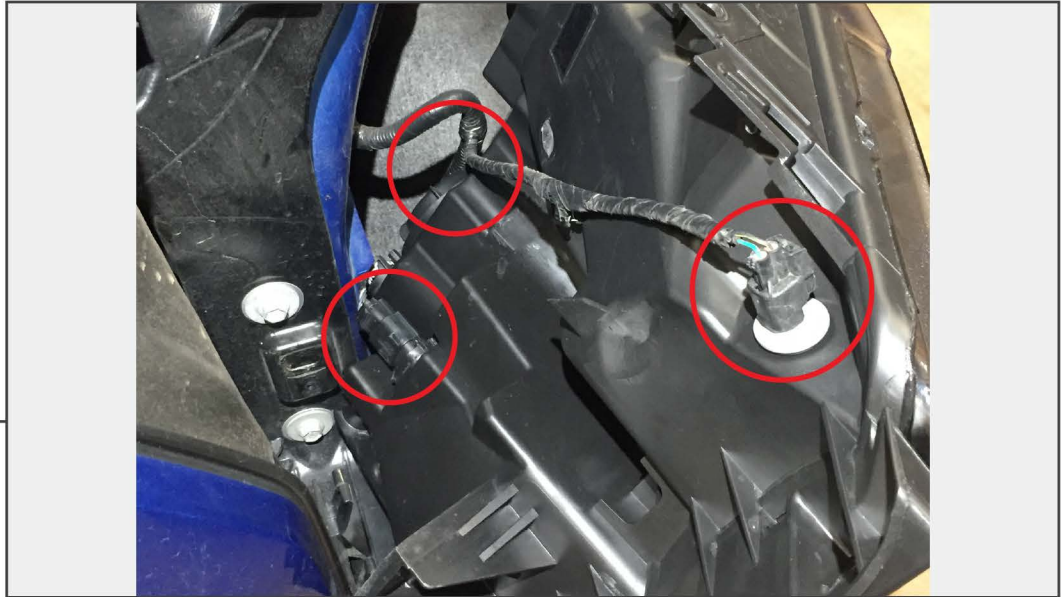

Unplug the (3) electrical connectors from the headlight, then remove the headlight from the vehicle.

**STEP 12**



Route the DRL harness across the front of the vehicle, and plug each end into the included headlight assembly harness. Fit the fuse tap end of the wiring harness into **fuse # 113**



**STEP 13**



Determine the required wiring harness for the vehicle. The pre-installed harness is OEM Halogen headlights. If the vehicle has OEM LED headlights, remove the pre-installed harness and install the OEM LED harness.

**STEP 14**



Remove the lower mounting bracket from the original headlight assembly by removing (3) T-25 Torx screws. Then, secure the mounting bracket to the new headlight using the original T-25 Torx screws.



---

**STEP 15**




Plug all headlight harness connectors into the vehicle wiring harness. Plug the DRL harness into the (1) DRL harness connector [blue wire].

Secure the headlight to the vehicle using all OEM hardware.

---

**STEP 16**

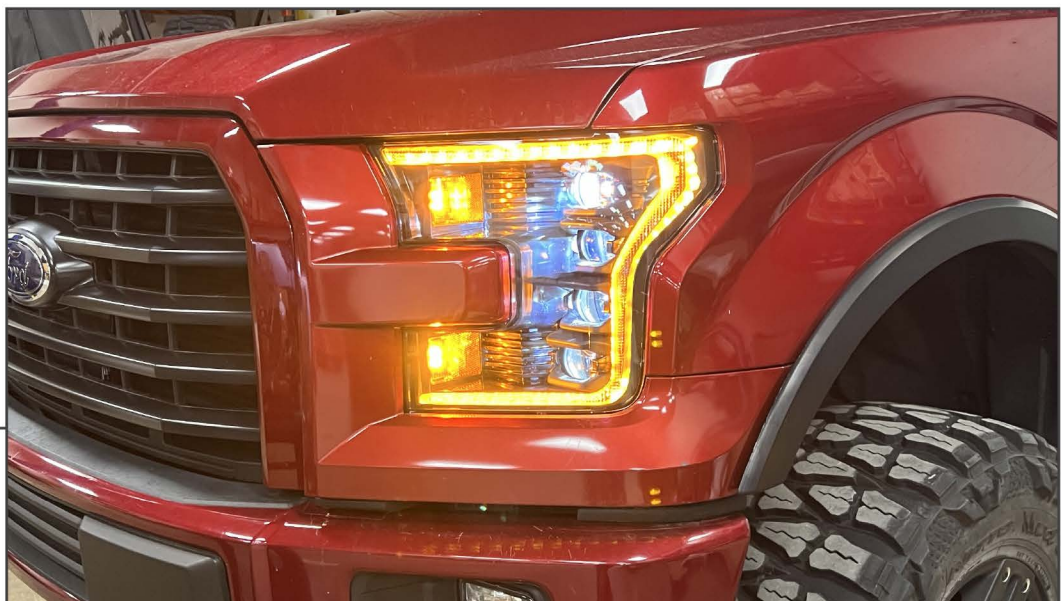

Re-assemble the vehicle following steps 1-10 in reverse order.

Installation is now complete.