



## Installation Instructions

### PARTS LIST:

| Qty | Item Description                   | Qty | Item Description                 |
|-----|------------------------------------|-----|----------------------------------|
| 1   | Push Bar                           | 6   | 8-1.25mm x 25mm Button Head Bolt |
| 1   | PS/right Bracket                   | 2   | 8-1.25mm x 25mm Hex Bolt         |
| 1   | DS/left Bracket                    | 2   | 8-1.25mm x 16mm Hex Bolt         |
| 1   | DS/left Push Bar Wing              | 10  | 8mm Lock Washers                 |
| 1   | PS/Right Push Bar Wing             | 8   | 8mm x 16mm x 1.6mm Flat Washers  |
| 1   | Passenger/Right LED "L" Bracket    | 8   | 8mm x 24mm x 2mm Flat Washers    |
| 1   | Driver/left LED "L" Bracket        | 6   | 8mm Hex Nut                      |
| 2   | 12-1.75mm x 40mm Double-Bolt Plate | 6   | 12-1.75mm x 35mm Hex Bolt        |
| 1   | 4mm Wrench                         | 4   | 12mm Hex Nuts                    |
| 1   | 5mm Wrench                         | 10  | 12mm x 32mm x 3mm Flat Washers   |
| 2   | 6-1.00mm x 20mm Combo Bolts        | 10  | 12mm Lock Washers                |
| 2   | License Plate Plastic Inserts      | 1   | License Plate Bracket            |

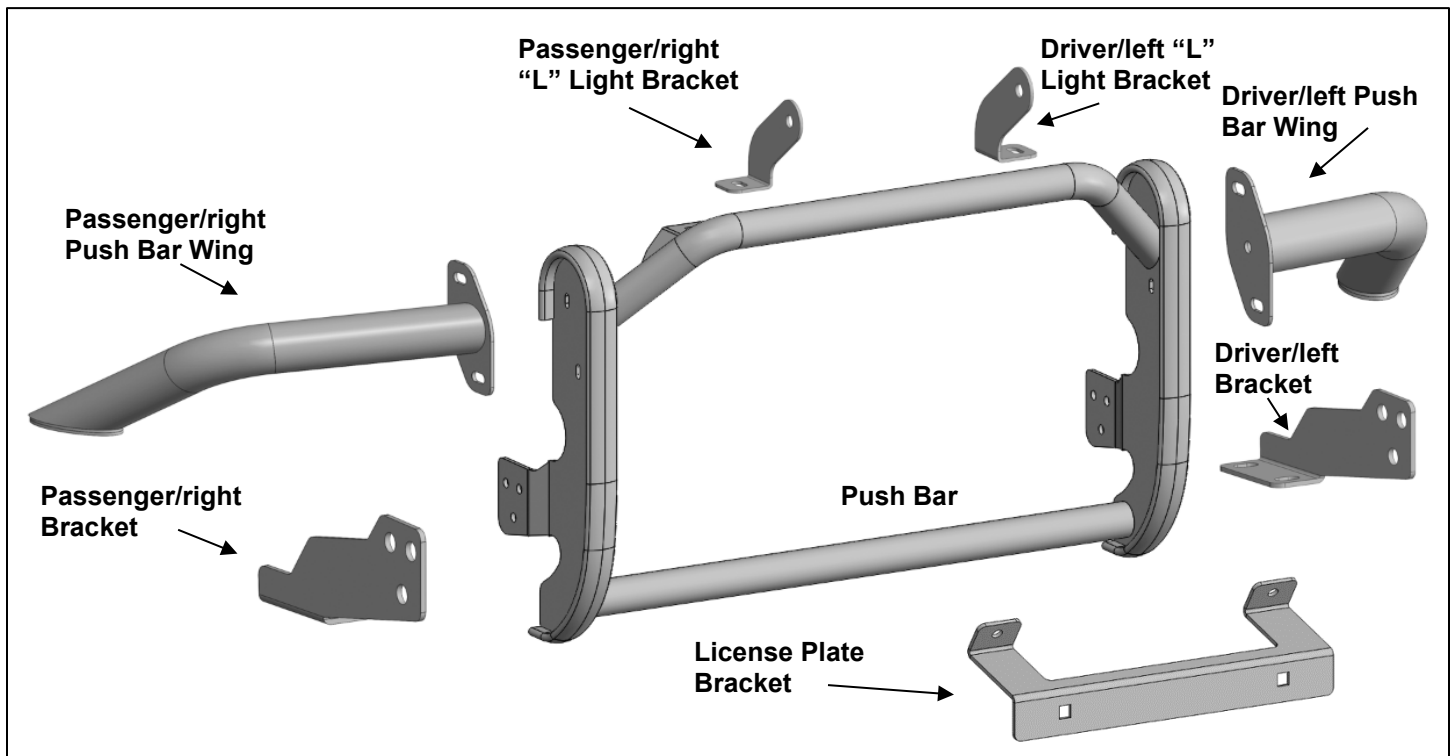

## TOOLS REQUIRED

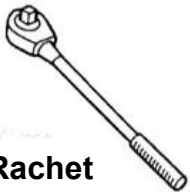

**Ratchet**



**13 & 19mm Socket**




**Extensions**




**Wrench**


- Follow (Fig 1 – 3) to remove Winch Tray and prepare for Push Bar Installation.

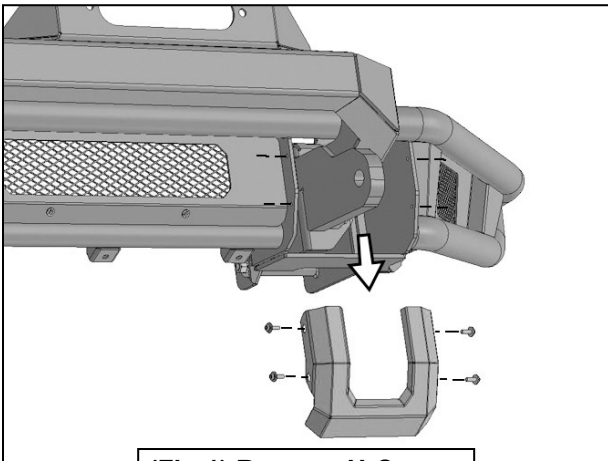

**(Fig 1) Remove U-Cover**



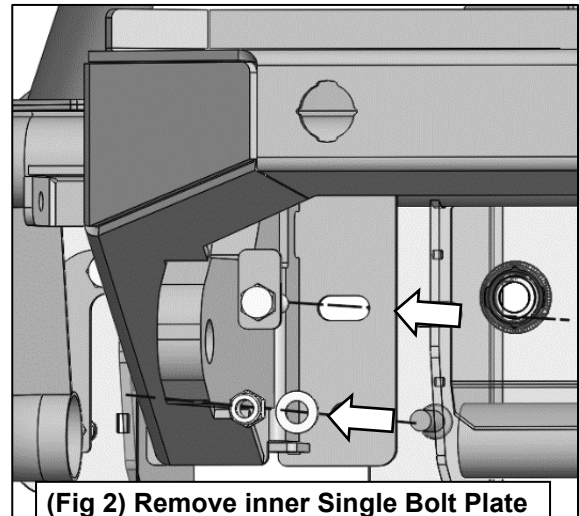



**(Fig 2) Remove inner Single Bolt Plate and hardware on mounting stud**

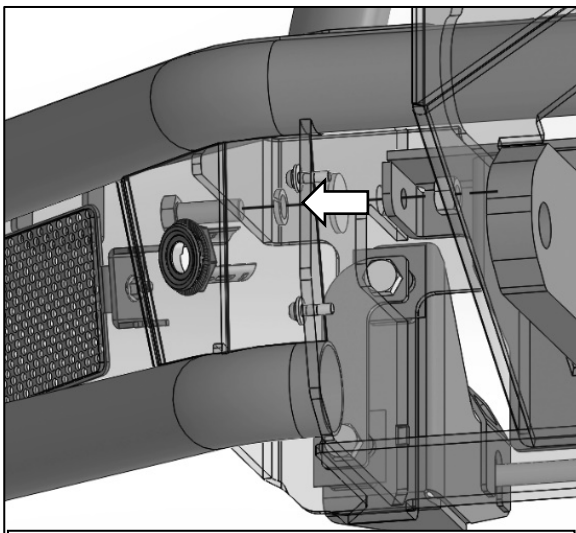

**(Fig 3) Remove hardware holding Winch Tray in Bumper**


Follow (Fig 4 – 15) to attach Brackets, then install Push Bar and connect Push Bar Wings. Then reinstall U-covers. Ensure fasteners are hand tight at this point.

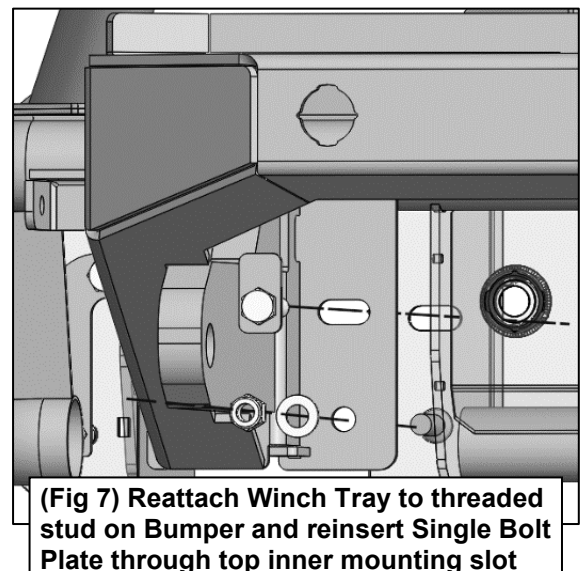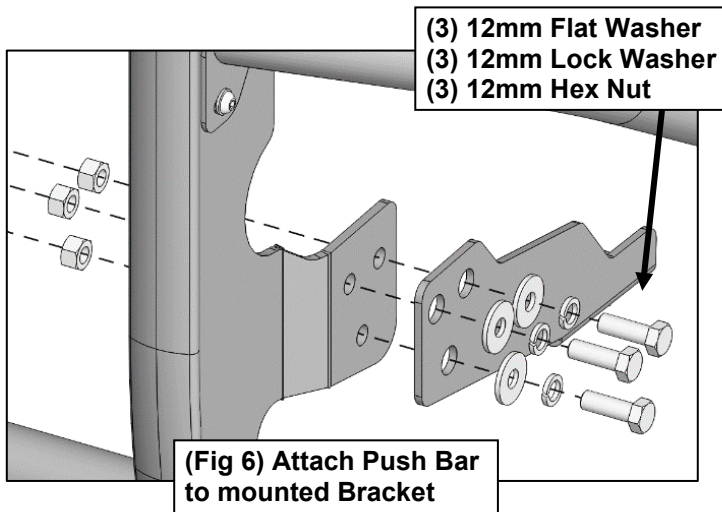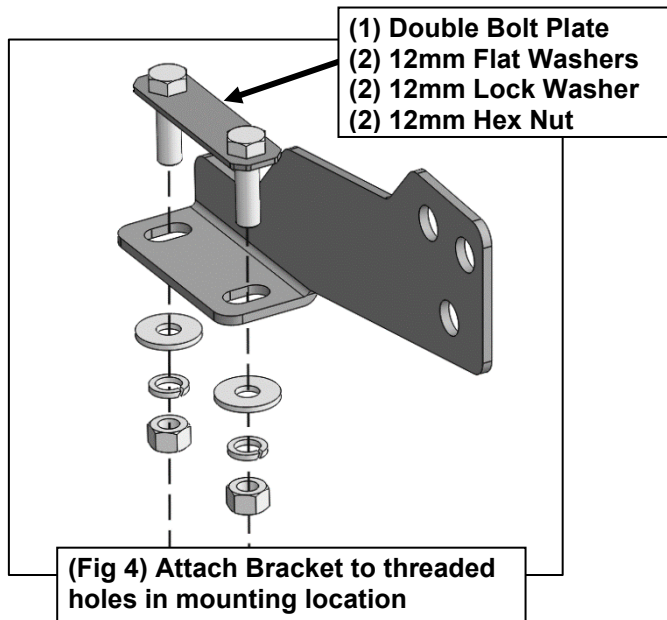

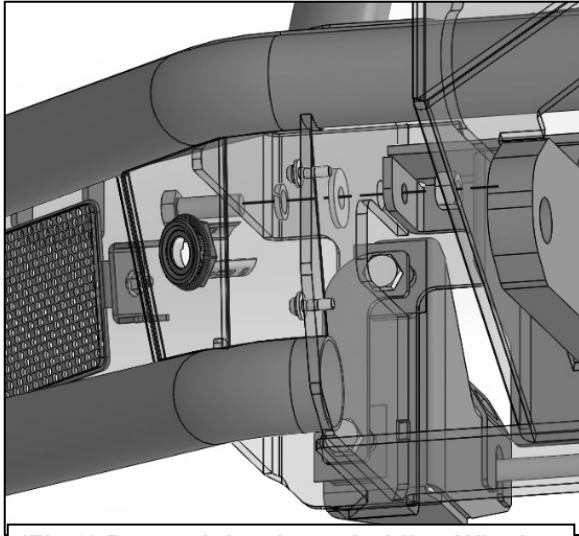

**(Fig 8) Reattach hardware holding Winch Tray in Bumper**

- (2) 8mm Button Head Bolts
- (2) 8mm Flat Washers
- (2) 8mm STD Flat Washers
- (2) 8mm Lock Washers
- (2) 8mm Hex Nuts

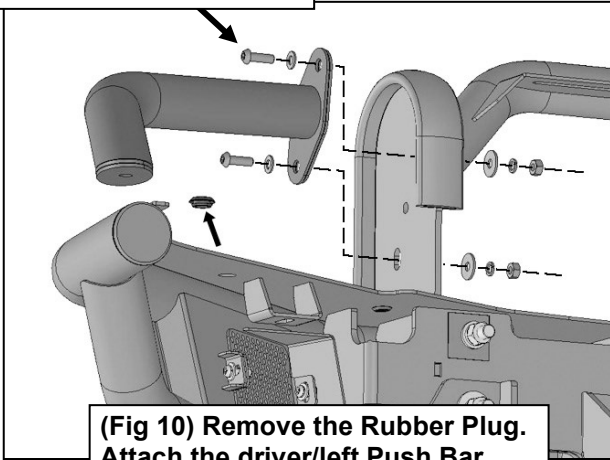


**(Fig 10) Remove the Rubber Plug. Attach the driver/left Push Bar Wing to the Push Bar upright**




**(Fig 9) Attached Push Bar and Winch Tray**

- (1) 8mm Combo Hex Bolt

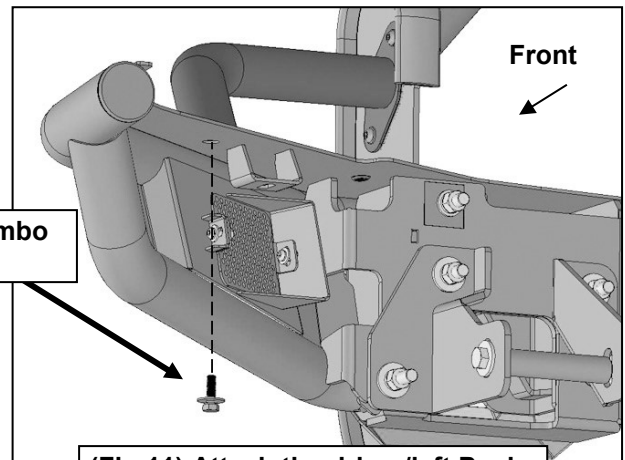


**(Fig 11) Attach the driver/left Push Bar Wing to the top of the Bumper**

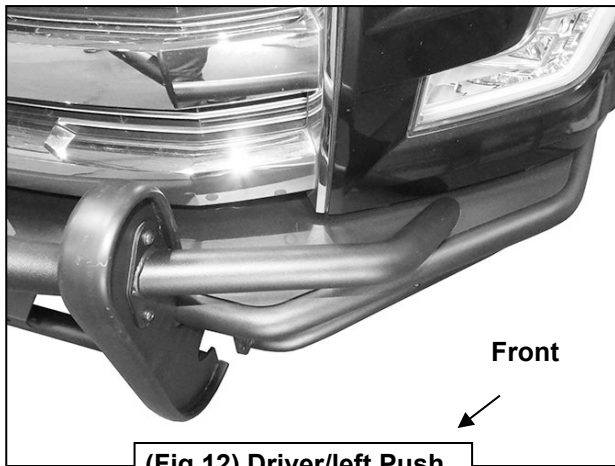


(Fig 12) Driver/left Push Bar Wing installed


- (1) 8mm x 16mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm STD Flat Washer

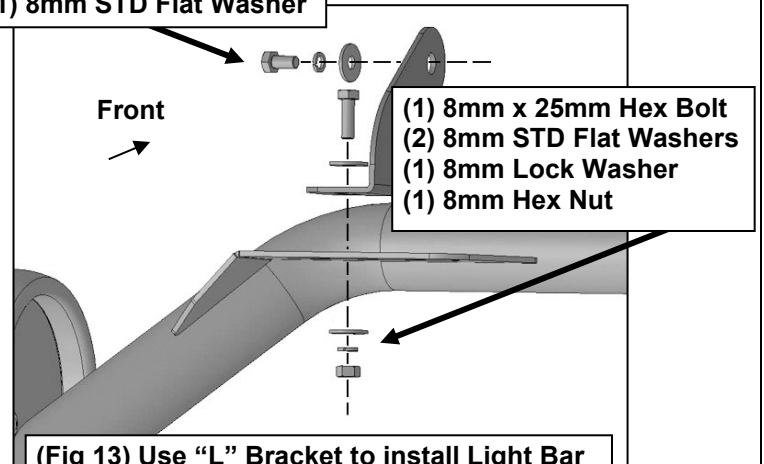

(Fig 13) Use "L" Bracket to install Light Bar (not included) to tab on back of Push Bar

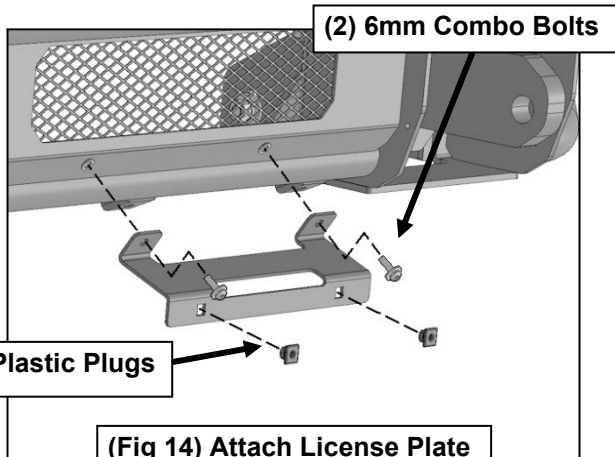

(Fig 14) Attach License Plate Bracket to front of Bumper

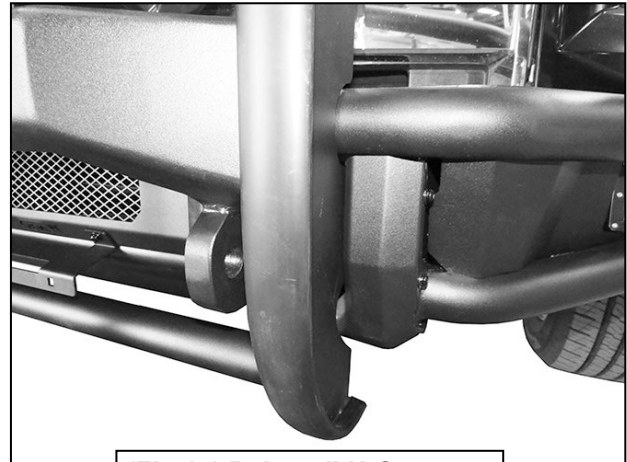

(Fig 15) Reinstall U-Covers

**3**

Ensure Push Bar is level and properly fit, then tightened all fasteners. Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete installation pictured with winch and lights (not included)