

SMOKED LED MIRROR MOUNTED TURN SIGNALS

(2009-2014 F-150)

(2010-2014 F-150 RAPTOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Light Assembly
- (2) RH Light Assembly
- (2) 'T' Harnesses
- (2) Harness Connectors

TOOLS REQUIRED

- Gloves
- T-20 Torx Bit
- Soft Pry Tool

STEP 1




While wearing gloves, carefully remove the mirror glass. Tilt the glass down so that the top edge is accessible.

STEP 2




The glass is clipped into the mirror housing, firmly pull the glass away from the mirror housing to dislodge it from the clips. If equipped with heated mirrors remove the power cables by unclipping them from the back of the mirror.

STEP 3

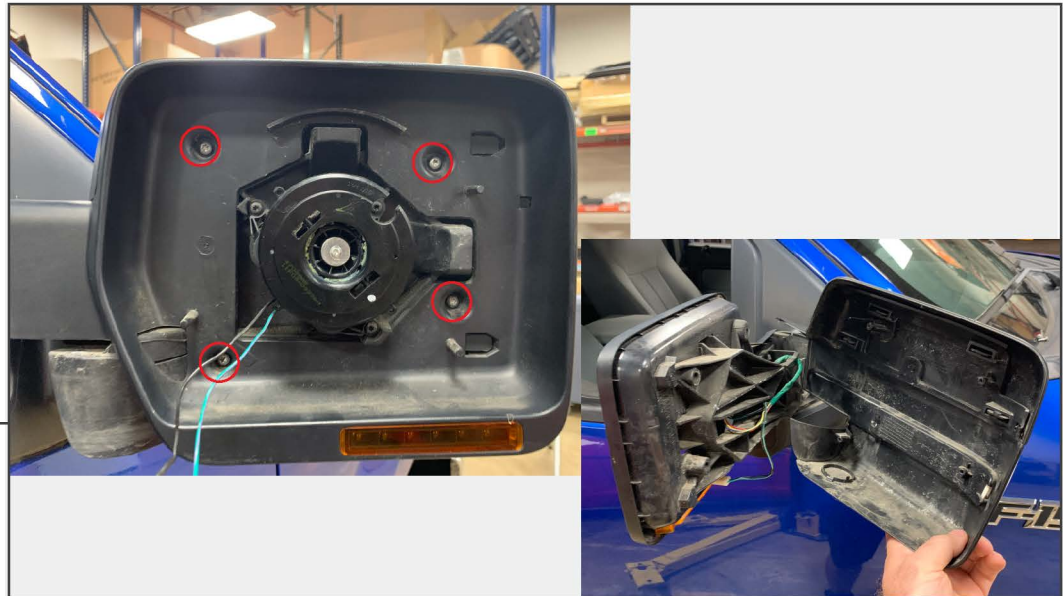

Using a T-20 Torx bit, remove the (4) screws that secure the mirror shell to the vehicle. Pull the shell away from the mirror housing.

STEP 4

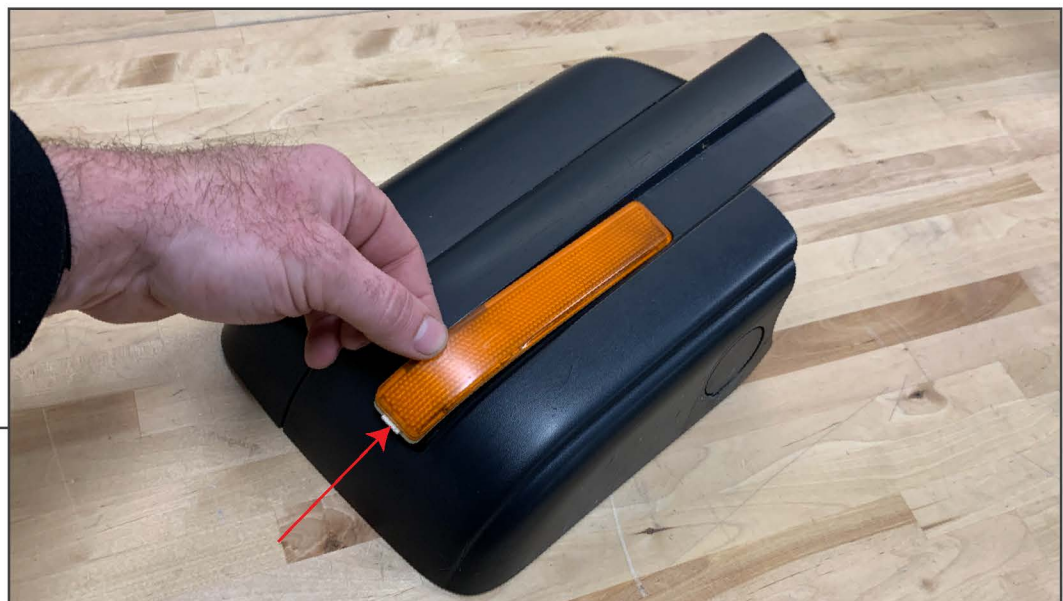


Remove the original orange reflector from the outer mirror shell. Pry on the outer edge to unclip it from the housing.

STEP 5




Pass the lights wiring through the mirror shell and clip the light into the mirror shell.

STEP 6

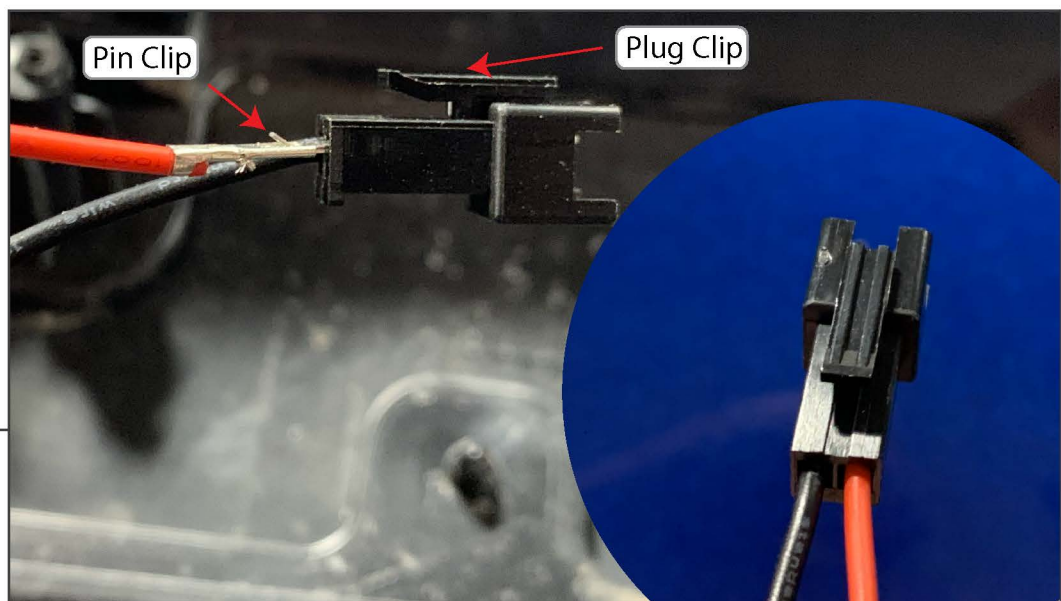


Insert the wiring pins coming off the light into the supplied plug.

**Note the orientation of the pin clip to the plug as well as the location red wire in the plug. If the wires are not in the correct orientation, the light will not work.

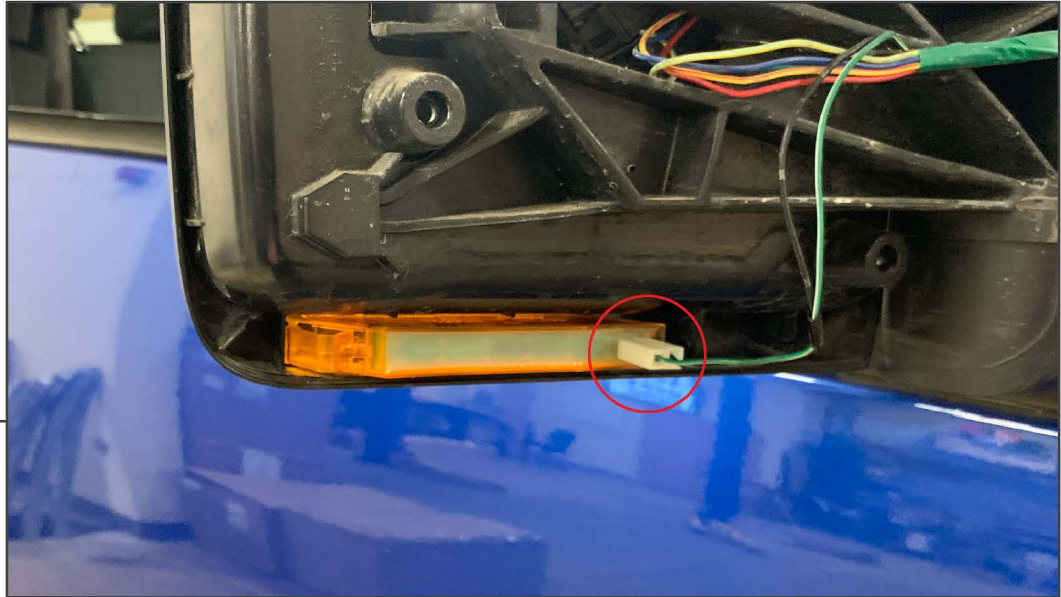

STEP 7

Remove the factory wiring harness from the light.

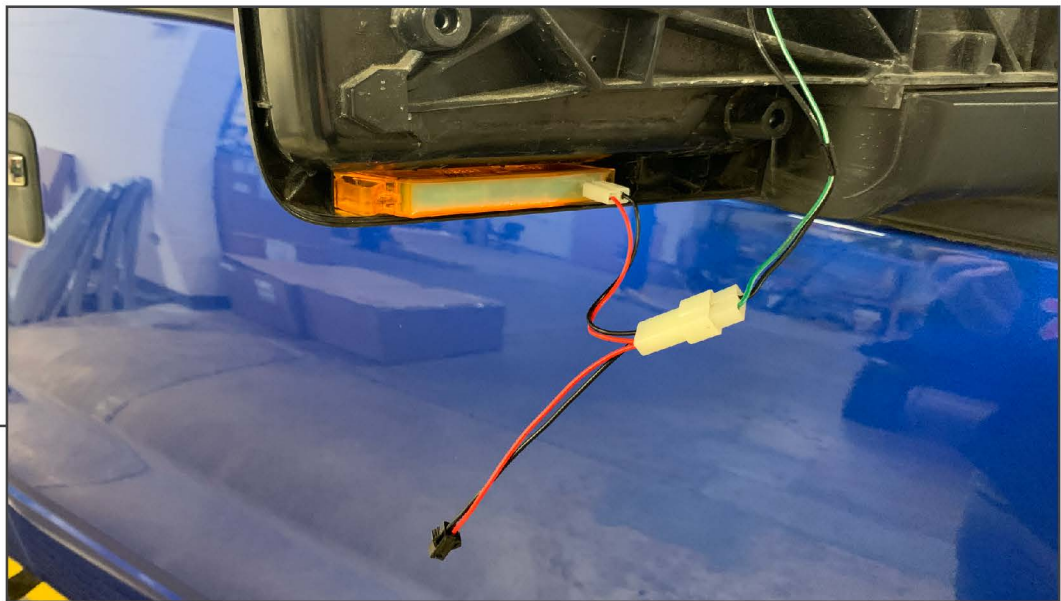

STEP 8

Install the supplied 'T' harness. Plug the assembled plug from step 6 into the adapter harness.



STEP 9

Test the light by turning on the respective turn signal. Once the light is confirmed working, follow steps 1-3 in reverse order to re-assemble the mirror assembly.

Installation is now complete.