


INSTALLATION INSTRUCTIONS

**HD4 HD BN Hoop
18-20 Ford F150
T604004**

Installation Instructions

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	BN Hoop	8	8mm Lock Washers
1	PS/right LED Bracket	2	8-1.25mm x 25mm Hex Bolt
1	DS/left LED Bracket	2	8-1.25mm x 16mm Hex Bolt
4	8-1.25mm x 25mm Button Head Allen Bolt	1	5mm Allen Wrench
14	8mm x 24mm x 2mm Flat Washers	6	8mm Hex Nuts

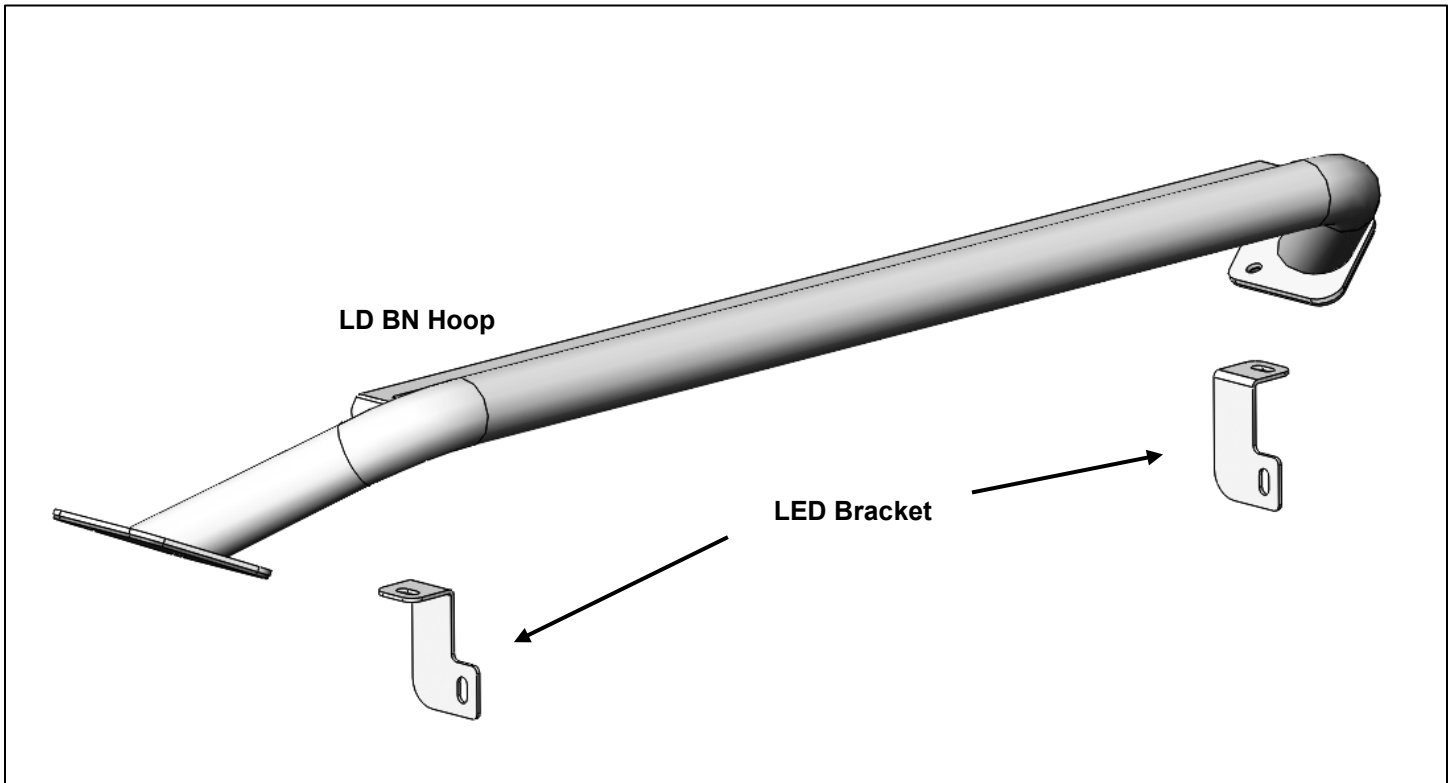


TOOLS REQUIRED




1

Follow (Fig 1 – 3) to attach LD BN Hoop to LD Bumper, then attach LED Brackets and LED Light as necessary. Ensure BN Hoop is level before tightening fasteners.

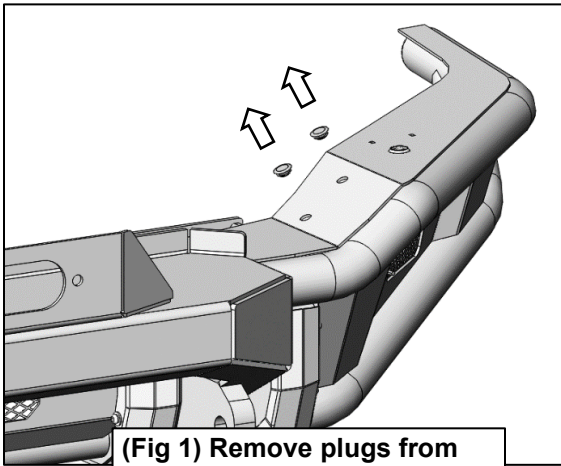


(Fig 1) Remove plugs from inserts on top of Bumper

- (1) 8x1.25x25mm Hex Bolt
- (2) 8mm Flat Washer
- (1) 8mm Lock Washer
- (1) 8mm Hex Nut

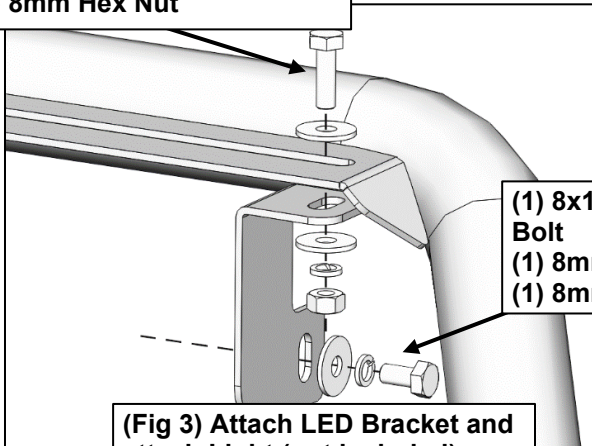

(Fig 3) Attach LED Bracket and attach Light (not included)

- (1) 8x1.25x16mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm Flat Washer

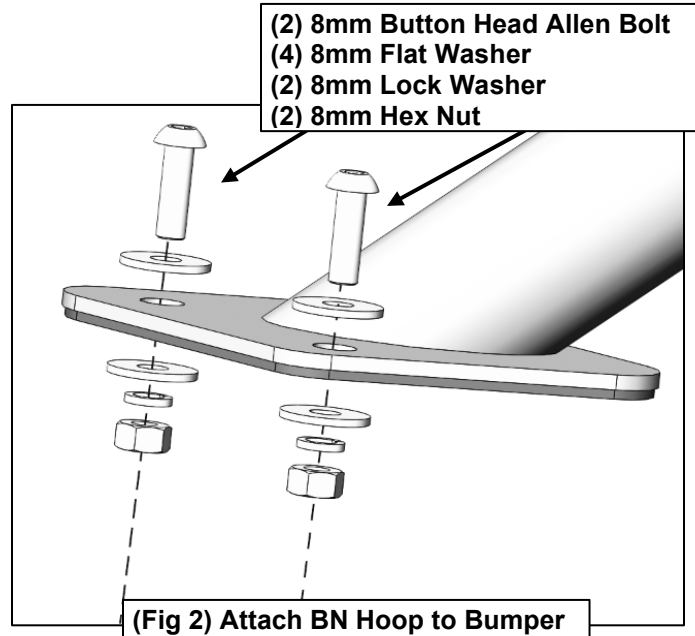

(Fig 2) Attach BN Hoop to Bumper

- (2) 8mm Button Head Allen Bolt
- (4) 8mm Flat Washer
- (2) 8mm Lock Washer
- (2) 8mm Hex Nut



**Completed Installation
(Lights not included)**