



Speed Demon[™] LIGHTS

Installation Guide for 2017 - 2020 Ford Raptor Fog Light Mounts (10-30241)

Parts Included

- 1 X Driver Light Mount Bracket
- 1 X Passenger Light Mount Bracket

Tools Required

- Various Socket Sets
- Various Wrenches
 - Ratchet Tool
- Ratchet Extensions



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION.

Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model.

- * Application models vary, we recommend to verify fitment before beginning installation process.
- * Images featured in the instruction documents may not always exactly match your model or part.

STEP 1

Remove the 8mm head bolt on the bumper brace and on the bumper side, while simply loosening the bolt on the other end of the brace to allow it to dangle.

See Figures 1 & 1.1

FIGURE 1

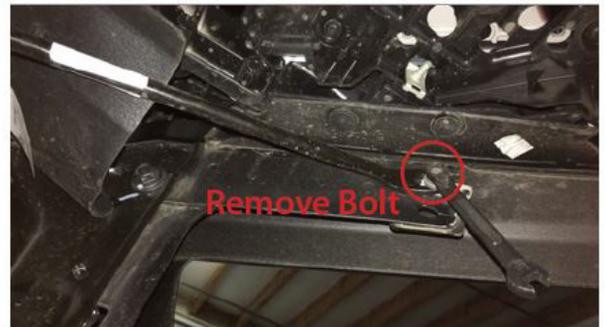


FIGURE 1.1





Speed Demon[™] LIGHTS

Installation Guide for 2017 - 2020 Ford Raptor Fog Light Mounts (10-30241)

STEP 2

Install the Speed Demon LED fog light bracket as shown. Using the provided hardware, install the M6 bolt and washer through the bumper brace.

NOTE: Mounts are labelled D (drivers side) and P (passenger side)

See Figure 2

FIGURE 2



STEP 3

Install the provided M6 carriage bolt and M6 flange head nut as shown. Do not fully tighten the bolts yet as further adjustment is required.

See Figures 3 & 3.1

FIGURE 3



FIGURE 3.1





Speed Demon LIGHTS™

Installation Guide for 2017 - 2020 Ford Raptor Fog Light Mounts (10-30241)

STEP 4

Install the extended drop mount brackets for each light (as shown) making sure to pre-install the carriage bolts.

See Figure 4

FIGURE 4



STEP 5

Once the bracket is on, install the lights. Adjust the bracket and lights for proper fitment then fully tighten all bolts.

Speed Demon mounts come with a 1 year warranty.