



AMERICAN MODIFIED

SKU # AMFMAA00138

ARMOR GRILLE

Product Installation Instructions


Fitment : 2009-2014 Ford F150

STEP 1



Remove the eight screws onto the front hood and six screws holding it down to the actual face of the hood.

STEP 2

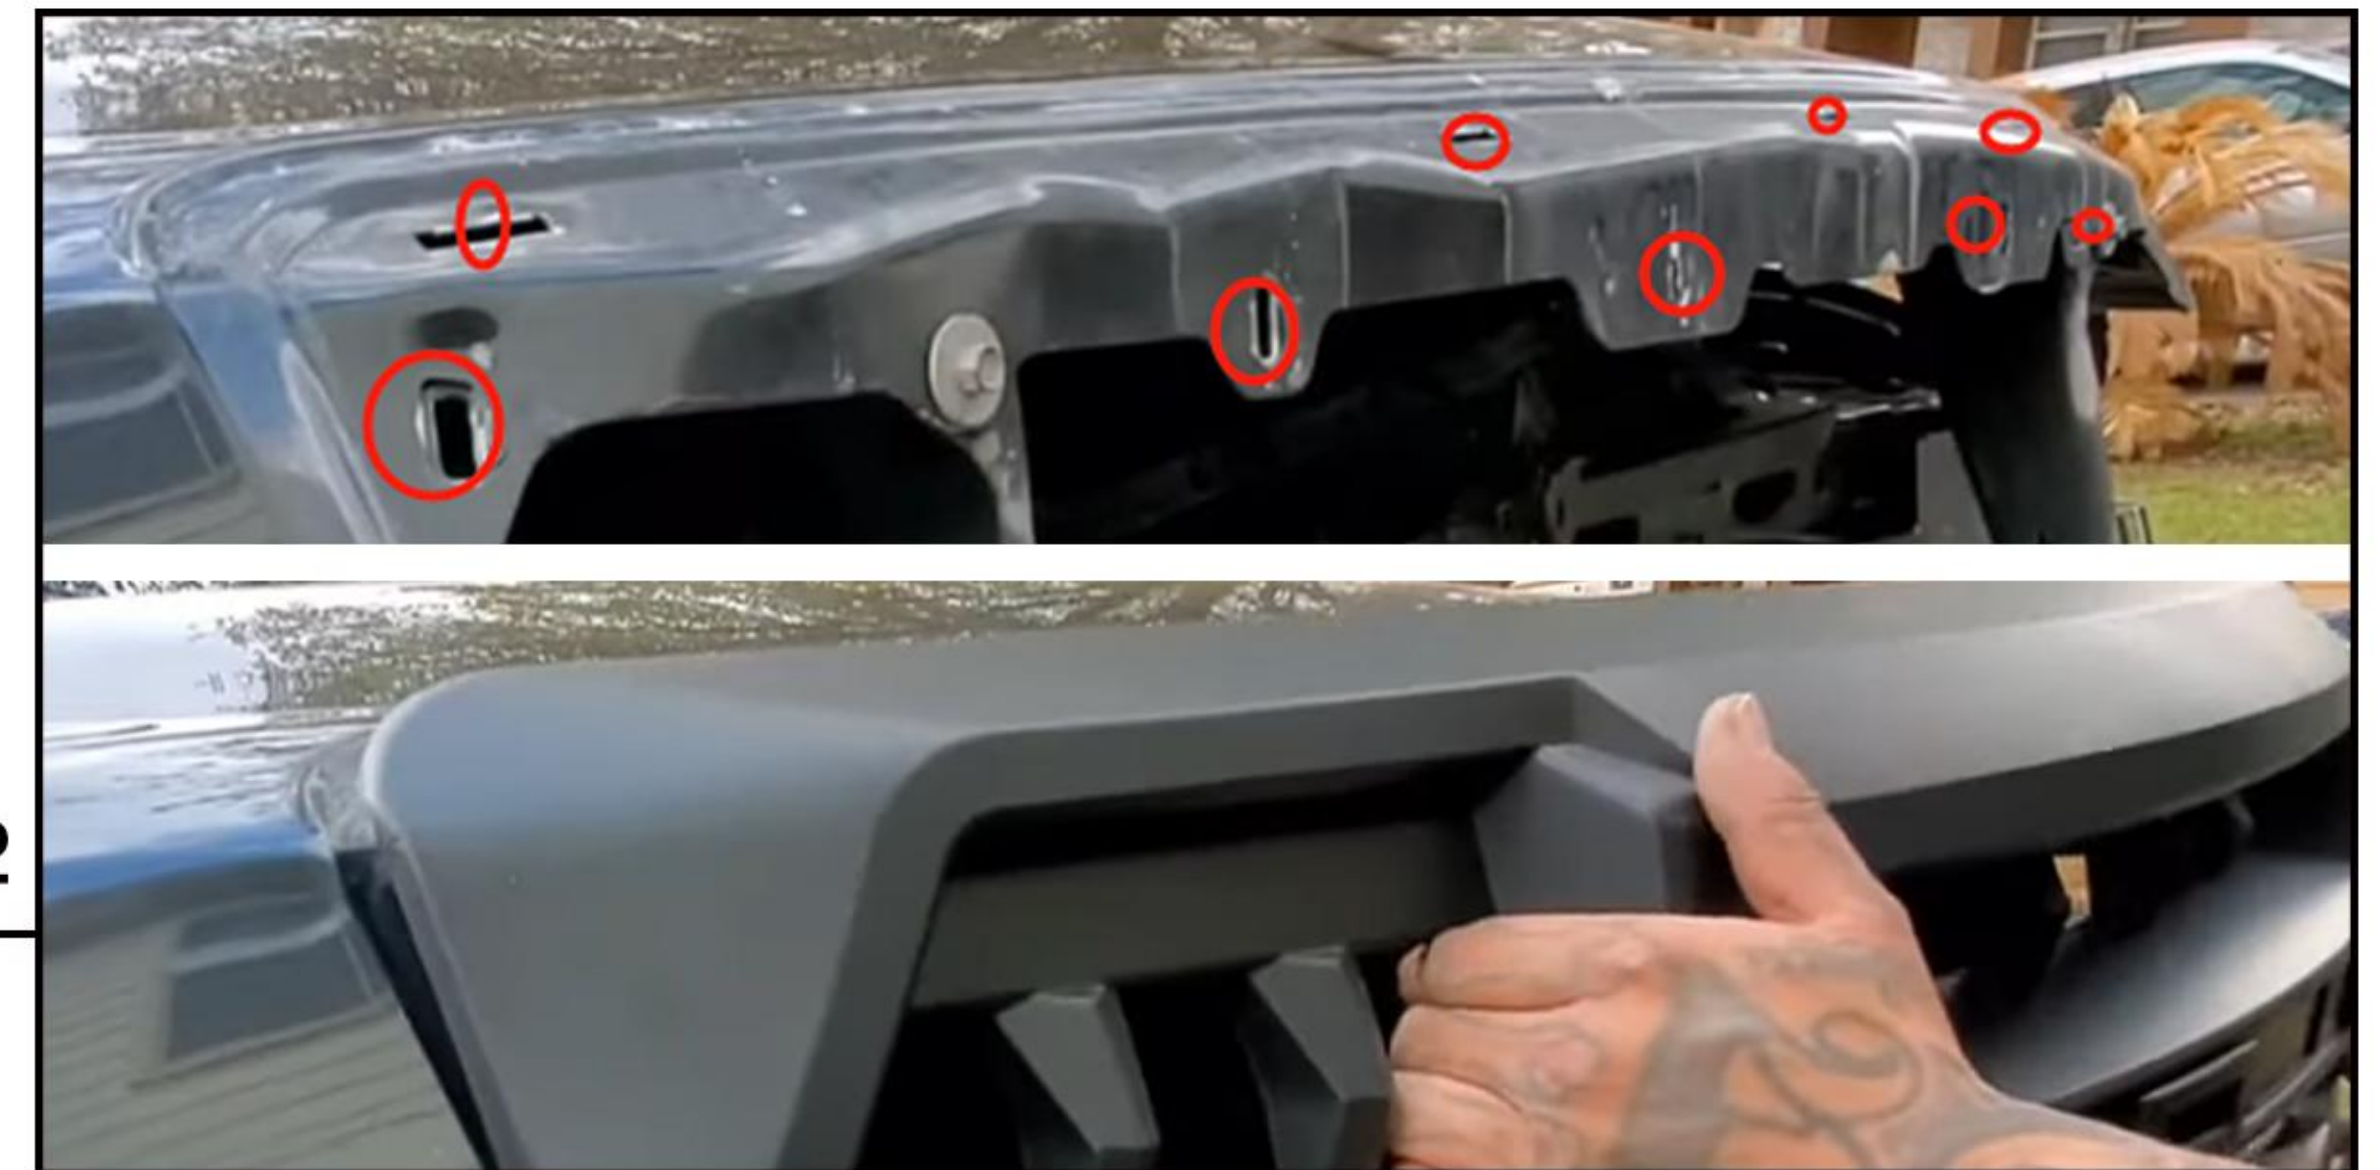

Pop the clips right up in the holes that was circled in the picture and screw the new grille.

STEP 3



Wiring process:
put the red wire into the hot on the low beam;
put the black wire into the negative on your low beam.

STEP 4



Complete the installation.