



AMERICAN MODIFIED

SKU # AMFMAA00139 & AMFMAA00115

ARMOR GRILLE

Product Installation Instructions


Fitment : 2015-2017 Ford F150

STEP 1



Remove all the little pushpins to remove this shroud piece.

STEP 2

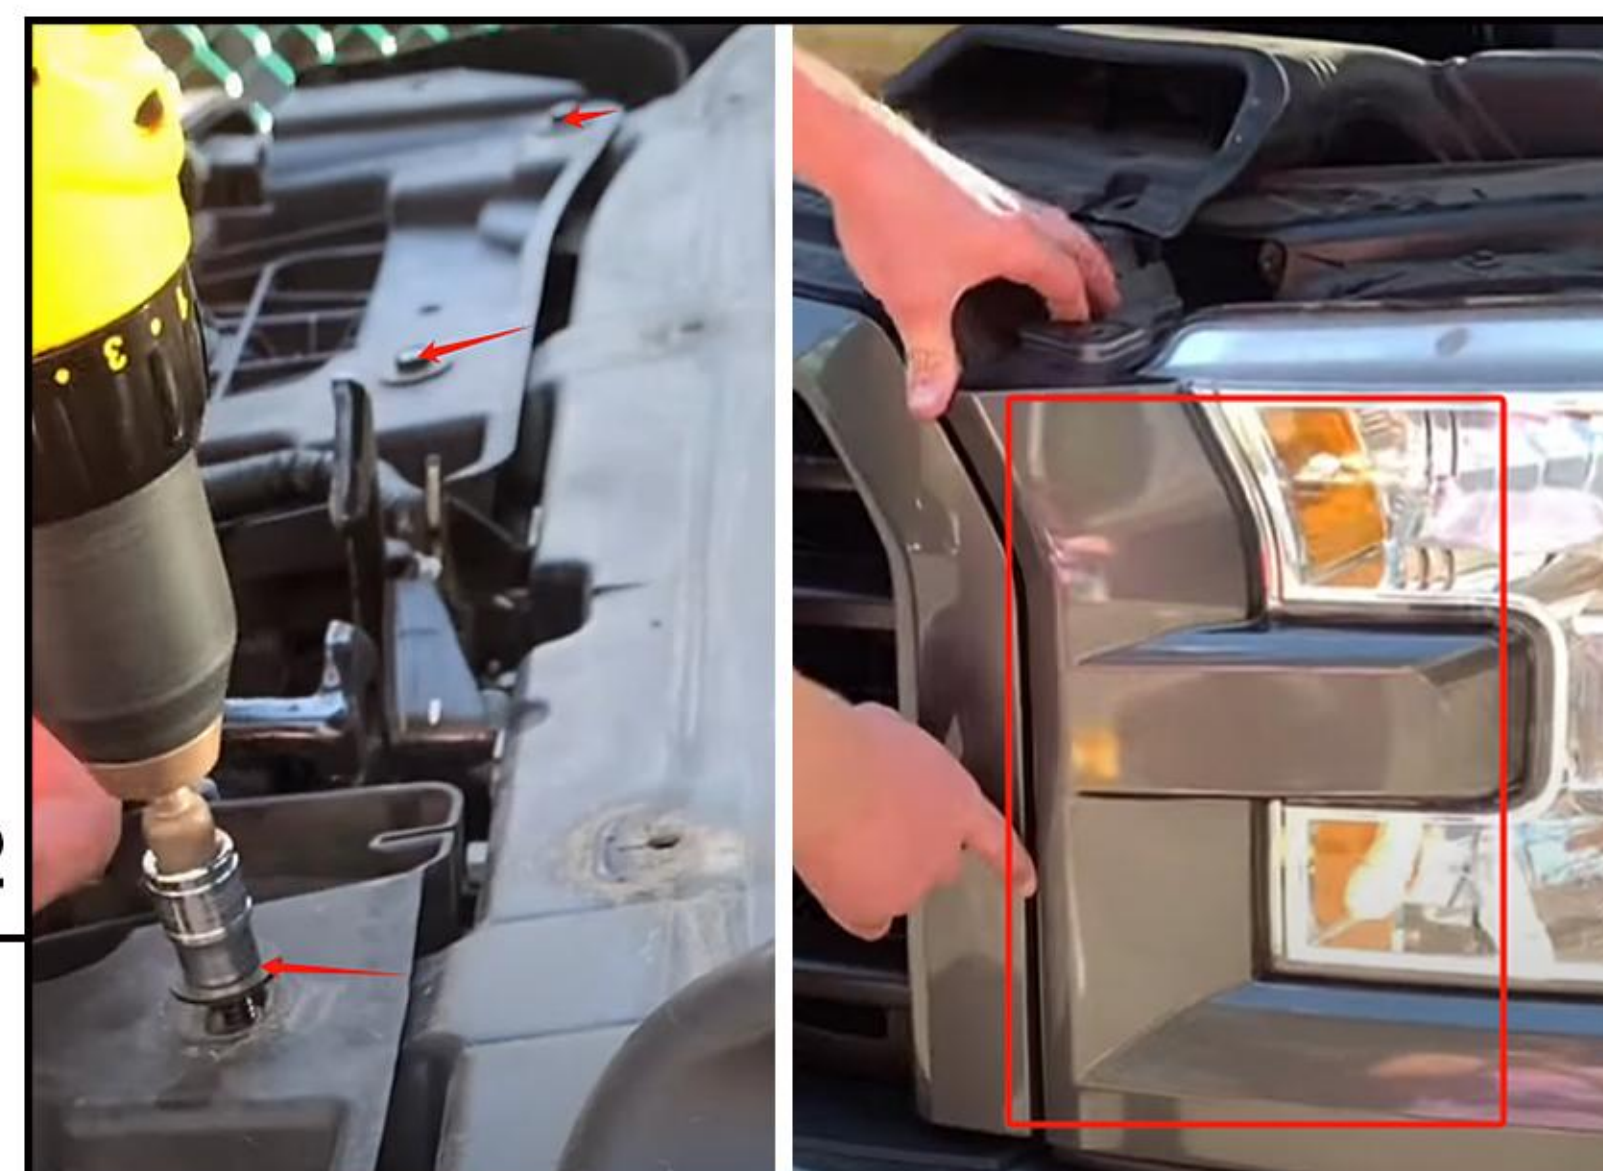


Then remove 4 bolts; Gently pry open the left and right circled parts from top to bottom to reveal the bolts inside, then remove the two bolts.

STEP 3




Move down as shown in the picture, remove necessary pushpins and bolts of this part to separate the grille.

STEP 4

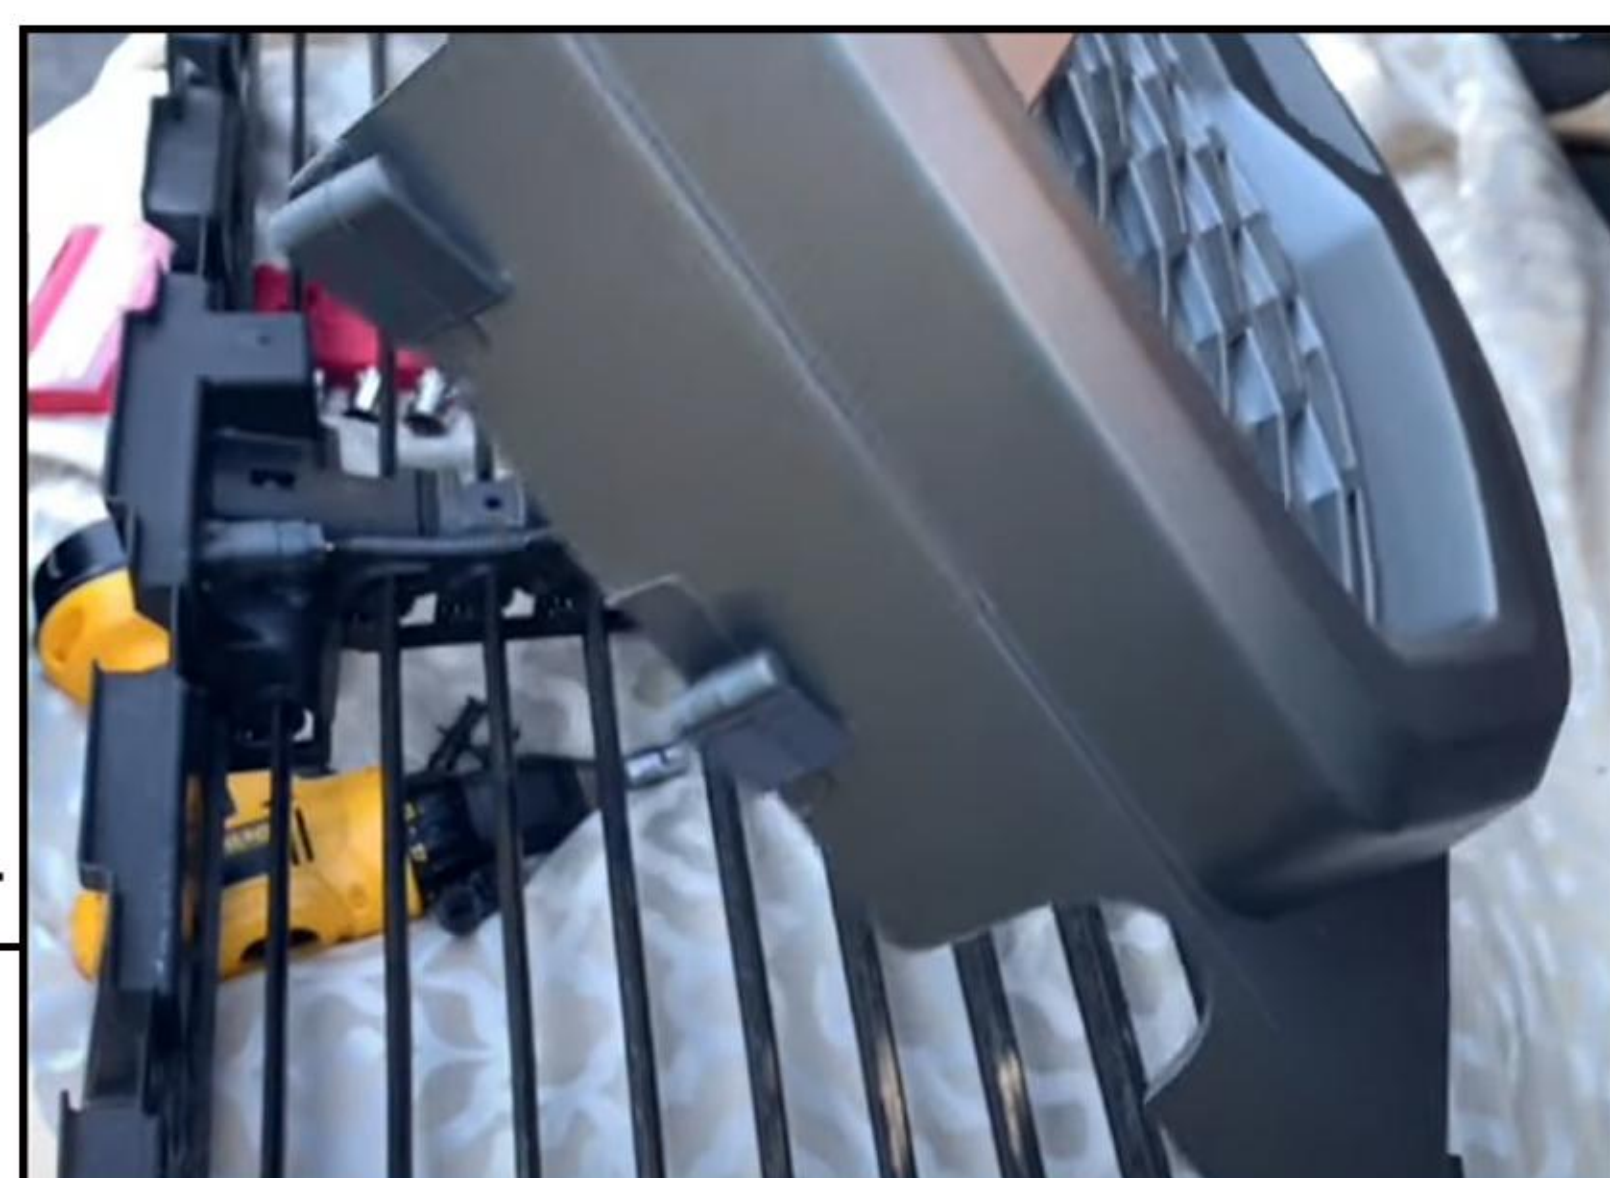

Install the new grille onto it, and do the opposite of step 1 & 2 to put back together.

STEP 5

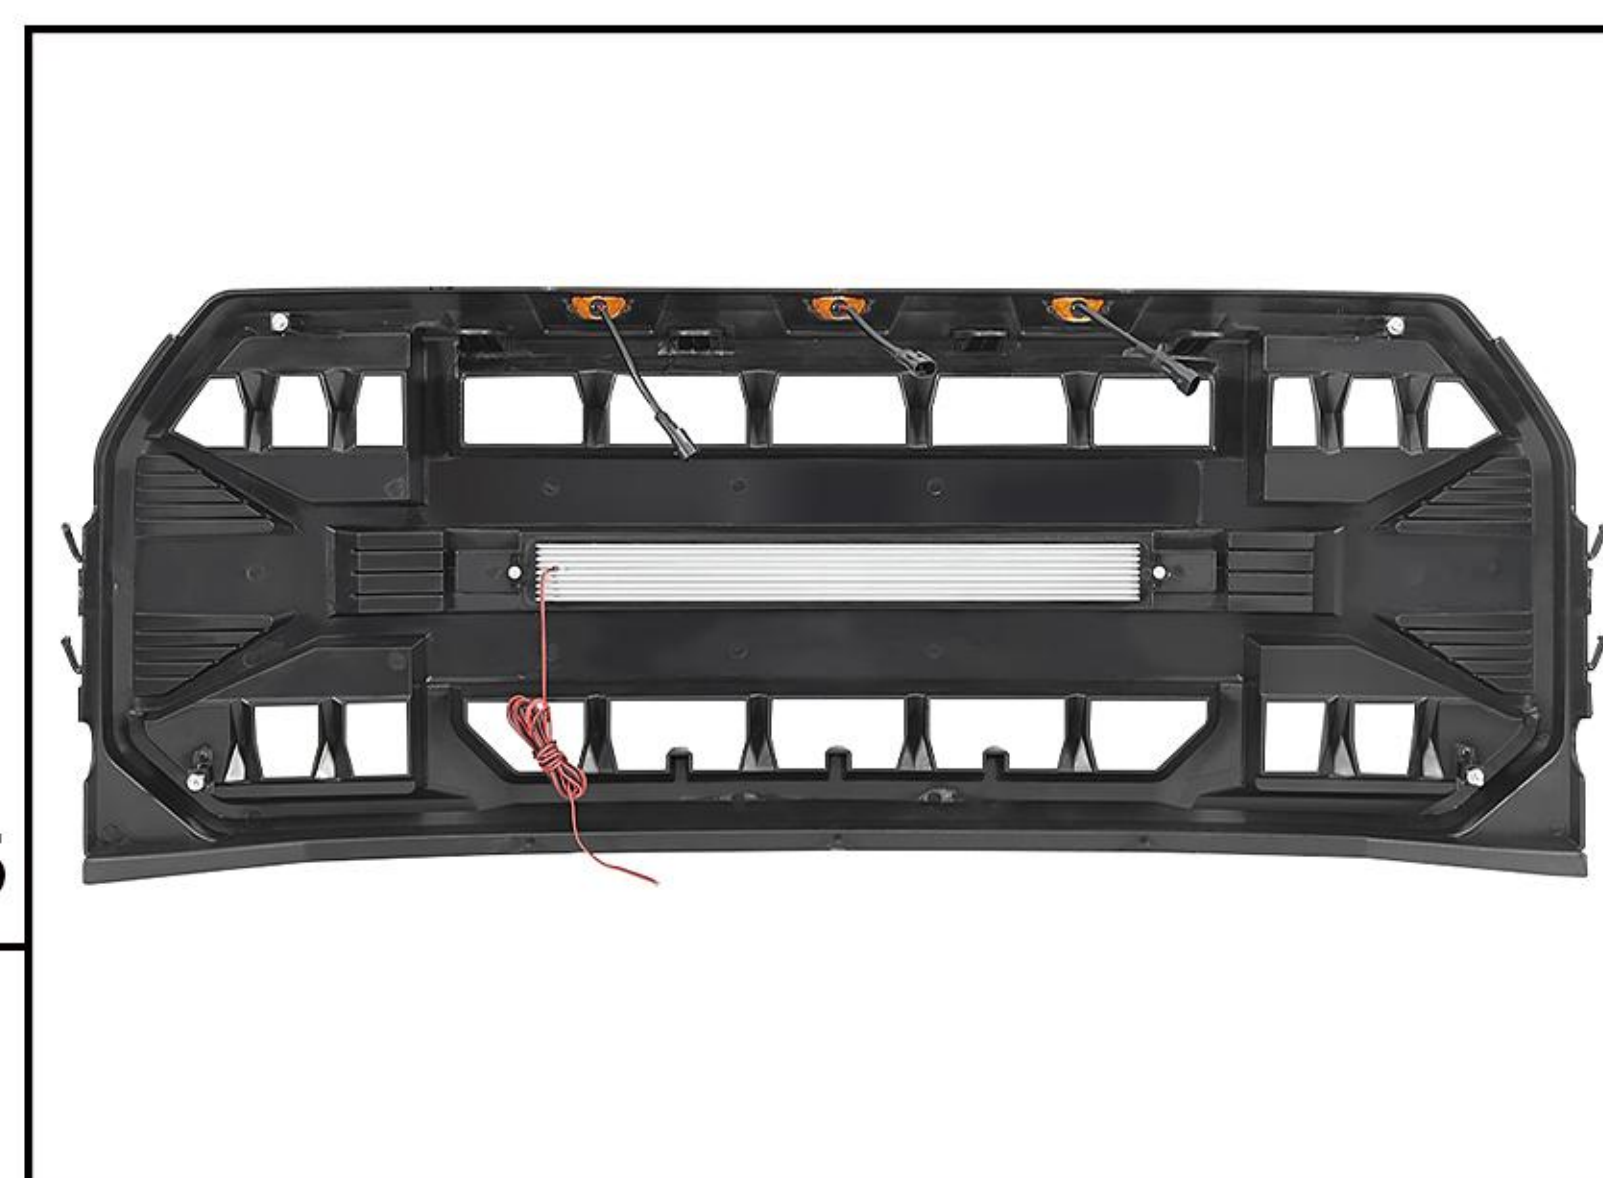

Amber lights wiring: First connect each amber light to the wiring harness, then connect the red wire to ACC, and the black wire to the negative of battery.
DRL wiring: The red wire connects to headlights and the black wire connects to the negative of battery.

STEP 6



Install the new grille onto the vehicle in the opposite process of removing the grille.