



AMERICAN MODIFIED

SKU # AMFMAA00140

ARMOR GRILLE

Product Installation Instructions


Fitment : 2018-2020 Ford F150

STEP 1



Remove the fasteners on both sides and remove the lower bumper cover. Remove 14 bolts and take off the plastic trim piece.

STEP 2

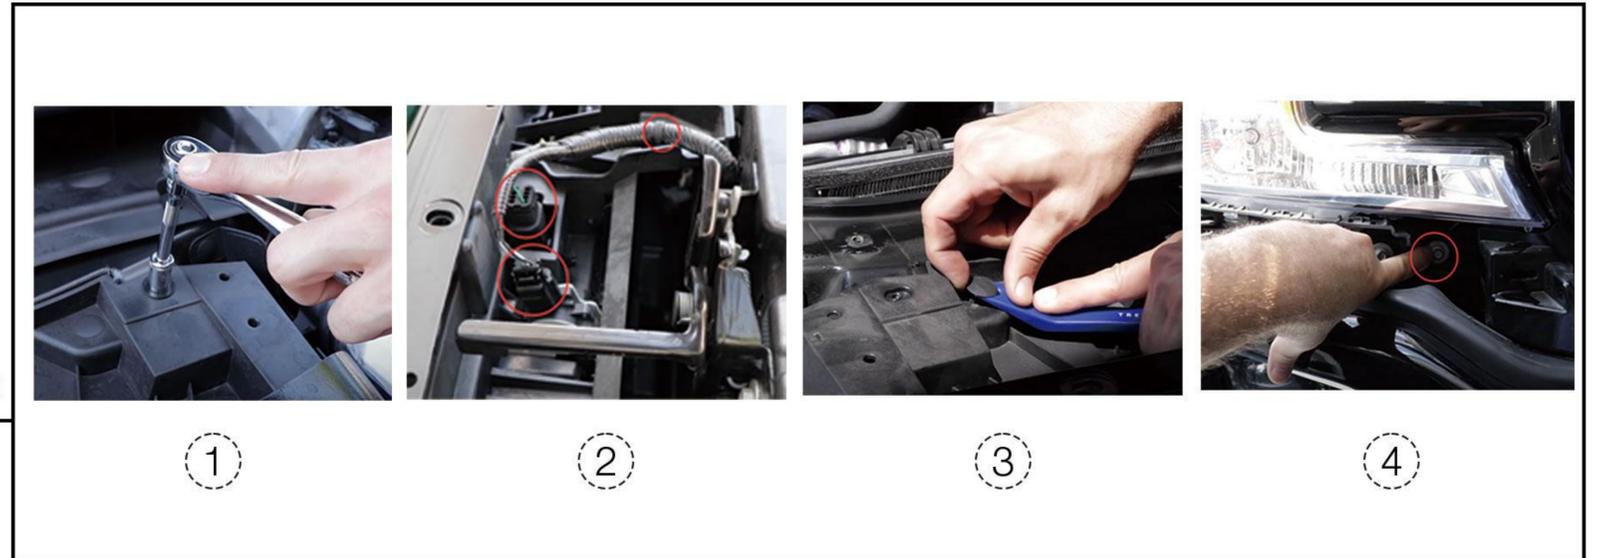

1. Remove the four fasteners on the top portion of the grille.
2. Disconnect the 2 wiring hardware connectors and pry up the wiring hardware connector.
3. Remove the last remaining upward bolts on both sides.
4. Remove the bottom fasteners on each side of the grille.

STEP 3



Put the new grille to the vehicle and align all the clips to the holes and clip them in.

STEP 4



The red wire connects to headlights, the black wire connects to negative of the battery.

STEP 5



Fix all the bolts and finish the installation of new grille. (You can DIY changing the Letters in the grille by yourself to be any words you prefer.)