


■ Back Camera

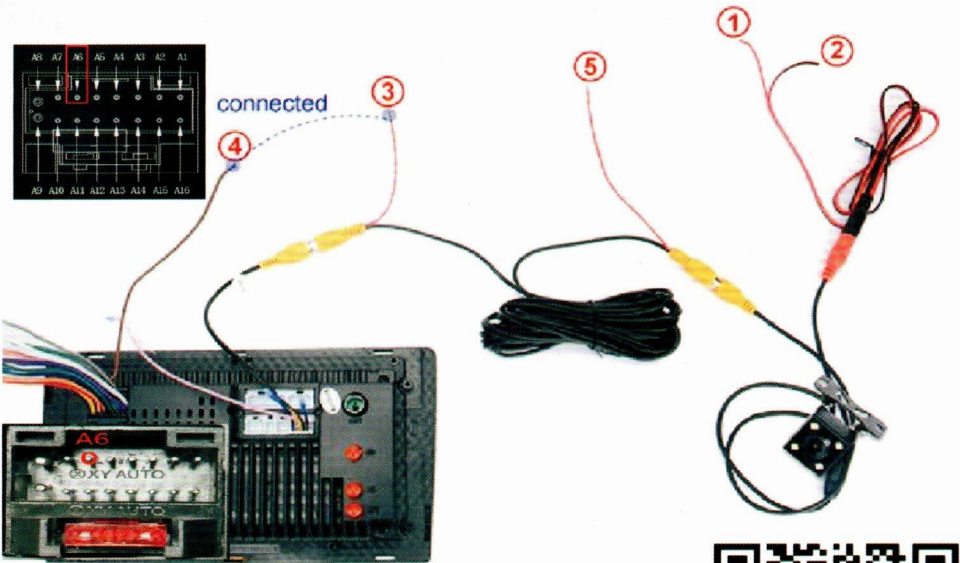

1. Find A6 pin and peel the wire, connect it with ③

2. ① and ⑤ connect to reverse light +

3. ② Connect to reverse light -


[▶ Install Video](#)

Noted: Usually the radio have canbus box, no need to connect to A6.

If not trigger the reverse, then need to connect to A6.



■ Connect the RCA for OEM Amplifier

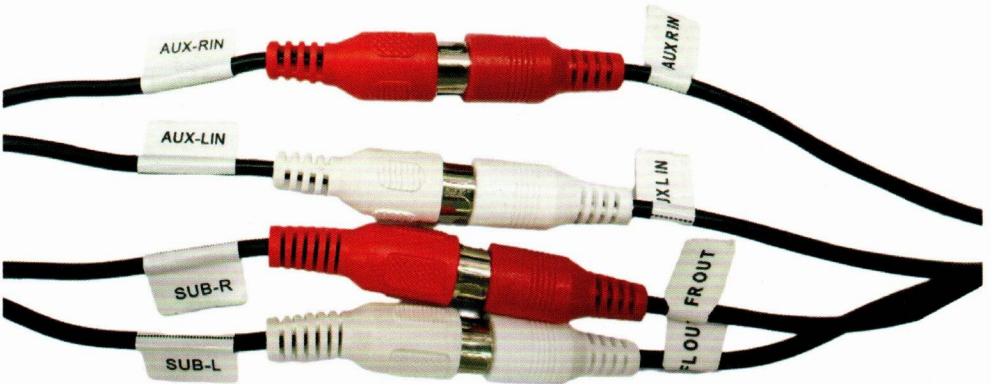

If you need Tech Support or have any question with the Device, please connect us

Email: ustopdisplay@gmail.com

Tel : 5857107939



For Ford F150 2009-2014

Important

- This is the reverse camera signal wire. It have the bluetooth and Wifi antenna on it.
So MUST CONNECT IT TO RADIO, to have better performance for BT and Carplay/AA.



■ Wire Diagram

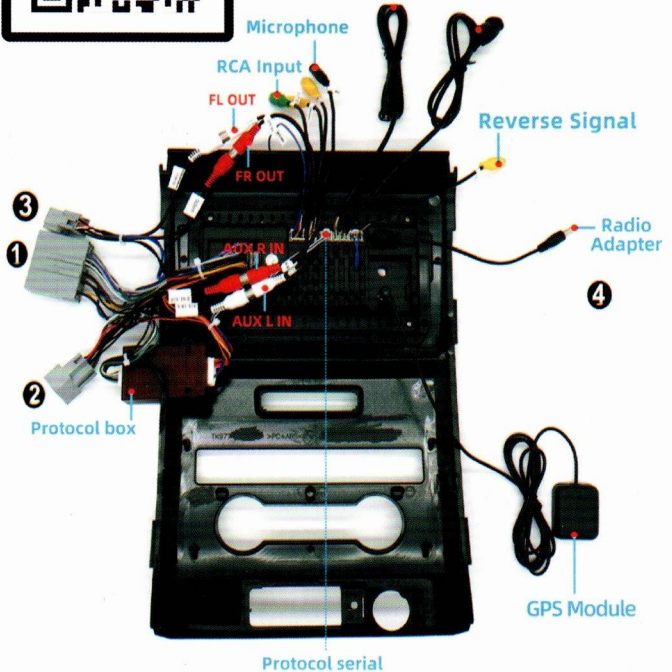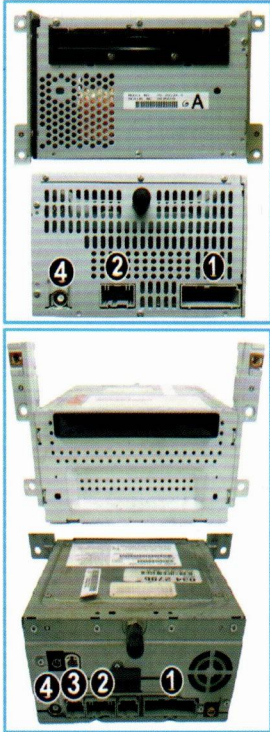

- 1 Power/Speaker Port
- 2 Can bus Port
- 3 Audio Port
- 4 Radio adapter

The RCA Red and white jack are for the amplifier, please connect them. The wire diagram for the RAC jack on next page.

If you need Tech Support or have any question with the Device, please connect us

Email: ustopdisplay@gmail.com Tel : 5857107939