



BED RAIL TRIM MOLDING SET

(2015-2020 F-150 - 5.5' BED)

INSTALLATION INSTRUCTIONS

CONTENTS	TOOLS REQUIRED
(1) LH Front Bed Rail Panel	Pliers
(1) LH Rear Bed Rail Panel	Exterior Detailer
(1) RH Front Bed Rail Panel	Microfiber Cloth
(1) RH Rear Bed Rail Panel	
(2) Alcohol Prep Pads	

SKU # T632986




STEP 1



Locate the retainers securing the OEM side rail to the bed. Most of the retainers are visible from under the vehicle, and also within the bed. Use pliers to press the tabs together while lifting the bed cap upwards.


Note: Pulling upwards on the side rail without depressing the clips is likely to break the retaining clips on the original side rail cover.

STEP 2

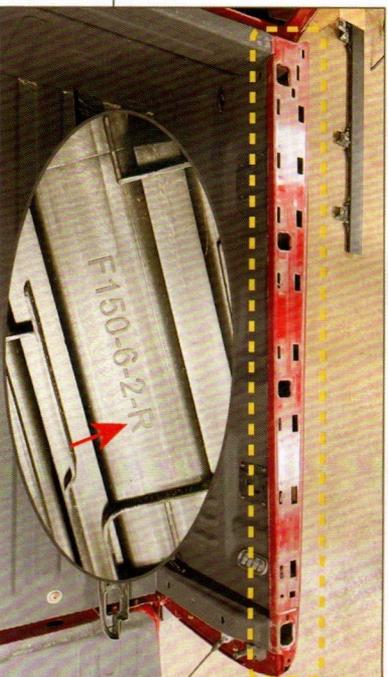


Clean the vehicle bed using exterior detailer and a microfiber cloth to remove any dirt/debris from the vehicle.

Identify the LH/RH side rail components using the embossed label on the bottom of the side rail panels.

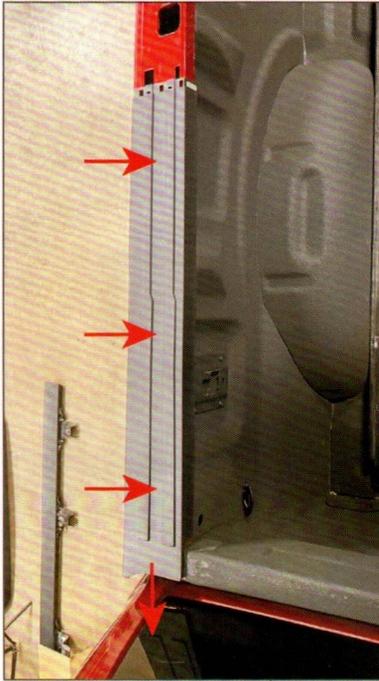

STEP 3

Fit the front-most panel to the vehicle bed, and press into place to fully seat the retaining clips into the bed. Ensure the panel is as far forwards on the vehicle as possible to ensure clearance for the rear panel.

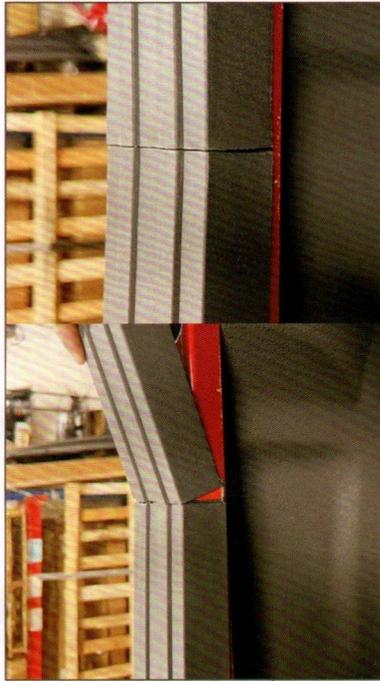

STEP 4

Before peeling the red tape backing, familiarize fitment of the rear panel to the front panel. The tabs on the rear panel will interlock to the front panel.

Clean the double sided tape contact points on the rear panel using the included prep pads and allow to fully dry.



STEP 5

Fit the rear panel into the front panel, and then press into place to fully seat the retaining clips into the bed. Once fully seated in the bed, press the double sided tape to encourage adhesion.



STEP 6

Repeat Steps 1-5 for the opposite side of the vehicle.

Stake hole covers can be removed using a small pry tool, if desired.

Installation is now complete.