

REDROCK

3-INCH NERF DROP STEP BARS

PART #: T651157

FITS:

2009-2014 Ford F150 SuperCrew

2010-2016 Ford F250/F350 Super Duty Crew Cab



60-120 min



Cutting Not
Required



Drilling Not
Required


Torque & Tools

Fastener Size	Tightening Torque (ft-lbs)	Wrench Required		Allen Wrench Required	
☐ 6mm	☐ 7-8.5		☐ 10mm		☐ 4mm
☒ 8mm	☒ 18-20		☒ 13mm		☐ 5mm
☐ 10mm	☐ 35-40		☐ 16mm		☐ 6mm
☐ 12mm	☐ 60-70		☐ 18mm		☐ 8mm

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

Part List

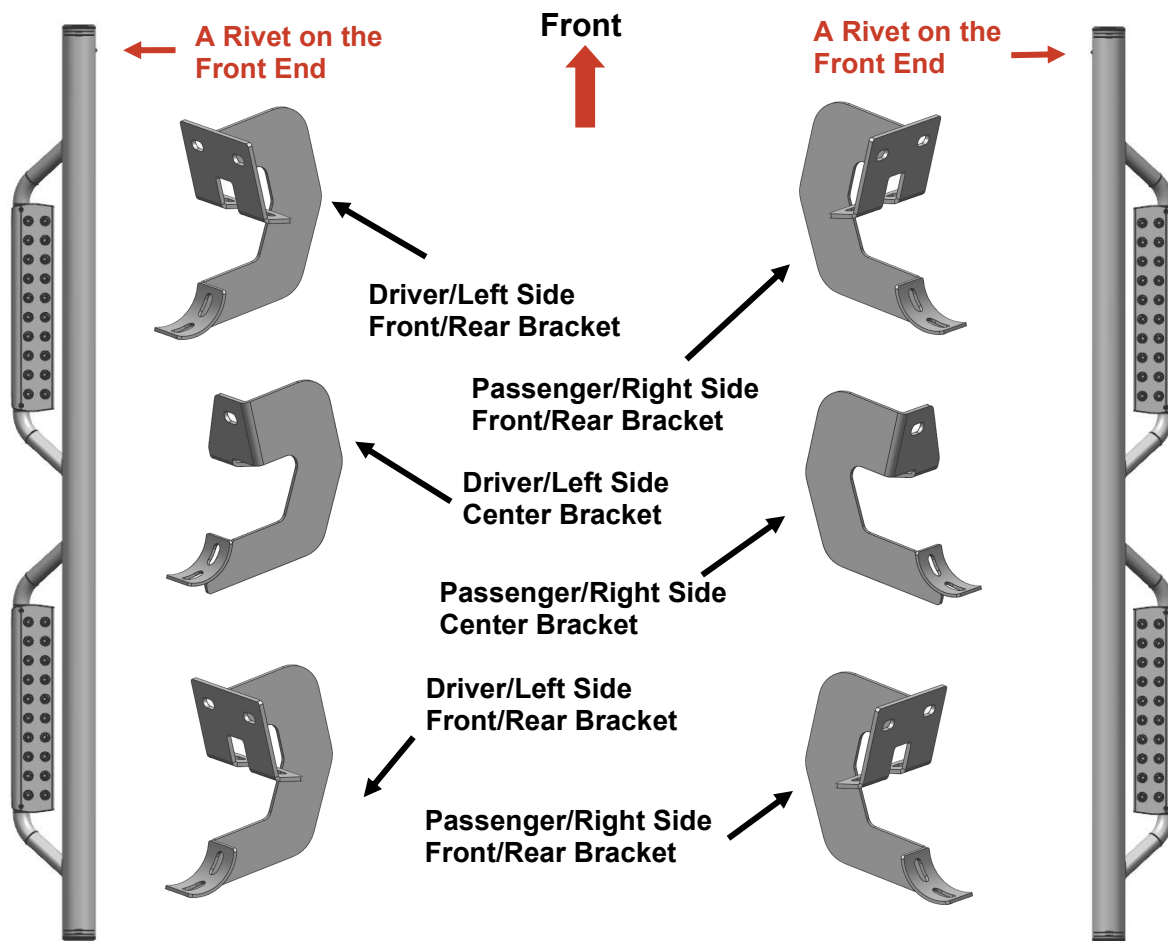

REDROCK




PLEASE NOTE THAT THE FOLLOWING PICTURES ARE BASED ON THE PASSENGER SIDE INSTALLATION

STEP 1

Starting on the Passenger/Right front of the vehicle, add Clip Nuts to the two upper holes (arrows)(Fig 1).

FIG 1

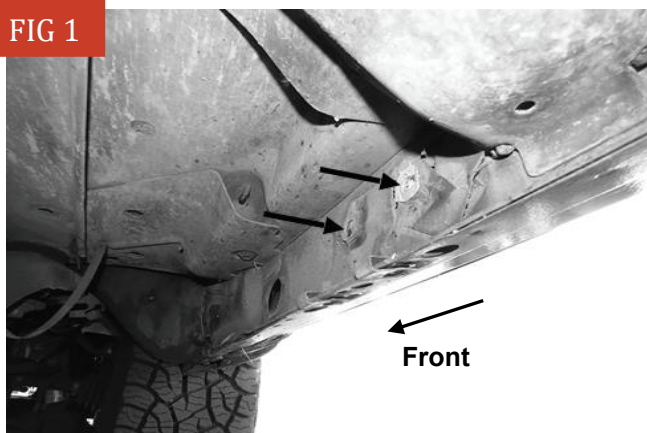


(Fig 1) Passenger/Right front mounting location

STEP 2

Select the Passenger/Right Front/Rear Mounting Bracket. Attach the Bracket to the front mounting location with (4) 8mm Hex Bolts, (4) 8mm Lock Washers, (6) 8mm Flat Washers, (2) 8mm Hex Nut and (2) 8mm Clip Nut, (Figs 2). Do not tighten hardware at this time.

FIG 2

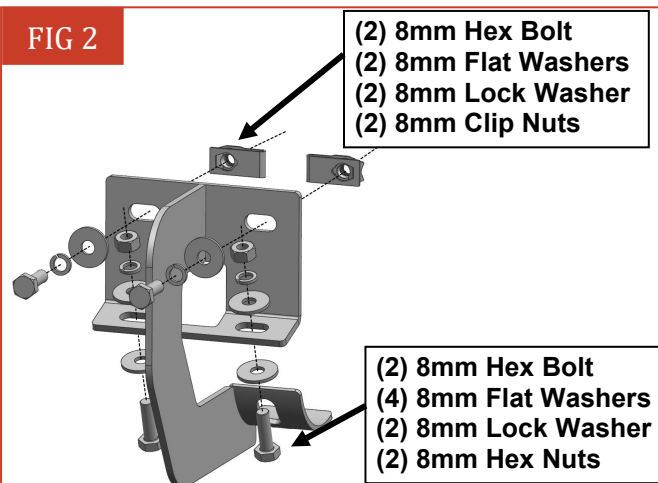


(Fig 2) Attach Passenger/Right Front/Rear Mounting Bracket to the front mounting location

STEP 3

Move along the body panel to the center mounting location, (Fig 3). Select (1) Passenger/Right Center Mounting Brackets. Attach the Mounting Bracket on center mounting location, (Figs 4). Do not tighten hardware.


FIG 3

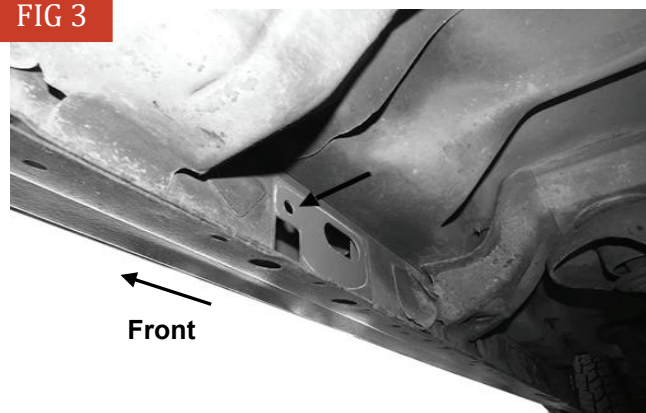

(Fig 3) Passenger/Right center mounting location

REDROCK

FIG 4

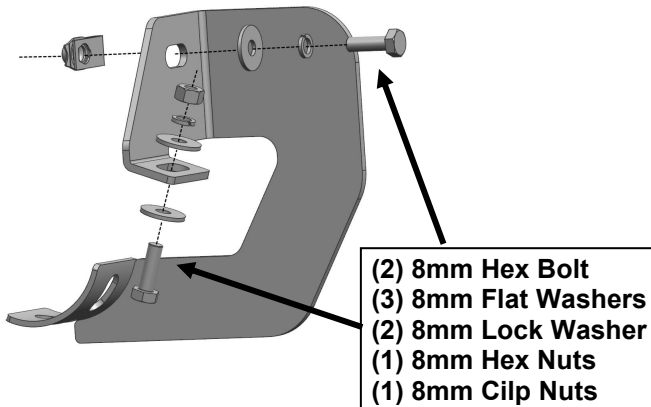


(Fig 4) Attach (1) Passenger/Right Center Mounting Bracket to the center location

STEP 4

Repeat **Step 2** to attach the remaining (1) Passenger/Right Front/Rear Mounting Bracket to the rear location, (Figs 5). Do not tighten hardware

FIG 5

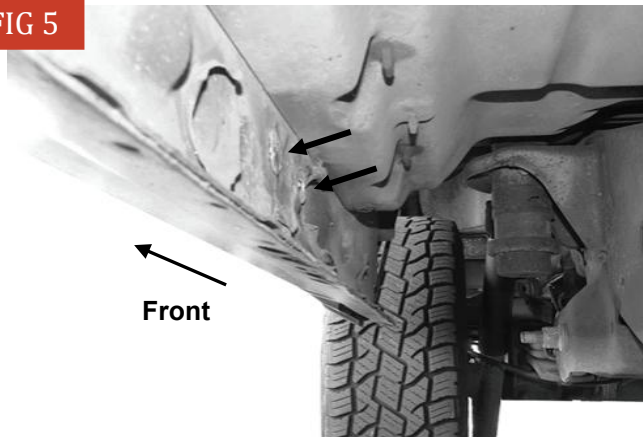


(Fig 5) Passenger/Right rear mounting location

STEP 5

Select the Passenger/Right Running Board. Carefully place Running Board on the brackets. **IMPORTANT:** Do not slide the Running Board front to back or damage to the finish may result. Attach Running Board to the (3) Mounting Brackets with (6) 8mm Combo Bolts, (Fig 6). Do not tighten hardware.

FIG 6

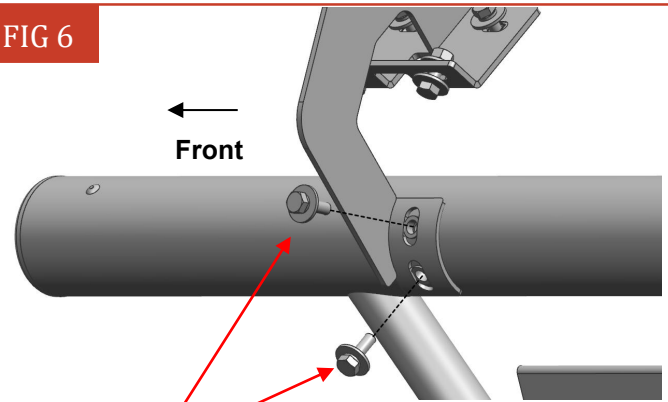

(Fig 6) Attach Passenger/Right Board to the Mounting Brackets

STEP 6

Level and adjust the Running Board and tighten all hardware.

STEP 7

Repeat **Steps 1—6** to attach the Driver/Left Running Board.

REDROCK

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Attention

To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the finish.

Mild soap may be used also to clean the Running Boards.