



LED UNDERHOOD LIGHTING KIT

(UNIVERSAL FITMENT)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) LED Underhood Lighting Kit
- (2) Alcohol Prep Pads
- (20) Cable Tie Adhesive Mounts
- (20) Cable Ties

TOOLS REQUIRED

Socket Set/Wrenches

SKU # U10193

STEP 1

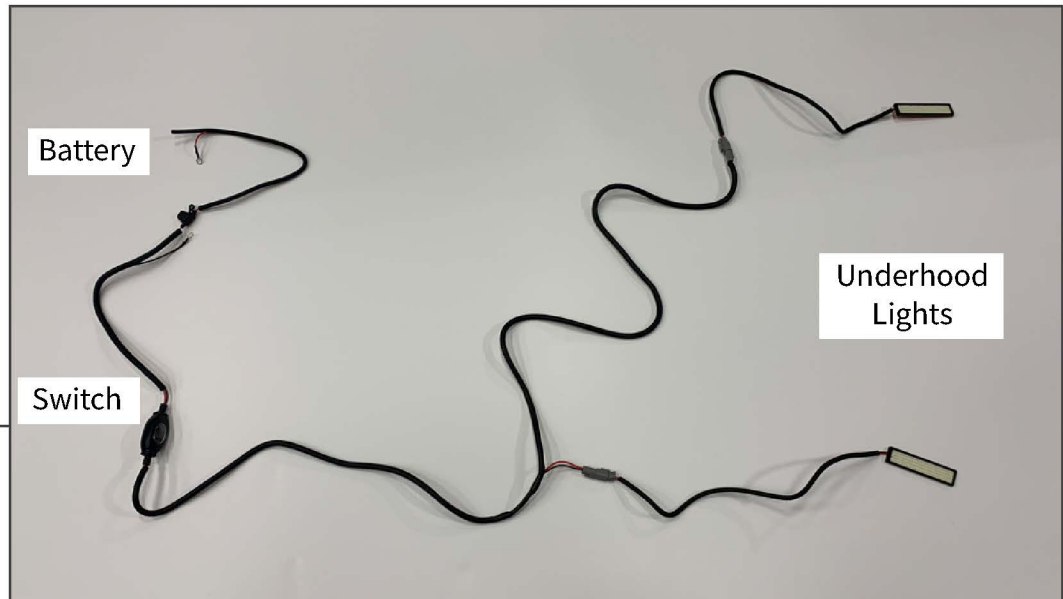

Determine the layout of the underhood lighting kit.

STEP 2



Identify the desired location for the LED underhood lights to be adhered to the vehicle. Clean the desired areas using the provided alcohol wipes.

Verify desired light position on vehicle to battery distance to ensure sufficient wiring distance.

STEP 3




Adhere the LED underhood lights to the desired location by peeling back the double sided tape backing, and pressing the lights firmly into place.

STEP 4



Neatly route the wiring towards the vehicle battery. Using the provided cable tie adhesive mounts and cable ties, secure the wiring harness to the underside of the hood.

Note: Clean the hood surface prior to adhering cable tie mounts to ensure proper adhesion.

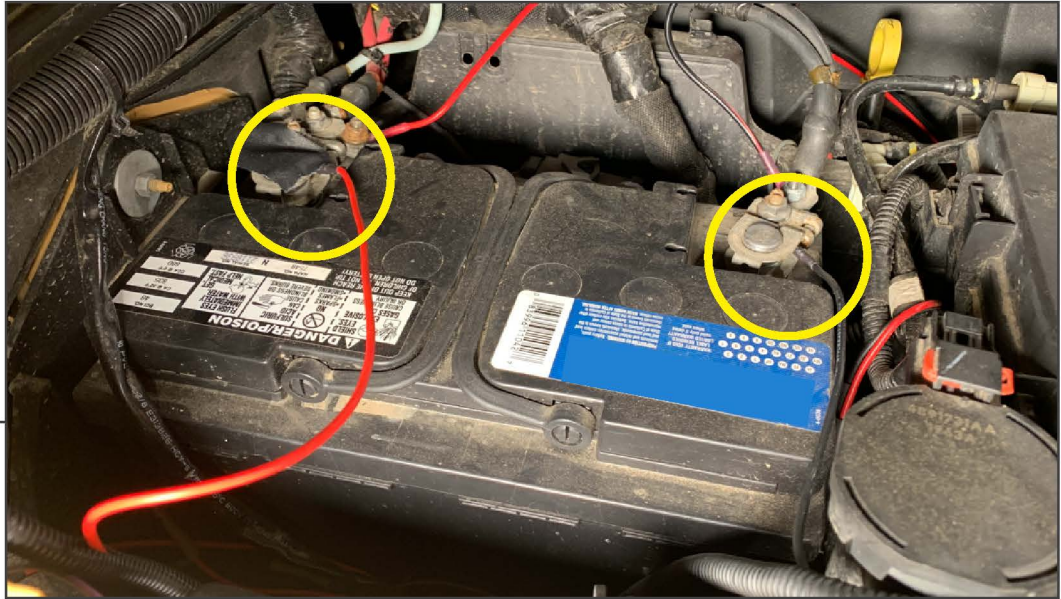

STEP 5

Once the harness is routed, connect the wiring harness to the vehicle battery using the diagram below.

<u>Vehicle Battery</u>	-	<u>Lighting Wiring Harness</u>
Positive Terminal	-	Red
Negative Terminal	-	Black



STEP 6

Activate the lighting kit by using the inline switch.

Installation is now complete.