



UNIVERSAL BED STORAGE BOX

(UNIVERSAL TRUCK - 56" WIDTH)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Storage Box Panel
- (1) Center Storage Box Panel
- (1) RH Storage Box Panel
- (2) Foam Partitions
- (24) M5x0.8 x 14mm Allen Bolts
- (24) M5x0.8 Flange Nuts
- (1) Allen Key
- (1) Hex Wrench
- (2) Pull Straps
- (2) Anchor Hooks
- (1) Net
- (6) Net Hooks
- (1) Fitted Cover

TOOLS REQUIRED

- 8mm Wrench (included)
- 3mm Allen Key (included)

STEP 1



Lay out each of the storage box panels to familiarize fitment and alignment. Then, secure each side panel to the center panel using (12) M5 x 14mm Allen bolts and (12) M5 flange nuts per panel.

Ensure to re-check all bolts after initially tightening to ensure all hardware is evenly tightened.

STEP 2



Attach each of the rear anchors to the rear-most tie down points within the vehicle bed.

Fit the included strap through the slots in the sides of the storage box. Then, route the strap end through the previously mounted anchor eyelet.


Repeat this step for the opposite side of the vehicle.

STEP 3



Fit the storage box in the bed positioning the rear-most edge to fit tightly to the tailgate when in the closed position, close the tailgate to achieve proper position/tension if necessary.

STEP 4

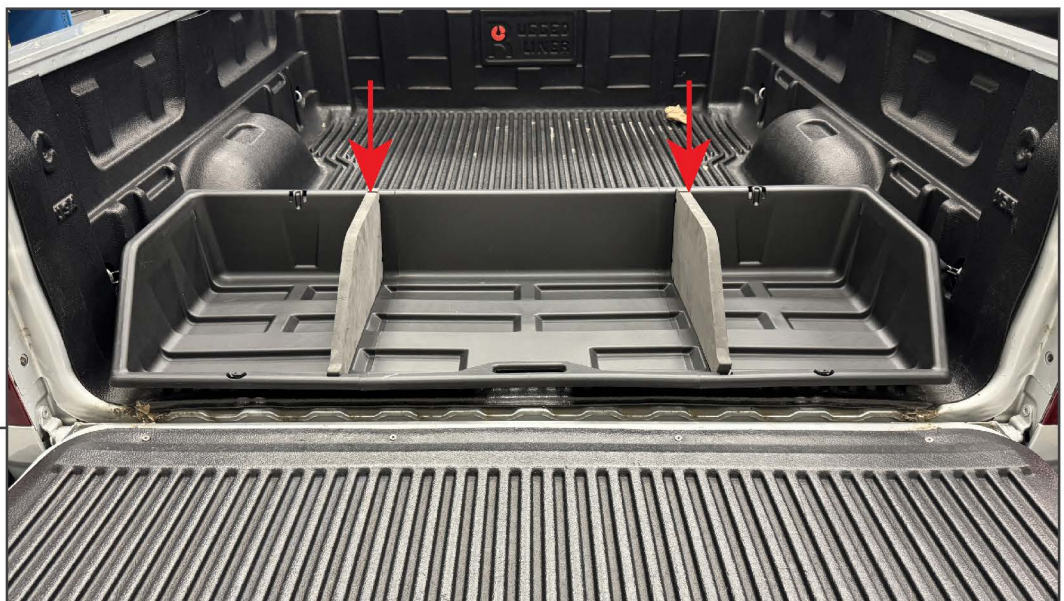

Insert the (2) foam partitions, if desired. Firmly press into place until fully seated.

STEP 5



Attach each net hook to the outer net loops. Then, fit the net to the storage box and attach each hook to the outer perimeter of the storage box.

STEP 6



To install the cover, familiarize the shape of the cover. The cover is directional and can only be installed in one orientation due to the storage box shape.

Once familiar with the shape, fit the cover over the storage box. The cover is a tight fit and must be stretched similar to a fitted sheet.

STEP 7



Installation is now complete.