

LED HEADLIGHTS WITH WHITE DRL

(2020-2022 F-250 / F-350)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) LH Headlight
(1) RH Headlight
(1) DRL Harness
(1) Dielectric Grease Packet

TOOLS REQUIRED

10mm, 13mm Sockets
Ratchet
Panel Removal Tool

STEP 1

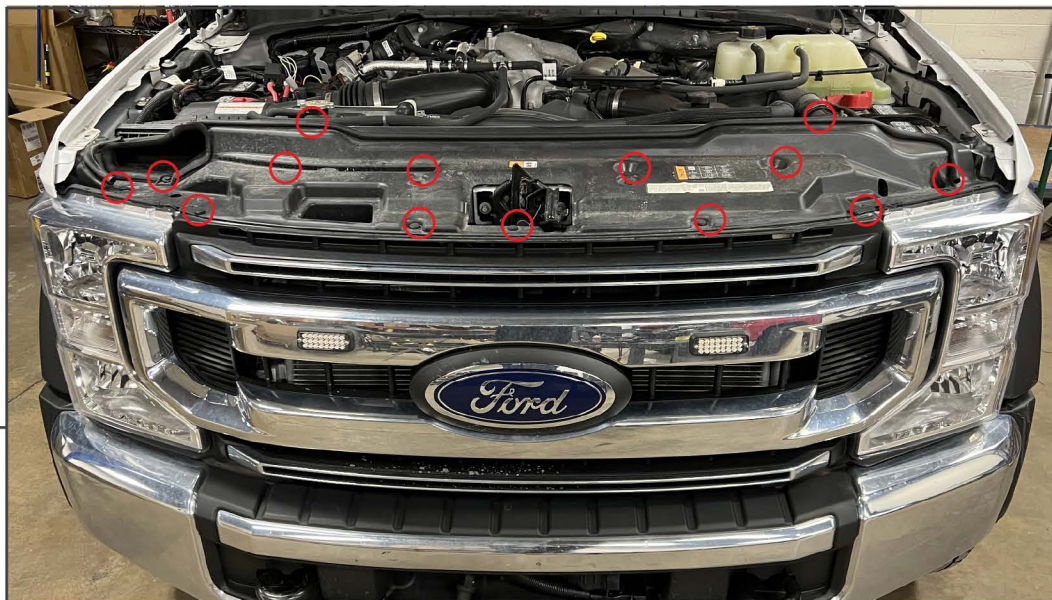


Open the vehicle hood. Remove the radiator cover by removing (14) plastic push clips. With all clips removed, lift the radiator cover away from the vehicle and set aside.

STEP 2




Remove (6) 10mm bolts from the top of the grille.

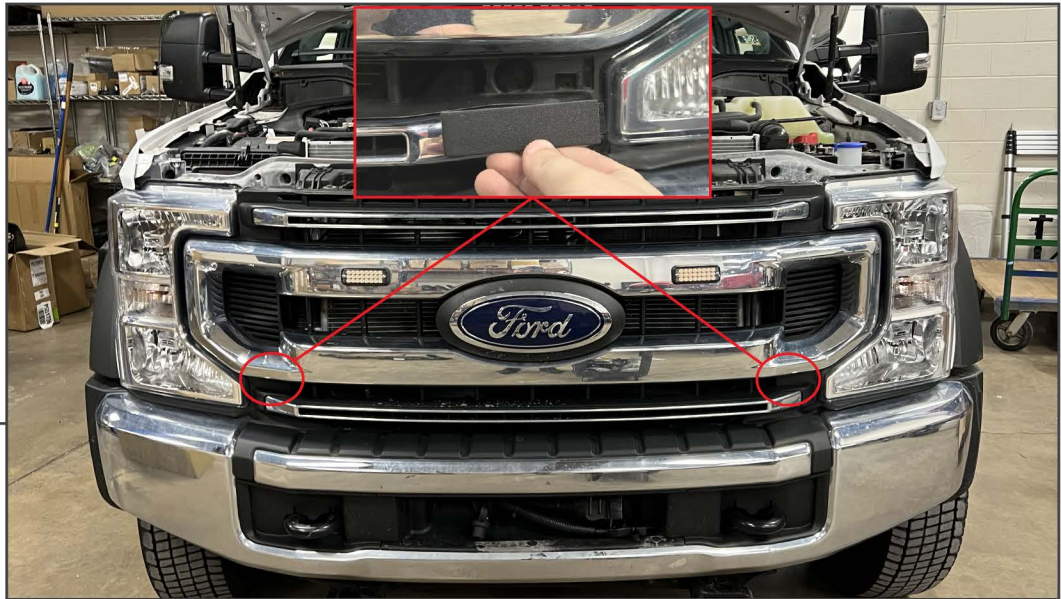

STEP 3

Along the bottom of the grille, locate the bolt hole cover panels. Using a small pry tool, pry the panel to slide the cover towards the center of the grille. Then, lift the panel away from the grille.

Remove (2) 10mm bolts from the bottom of the grille.

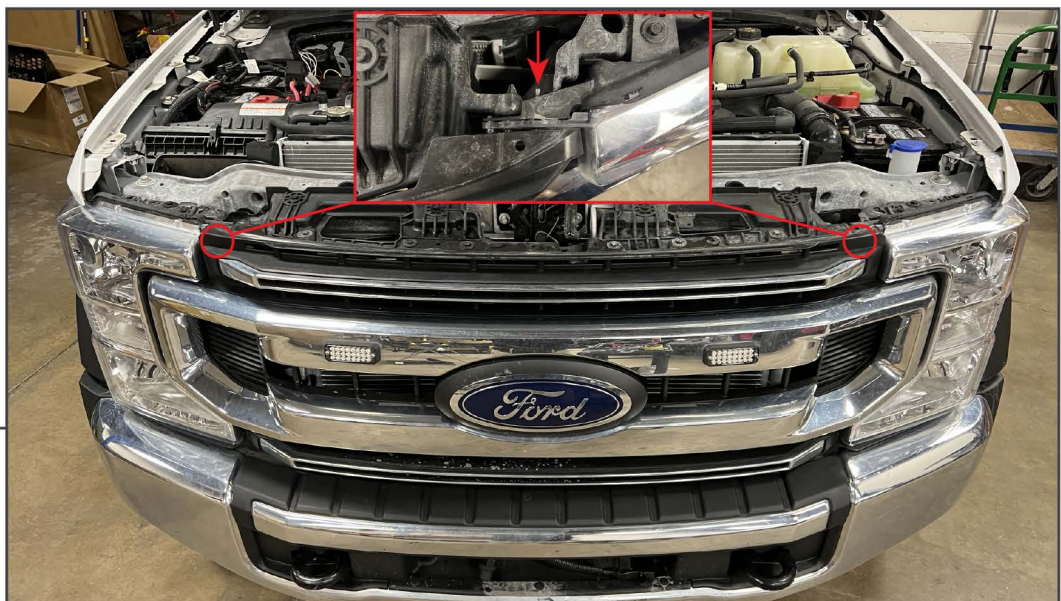


STEP 4

Remove (2) 10mm nuts from the top corners of the grille.

Firmly pull the grille away from the vehicle to disconnect the retaining clips along the sides and bottom of the grille. Set the grille on a soft surface.

STEP 5

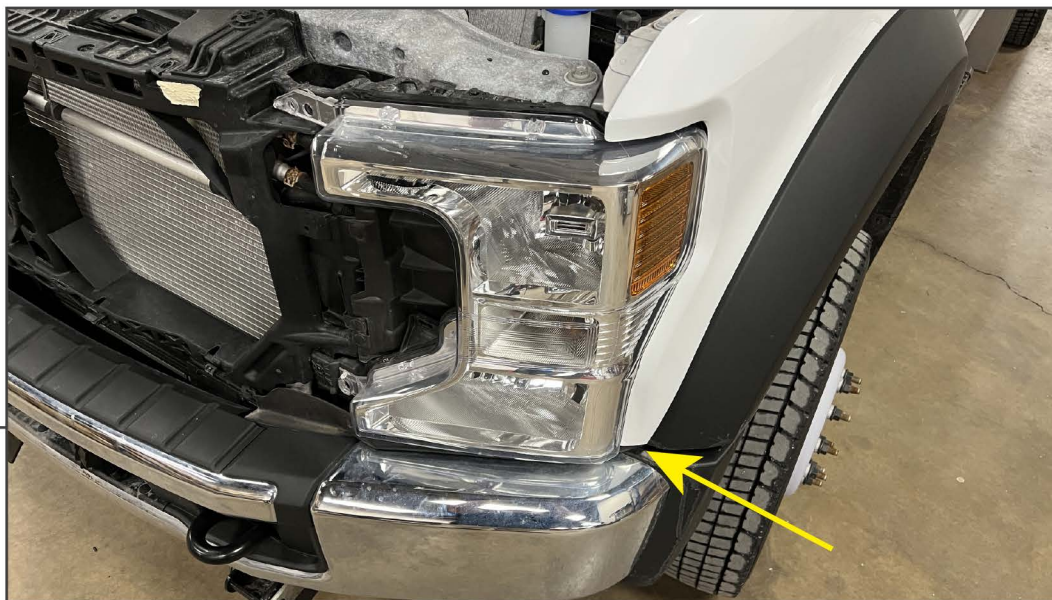

Locate and remove (1) 13mm bolt from the bottom of the headlight assembly between the fender and bumper. Fold the bumper weatherseal to reveal the bolt.


Note: Loosening and adjusting the bumper downwards temporarily may be necessary for bolt clearance.

STEP 6




Remove (2) 10mm bolts from the top of the headlight assembly. Lift the inner-most mounting tab on the headlight over the post, then firmly pull the headlight away from the vehicle to release the fender retainers.

STEP 7

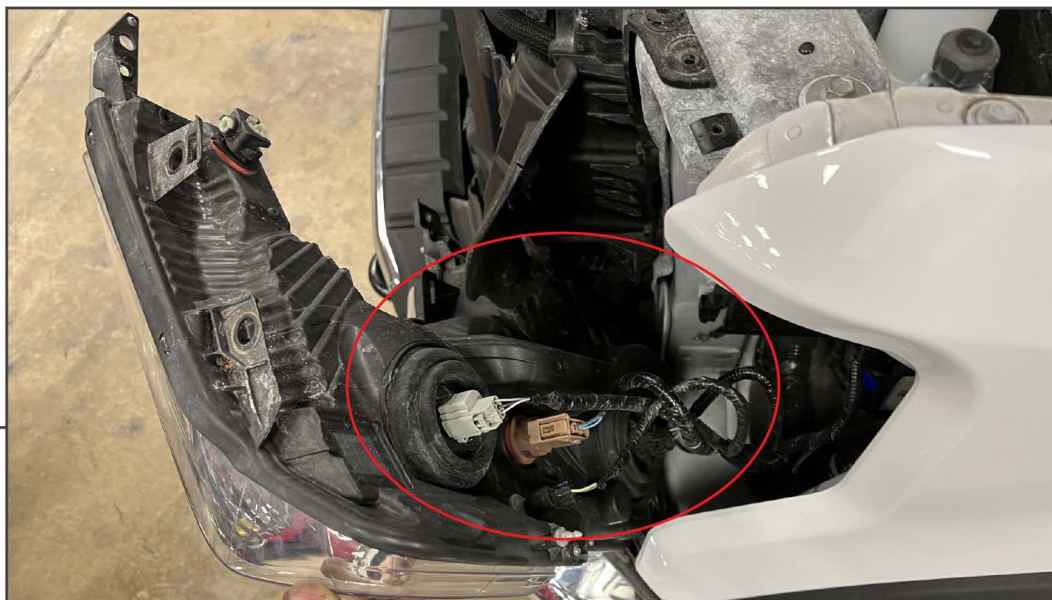

Unplug the (4) electrical connections from the headlight. Set the original headlight aside.

STEP 8

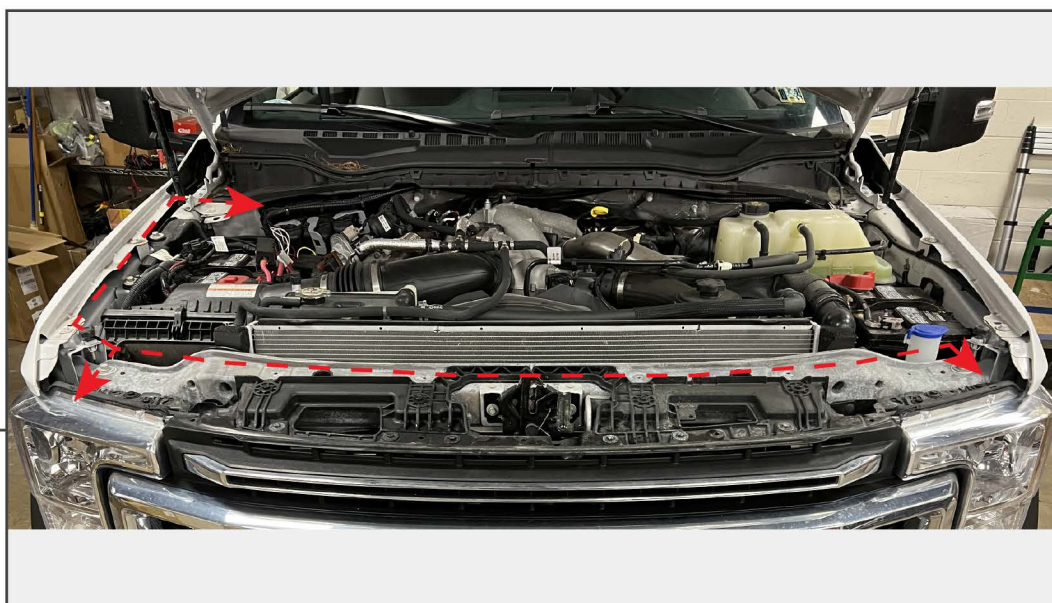


Neatly route the included DRL harness across the engine bay from the fuse box to both headlight locations.

Fit the fuse tap into the fuse # 22 in place of the original fuse.

Note: Notching the fuse box lid to allow clearance for the harness to exit the box may be necessary.


STEP 9

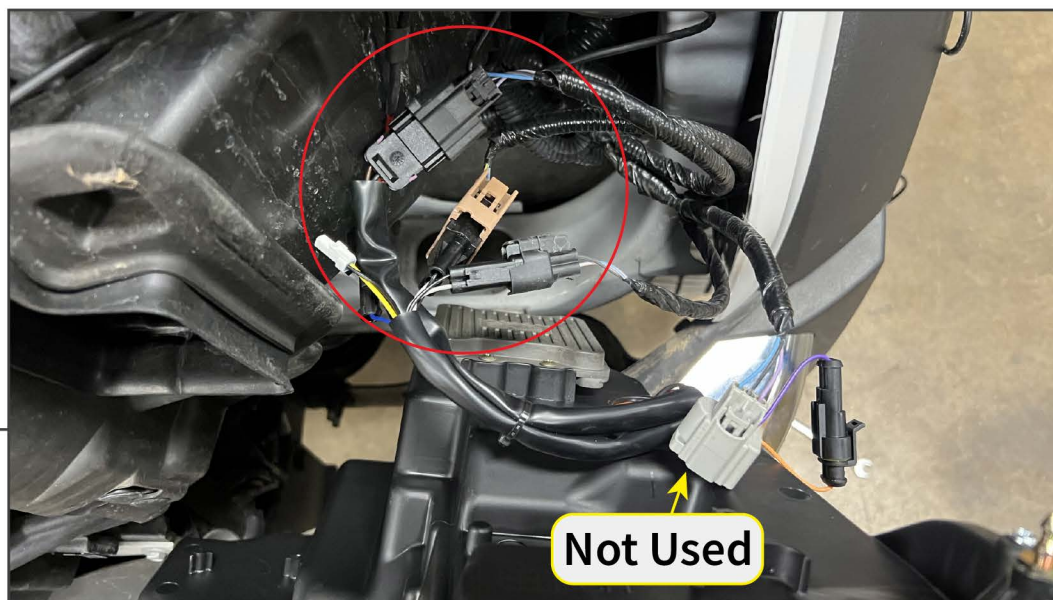

Plug the headlight harness connectors into the vehicle corresponding harness connectors.

Note: One of the vehicle connectors will not be used with the new headlight.

STEP 10

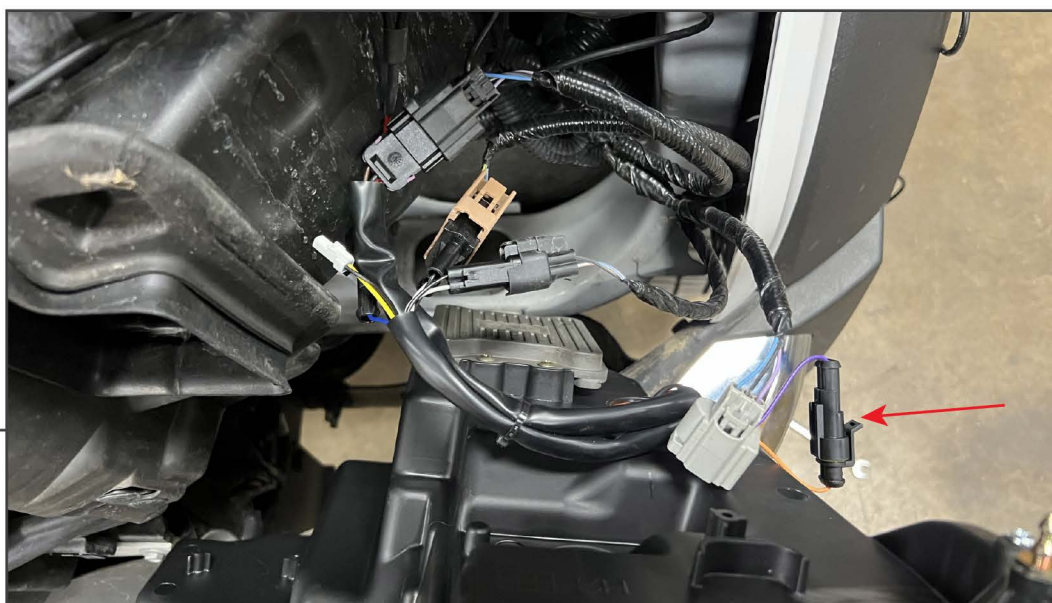

Turn Signal Sequence On/Off: Plug in/Unplug the designated connector to toggle turn signal sequence feature.



STEP 11

Install the headlights to the vehicle reusing the original mounting hardware. Then, re-install the grille reusing the original mounting hardware.

Installation is now complete.