

# **FULL SCREEN OE-STYLE** RADIO UPGRADE W/NAVIGATION

(2015-2020 F-150) (2017-2019 SuperDuty)

\*\*2018-2020 F-Series\*\*

Bang & Olufsen Audio Requires Additional Harness SKU: T548444 360\* Camera System Requires Additional Harness SKU: T548445

INSTALLATION INSTRUCTIONS


#### CONTENTS

- (1) Main Harness Adapter
- (1) Radio Antenna Cable
- (1) 12Pin Reverse Cam Converter (used w/ factory 4"
- (1) 54Pin Reverse Cam Converter (w/ factory 7" screen)
- (1) 8Pin USB Harness
- (1) Cam Inputs
- (1) RCA Audio Output
- (1) 10 Pin USB Line
- (1) Wifi Antenna Cable
- (1) GPS Antenna Cable
- (1) Mic Cable
- (1) DVR Cable
- (1) AUX Input
- (1) Canbox

#### **TOOLS REQUIRED**

Soft Pry Tool 7mm Socket Socket Wrench Flat Blade Screwdriver



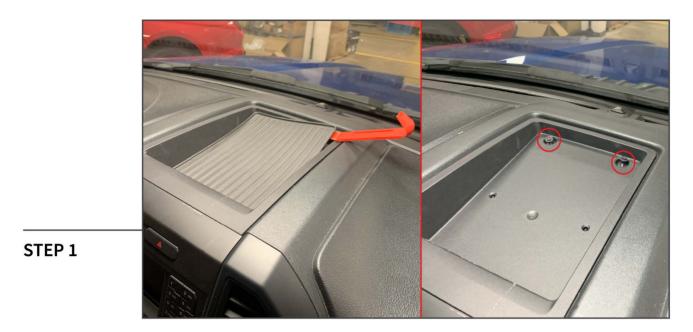

Using a soft pry tool, remove the rubber liner from the dash storage tray. Using a 7mm socket, remove the (2) screws.



Pull up on the storage tray to release it from its retaining clips.






Using a 7mm socket, remove the (2) screws securing the factory trim panel to the vehicle.




STEP 4

Pull the trim panel away from the dash. From behind, carefully remove the various electrical connectors.



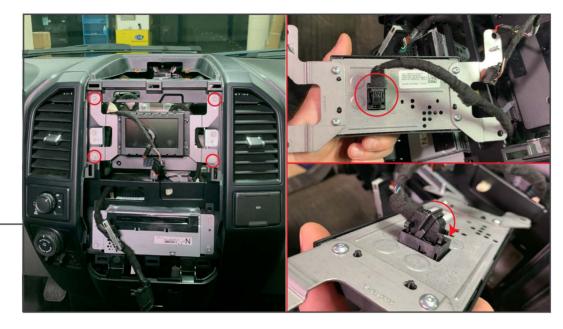

With the dash panel removed, use a 7mm socket to unscrew the (4) screws securing the factory display to the vehicle. Disconnect the (1) electrical plug from the unit.

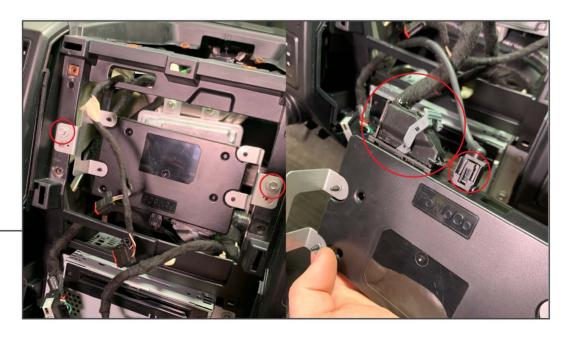

## STEP 6

Using a 7mm socket, remove the (2) screws securing the sync module to the vehicle. Disconnect the (2) electrical plugs from the unit.






Using a 7mm socket, remove the (4) screws securing the factory CD/radio to the vehicle. Disconnect the (3) electrical plugs on the back of the unit.



## STEP 8

Using a small flat blade screwdriver, pry off the orange slips from the factory panel. Transfer the clips to the Navos panel.



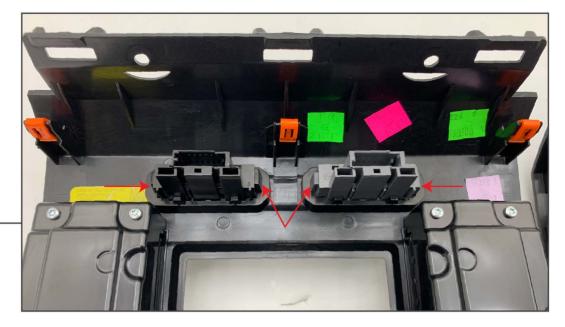

Transfer the Hazard and Traction control buttons from the factory trim panel to the Navos panel. Depress the tabs on the buttons and push them out of the panel. Transfer the buttons to the Navos panel.



#### STEP 10

Identify the supplied wiring harnesses.

- 1. Main Harness Adapter
- 3. 12 Reverse Cam Converter (used w/ factory 4" screen)
- 5. 8Pin USB Harness
- 7. RCA Audio Output
- 9. Wifi Antenna Cable
- 11. Mic Cable
- 13. AUX Input

- 2. Radio Antenna Cable
- 4. 54Pin Reverse Cam Converter (w/ factory 7" screen)
- 6. Cam Inputs
- 8. 10 Pin USB Line
- 10. GPS Antenna Cable
- 12. DVR Cable
- 14. Canbox





Reference Provided user manual for additional wiring diagrams. \*\*Please Note: Not all applications will use every harness, and not all plugs on every harness will be used.

Installation- Route all wiring harnesses so that they do not interfere with the display and inner dash structure. Repeat Step 1-4 in reverse order.