2019-2024 Chevy Silverado HD Full LED Headlights Harness Install Guide SKU 111619X

Modified on: Wed, Jul 24, 2024 at 1:59 PM

2019-2024 Chevy Silverado HD Full LED Headlights Harness Install Guide

SKU# 111619X

2019 - 2024 SILVERADO HD
HEADLIGHTS INSTALLATION INSTRUCTIONS FOR HALOGEN MODEL

WWW.ANZOUSA.COM
5150 EUCALYPTUS AVE UNIT A + CHINO, CA 91710 + (888) 360 - 3696

DIFFICULTY LEVEL

EASY — HARD

SCAN HERE TO VIEW PDF INSTRUCTIONS ON MOBILE DEVICE

TOOLS NEEDED

SAFETY GLOVES

SAFETY GOGGLES

STORAGE TRAY

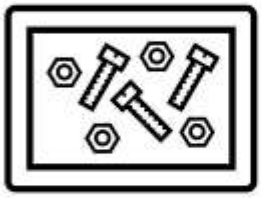

SOCKET SET

PANEL POPPER

SCREWDRIVER SET

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION!
IMPROPER INSTALLATION MAY VOID WARRANTY

ANZOUSA™ PRODUCTS ARE COVERED TO BE FREE OF MANUFACTURING DEFECTS BY A LIMITED TWO-YEAR WARRANTY. HOWEVER, CERTAIN ANZOUSA™ PRODUCT CATEGORIES HAVE WARRANTY POLICIES WHICH DIFFER FROM THIS STANDARD. PLEASE CONTACT YOUR REPRESENTATIVE FOR DETAILED CATEGORY INFORMATION. DAMAGE DUE TO IMPROPER INSTALLATION OR ROAD HAZARDS IS NOT COVERED. SELLER AND MANUFACTURER'S ONLY OBLIGATIONS SHALL BE TO REPLACE THE PRODUCT PROVEN TO BE DEFECTIVE. NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF OR THE INABILITY TO USE THE PRODUCT. BEFORE USE, USER SHALL DETERMINE THE SUITABILITY OF THE PRODUCT FOR ITS INTENDED USE, AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH.

© 2021 ANZOUSA™ ALL RIGHTS RESERVED

TITLE: 2019-2024 SILVERADO HD | PART NUMBER: 111619X

ANZO USA

"DON'T GET LEFT IN THE DARK"

IMPORTANT NOTICE: THE FOLLOWING INSTRUCTIONS ARE FOR **MODELS WITH FACTORY HALOGEN HEADLIGHTS ONLY.** THE HEADLIGHTS ARE PRE-INSTALLED WITH THE HARNESS FOR MODELS WITH FACTORY LED HEADLIGHTS.

01 THE PHOTO ABOVE SHOWS THE CONNECTOR OF (1) RESISTOR HARNESS AND (2) BATTERY HARNESS.

02 CONNECT THE PROVIDED RESISTORS TO CONNECTOR (1) IN STEP 1.

REPEAT ON THE OPPPOSITE SIDE OF HEADLIGHT.

03 LOCATE THE PROVIDED BATTERY HARNESS AND CONNECT IT TO THE HEADLIGHT AS INSTRUCTED IN STEP 4 AND STEP 5.

04 CONNECT THE CONNECTORS OF THE BATTERY HARNESS SHOWN IN THE ABOVE PICTURE TO THE CONNECTOR (2) IN STEP 1. REPEAT ON THE OPPOSITE SIDE OF HEADLIGHT.

05 CONNECT THE FORK SPADE CONNECTORS OF BATTERY HARNESS TO THE BATTERY. RED WIRE TO POSITIVE (+). BLACK WIRE TO NEGATIVE (-).
ROUTE AND SECURE HARNESS USING ZIP TIES.

06 THE HEADLIGHTS ARE EQUIPPED WITH THE CHOICE FOR DRL/PARKING LIGHT SWITCH. LOCATE THE SWITCH ON THE BASE OF THE HEADLIGHTS. THE FUNCTION OF THE SWITCH IS SHOWN IN THE ABOVE PHOTO.

07 PRESS "O" FOR WHITE DRL/PARKING LIGHT ON LIGHT BARS AS SHOWN.

08 PRESS "I" FOR AMBER DRL/PARKING LIGHT ON LIGHT BARS AS SHOWN.

09 INSTALLATION COMPLETE. TEST ALL FUNCTIONS OF THE NEW HEADLIGHTS BEFORE DRIVING ON THE ROAD.

TITLE: **2019-2024 SILVERADO HD**

PART NUMBER: **111619X**