

PART #	DESCRIPTION
77701CP	11-UP GM HD 0-1" REAR 2.5 VS PB CDCV

COMPONENTS INCLUDED	
(2) 174944C 11+ GM HD 0-1" REAR 2.5 VS PB CDCV	
HARDWARE INCLUDED	
N/A	
TOOLS REQUIRED	
JACK JACK STANDS	TORQUE WRENCH 21MM SOCKET / WRENCH
TECH NOTES	
<p>1. YOUR ICON SHOCK ASSEMBLIES COME FACTORY CHARGED TO 150 PSI. RELEASING NITROGEN PRESSURE MAY LEAD TO SHOCK MALFUNCTION AND REDUCED RIDE QUALITY. FAILURE CAUSED BY LOW NITROGEN PRESSURE IS NOT COVERED UNDER ICON'S WARRANTY POLICY.</p>	



WARNING!
<p>** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!</p> <p>** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.</p> <p>** ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLATION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY.</p>

INSTALLATION

- Using a properly rated jack, raise the rear of the vehicle and support the frame rails with jack stands. Ensure the jack stands are secure and set properly before lowering the jack. NEVER WORK UNDER AN UNSUPPORTED VEHICLE. Remove the rear wheels.
- Remove the OEM rear shocks using a 21mm. [FIGURE 1]

FIG.1




3. Install the upper bolt first with the wide spacer to the outside spacing the shock away from the frame for added clearance using a 21mm [Torque to factory spec] [FIGURE 2]

FIG.2



4. Install the lower bolt using a 21mm. Use the offset spacers to space the shock away from the frame. It helps to have the suspension fully extended for this step. [Torque to factory spec] [FIGURE 3]

FIG.3

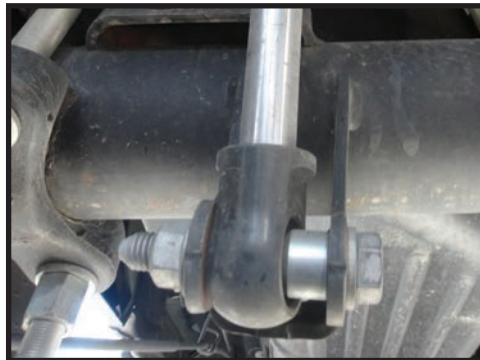

5. Install the wheels and lower vehicle to the ground. [Torque to factory spec]

VERIFY ALL FASTENERS ARE PROPERLY TORQUED BEFORE DRIVING VEHICLE.

RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

2.5 VS SERIES SHOCK & COILOVER TECHNICAL INFORMATION

MAINTENANCE

ICON shock absorbers are a high quality rebuildable race style shock absorber designed for optimal performance. With a unit of this caliber on your vehicle, routine maintenance is required to keep them looking and operating in like new condition. Residual oil and assembly lube may be present at all seal paths from the factory out of the box and is considered normal. Pooling of oil however is not acceptable at any time and one should contact the ICON dealer where purchased.

BELOW ARE GUIDELINES BASED ON HOW YOU USE YOUR VEHICLE BUT YOUR MILEAGE MAY VARY:

STREET USE:

- Send in for factory servicing every 40,000 miles or if a leak develops, ride quality decreases, or they begin to make excessive noise.
- Remove any buildup of road salt, mud, or debris from shocks and coil springs anytime accrued
- Clean with mild soap and water with each oil change or anytime you notice build up.
- Wax the cylinders yearly with automotive wax to prevent corrosion.
- Check nitrogen pressure yearly. (252004 charge needle assembly available at any ICON distributor)
- Check bearings for excessive wear yearly.
- **DO NOT** apply any type of lube to the upper and lower bearings.

STREET/DIRT:

- Send in for factory servicing every 15,000 miles or if a leak develops, ride quality decreases, or they begin to make excessive noise.
- Clean with mild soap and water with each oil change, offroad trip, or anytime you notice build up.
- Wax the cylinders yearly with automotive wax to prevent corrosion.
- Check nitrogen pressure each dirt outing. (252004 charge needle assembly available at any ICON distributor)
- Check bearings for excessive wear yearly.
- **DO NOT** apply any type of lube to the upper and lower bearings.

DIRT USE:

- Send in for factory servicing every 1,000 miles.
- Check nitrogen pressure each outing. (252004 charge needle assembly available at any ICON distributor)
- Remove any buildup of mud or debris from shocks and coil springs after every outing.

SELF-SERVICE:

- Contact ICON for service kits & tools at (951) 689-4266.

PRODUCT REGISTRATION

Please visit: <http://www.iconvehicledynamics.com/tech-support/registration/> to register your product.

ICON VEHICLE DYNAMICS SHOCK ABSORBER WARRANTY

This shock absorber has a 1 year warranty against any manufacturer's defects. If a shock fails within the initial year of ownership, the shock must be shipped to ICON Vehicle Dynamics for inspection and service. If a shock is inspected and it has been determined the shock failed due to neglect, damage caused by improper installation or any other reason besides "normal wear and tear", the owner of said shock is responsible for all service costs. This includes labor, parts, and shipping.

ICON Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. ICON Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to ICON Vehicle Dynamics instructions. ICON Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.

ICON Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at ICON Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.

ICON Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.

To send a shock in for warranty please visit our website <http://www.iconvehicledynamics.com/tech-support/shock-service/>

ICON VEHICLE DYNAMICS

PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504 Phone: 951.689.ICON Fax: 951.689.1016
www.iconvehicledynamics.com



FOLLOW US ON FACEBOOK!



7929 Lincoln Ave. Riverside, CA 92504
 Phone: 951.689.ICON | Fax: 951.689.1016

PART #	DESCRIPTION
78735T	20-UP GM HD 0-2" CDCV SHOCK SYSTEM W/ TUBE UCA

COMPONENTS INCLUDED

(2) 150014 LC NUT TAB ASSEMBLY	(8) 297034 HAT BUSHING 1.625 X 1.000 X .850
(8) 150026 WASHER 2.125 X .635 X .188	(4) 297042 SUPPORT RING 1.590 X 1.005 X .250 (75D) BLK
(1) 174064 20-UP GM HD TUBULAR UCA DRVR	(2) 605101 3/8-16 X 1.000 GR8 BOLT
(1) 174065 20-UP GM HD TUBULAR UCA PASS	(4) 605903 1/4-28 X 90 DEG STEEL ZERK FITTING
(1) 174711 20-UP GM FRONT SWAY BAR RELOCATION KIT	(2) 605929 11 X 0.178 NYLON CABLE TIE, BLACK
(2) 174941R-AL 11-UP GM HD 0-2" FRONT 2.5 AL VS RR CDCV	(2) 605950 SPIRAL RETAINING RING
(2) 177058BJ 01-UP GM HD/15-UP COLORADO DELTA JOINT	(2) 611006 9/16 HD STEM BUSHING KIT
(4) 187001 SLEEVE 1.000 X 16MM X 2.130	(1) 611051 #36 1.188-2.750 STAINLESS HOSE CLAMP KIT (4)
(2) 250002 7.50 UNIVERSAL RESI MT PLATE	(2) 61105 11+ GM HD STEM ADAPTER KIT

HARDWARE INCLUDED

174711 HARDWARE KIT

(2) 127212 SLEEVE .750 X .510 X .438	(4) 605133 3/8 SAE FLAT WASHER GR8
(2) 169003 SLEEVE .750 X .510 X .250	(2) 605307 1/2-13 X 2.750 BOLT GR8
(1) 170153 20-UP GM DRVR SIDE LOOM GUARD	(2) 605322 1/2-13 C-LOCK NUT GR8
(2) 177524 20-UP GM SWAY BAR SPACER	(8) 605330 1/2 SAE FLAT WASHER GR5
(2) 177525 3/4" HEX BAR END LINK 4.250" LG	(2) 605350 1/2-20 C-LOCK NUT GR8
(2) 295504 NJML8Y 1/2-20 LEFT HAND SHANK RIGHT HAND STUD	(2) 605355 1/2-20 JAM NUT THIN GR5
(2) 295512 JM08T ROD END F1 FIT	(2) 605356 1/2-20 JAM NUT THIN GR5 LEFT HAND
(2) 299004 SLEEVE .75 X .26 X .75	(2) 605873 M6 X 1.0 X 40MM BOLT
(2) 605053 1/4 SAE FLAT WASHER GR8	(2) 605926-BLK 5-1/2 X 0.14 NYLON CABLE TIE, BLACK
(4) 605100 3/8-16 X .750 BOLT GR8	

TOOLS REQUIRED

ABRASIVE CUTTING WHEEL SANDER	9/16" SOCKET / WRENCH
PAINT	13/16" SOCKET / WRENCH
LARGE ADJUSTABLE WRENCH	7/64" ALLEN
TORQUE WRENCH	10MM SOCKET / WRENCH
3/4" SOCKET / WRENCH	13MM SOCKET / WRENCH
3/8" SOCKET / WRENCH	18MM SOCKET / WRENCH
5/8" SOCKET / WRENCH	21MM SOCKET / WRENCH
7/8" SOCKET / WRENCH	24MM SOCKET / WRENCH

TECH NOTES

1. ALL ICON UPPER CONTROL ARMS HAVE BEEN ENGINEERED TO ALLOW FOR THE MOST POSSIBLE CASTER, WHILE STILL ALLOWING THE VEHICLE TO BE PROPERLY ALIGNED. NOTIFY YOUR PROFESSIONAL ALIGNMENT SHOP OF THIS INFORMATION SO THAT MAXIMUM RIDE QUALITY CAN BE ACHIEVED.
2. ICON DELTA JOINTS ARE PRE-GREASED FROM THE FACTORY. ICON RECOMMENDS GREASING THE DELTA JOINT EVERY 3,000 MILES (OR EVERY OIL CHANGE). ADD NEW GREASE UNTIL ALL OF THE OLD GREASE IS EXPELLED FROM THE BOTTOM OF THE DELTA JOINT ASSEMBLY, WIPE AWAY EXCESS WITH A RAG OR SHOP TOWEL.
3. ICON DOES NOT RECOMMEND AN AFTERMARKET TORSION KEY ON 2011-UP 2500 AND 3500 TRUCKS AS THEY OVER-LIFT THE VEHICLE AND CANNOT BE ADJUSTED PROPERLY. THERE IS MORE THAN ENOUGH RANGE ON THE STOCK TORSION KEY TO ACHIEVE THE MAXIMUM LIFT HEIGHT RECOMMENDED.
4. YOUR ICON SHOCK ASSEMBLIES COME FACTORY CHARGED TO 150 PSI. RELEASING NITROGEN PRESSURE MAY LEAD TO SHOCK MALFUNCTION AND REDUCED RIDE QUALITY. FAILURE CAUSED BY LOW NITROGEN PRESSURE IS NOT COVERED UNDER ICON'S WARRANTY POLICY.
5. A LEVEL STANCE IS NOT ACHIEVABLE WITHOUT LOWERING THE REAR OF THE VEHICLE. RAISING THE FRONT BEYOND THE RECOMMENDED LIFT HEIGHT WILL VOID THE ICON WARRANTY.



WARNING!

**** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!**

**** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.**

**** ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLATION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY.**

2. Using a 21mm socket/wrench, loosen torsion bar preload bolt and release tension. [FIGURE 1]

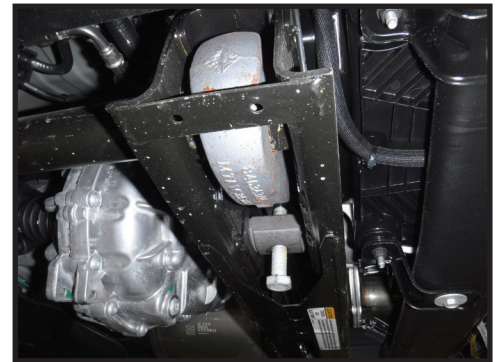


FIG.1

UPPER CONTROL ARM INSTALLATION

1. Using a properly rated jack, raise the front of the vehicle and support the frame rails with jack stands. Ensure the jack stands are secure and set properly before lowering the jack. NEVER WORK UNDER AN UNSUPPORTED VEHICLE. Remove the front wheels.

3. Remove the sway bar links using an 18mm. Use a 10mm, to remove the sway bar from the frame. [FIGURE 2]

FIG.2



4. Using the factory bolts, connect the sway bar relocation bracket to the frame. Torque to factory spec using a 10mm.

5. Use the supplied 3/8" hardware to connect the sway bar to the relocation bracket. Torque to 35 ft-lbs using a 9/16". [FIGURE 3]

FIG.3



6. Using a jack, slightly lift the lower control arm to prevent the suspension from being at full droop.

7. Remove the ball joint nut with a 21mm socket/wrench. [FIGURE 4]

FIG.4



8. The spindle will need to be supported so that it will not overextend the CV's on 4wd models, or possibly damage steering components. Using a ball joint separator, detach the ball joint from spindle.

9. With the upper control arm detached from the spindle, begin to loosen the upper control arm from its mounts in the frame using a 24mm wrench/socket and remove factory upper control arm. [FIGURE 5 & 6]

FIG.6



FIG.5



10. Before installing your new upper control arms, care must be taken to grease the bushings (liberally) prior to installing assembly. Failure to grease properly will cause premature bushing wear and increased noise.


11. With the (174062) control arm completely assembled, slide the arm into the upper mounts (with large washers on each side of the bushings) and insert the OEM hardware loosely. [FIGURE 7]

FIG.7



12. Line up the taper pin with the spindle and insert it without damaging the threads. Use supplied flanged nut to install the taper to the spindle. [Torque to 60 ft-lbs] [FIGURE 8]

FIG.8

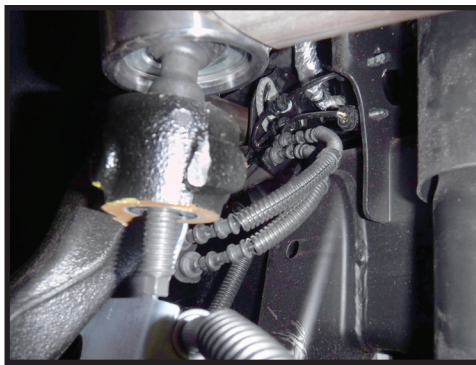

13. Before tightening the factory hardware, grease the pivots at the zerk fittings with a grease gun until grease begins to come out of the bushing housing.

14. Tighten the factory upper control arm pivot hardware on the chassis using a 24mm. [Torque to factory spec]

15. Repeat steps on passenger side.

16. Connect sway bar links using an 5/8" and 3/4". [Torque to 45 ft-lbs] [FIGURE 9 & 10]

FIG.9




FIG.10



SHOCK INSTALLATION

17. Using a jack, slightly lift the lower control arm to prevent the suspension from being at full droop.
18. Loosen the OEM bar pin nuts on the top shock mount. The fender well can be folded back for easier access to the top of the bolt heads.
19. Use a 21mm socket/wrench to loosen the lower shock mount.
20. Once the lower shock mount is removed, the shock can carefully be slid out from under the upper control arm.
21. Remove the ABS connector from the front side of the shock bucket. Remove the ABS lines from the ABS bracket. Remove the ABS bracket from the brake line bracket use a 10mm. [FIGURE 11]

FIG.11

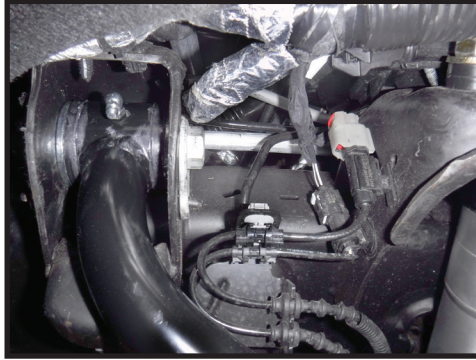

22. The supplied (250002) reservoir bracket will be installed into the large hole where the ABS clip was removed. Use the supplied (150014) nut tab and 3/8" bolt to fasten the reservoir bracket to the bucket as shown. [Torque to 45 ft-lbs] [FIGURE 12 & 13]

FIG.12



FIG.13



23. Using the supplied zip tie, fasten the ABS line to the hose clamp of the shock reservoir. Make sure that the ABS line doesn't interfere with any other components as the suspension cycles. [FIGURE 14 & 15]

FIG.14



FIG.15



24. On some models, there is a module mounted to the driver side shock bucket. This will need to be raised using the supplied 299004 sleeves, 605053 washers and 605873 screws. This is easiest to access from under the hood using long extensions and a 10mm.

25. Install the supplied (174037) stem top adapter on top of the shock bucket, taking care to note that the middle hole is offset to bring the shock outward for clearance. Using the supplied 9/16" hardware, fasten the adapter mount using a 13/16" wrench and 7/8" socket. [FIGURE 16 & 17]

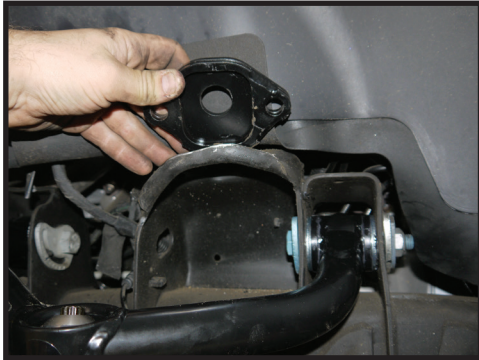


FIG.16

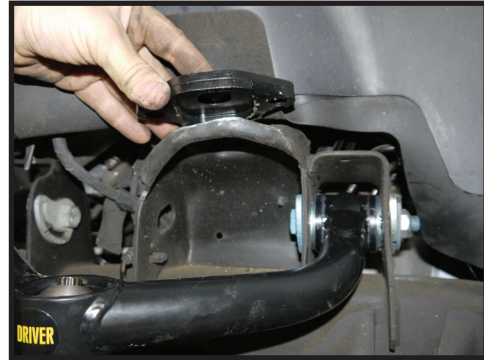


FIG.17

26. Slide the shock into the shock mount making sure to have the bushings on prior to final installation.


27. Attach the shock to the lower shock mount. Fasten using the factory hardware and 21mm socket/wrench. [Torque to factory spec] [FIGURE 18]



FIG.18

28. Route the remote reservoir forward by rotating the manifold in the proper direction.

29. Install stem hardware as seen in diagram. Install (605810) tall nut and fasten bushing assembly until 3-4 threads are exposed for the (605809) jam nut. Install (605809) nut and torque to 50 ft-lbs while holding (605810) with a 19mm wrench. Do not overtighten bushing assembly as this can lead to premature bushing wear. Failure caused by incorrect installation of bushings is not covered under ICON's warranty policy.

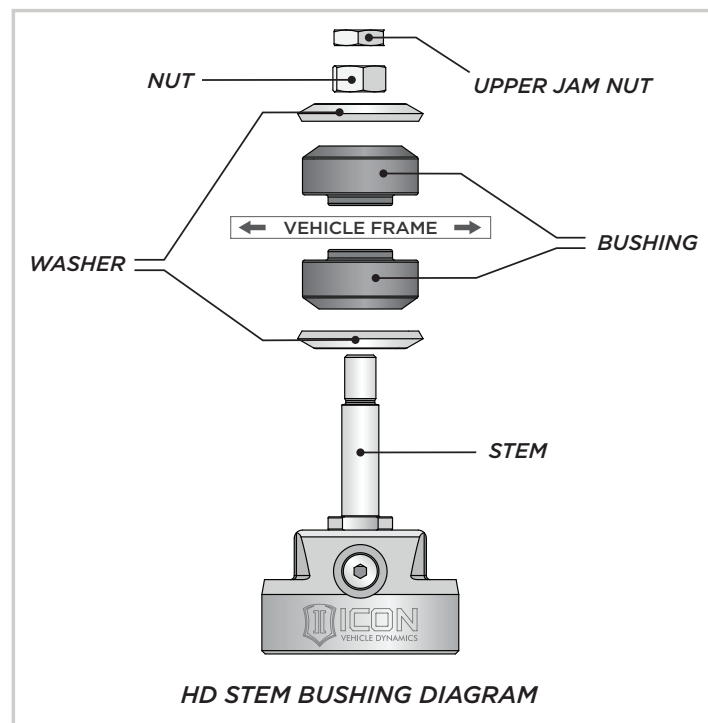

30. With the shock mounted on the lower control arm, the upper mount tightened to the shock bucket, and the shock stem tightened to the mount, slowly lower the jack to check for any interference with the ABS line.

31. Route the shock reservoir up under the control arm and against the bracket. Fasten using the supplied hose clamps and a 5/16" nut driver. Check that the vacuum line and wire loom do not make contact with the exhaust manifold heat shield. **[FIGURE 19]**



FIG.19

32. Repeat steps 2-15 on the opposite side.

33. Install wheels and lower vehicle to the ground. [Torque to factory spec]

34. Have the vehicle professionally aligned.

VERIFY ALL FASTENERS ARE PROPERLY TORQUED BEFORE DRIVING VEHICLE.

RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

2.5 VS SERIES SHOCK & COILOVER TECHNICAL INFORMATION

MAINTENANCE

ICON shock absorbers are a high quality rebuildable race style shock absorber designed for optimal performance. With a unit of this caliber on your vehicle, routine maintenance is required to keep them looking and operating in like new condition. Residual oil and assembly lube may be present at all seal paths from the factory out of the box and is considered normal. Pooling of oil however is not acceptable at any time and one should contact the ICON dealer where purchased.

BELOW ARE GUIDELINES BASED ON HOW YOU USE YOUR VEHICLE BUT YOUR MILEAGE MAY VARY:

STREET USE:

- Send in for factory servicing every 40,000 miles or if a leak develops, ride quality decreases, or they begin to make excessive noise.
- Remove any buildup of road salt, mud, or debris from shocks and coil springs anytime accrued
- Clean with mild soap and water with each oil change or anytime you notice build up.
- Wax the cylinders yearly with automotive wax to prevent corrosion.
- Check nitrogen pressure yearly. (252004 charge needle assembly available at any ICON distributor)
- Check bearings for excessive wear yearly.
- DO NOT apply any type of lube to the upper and lower bearings.

STREET/DIRT:

- Send in for factory servicing every 15,000 miles or if a leak develops, ride quality decreases, or they begin to make excessive noise.
- Clean with mild soap and water with each oil change, offroad trip, or anytime you notice build up.
- Wax the cylinders yearly with automotive wax to prevent corrosion.
- Check nitrogen pressure each dirt outing. (252004 charge needle assembly available at any ICON distributor)
- Check bearings for excessive wear yearly.
- DO NOT apply any type of lube to the upper and lower bearings.

DIRT USE:

- Send in for factory servicing every 1,000 miles.
- Check nitrogen pressure each outing. (252004 charge needle assembly available at any ICON distributor)
- Remove any buildup of mud or debris from shocks and coil springs after every outing.

SELF-SERVICE:

- Contact ICON for service kits & tools at (951) 689-4266.

PRODUCT REGISTRATION

Please visit: <http://www.iconvehicledynamics.com/tech-support/registration/> to register your product.

ICON VEHICLE DYNAMICS SHOCK ABSORBER WARRANTY

This shock absorber has a 1 year warranty against any manufacturer's defects. If a shock fails within the initial year of ownership, the shock must be shipped to ICON Vehicle Dynamics for inspection and service. If a shock is inspected and it has been determined the shock failed due to neglect, damage caused by improper installation or any other reason besides "normal wear and tear", the owner of said shock is responsible for all service costs. This includes labor, parts, and shipping.

ICON Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. ICON Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to ICON Vehicle Dynamics instructions. ICON Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.

ICON Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at ICON Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.

ICON Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.

To send a shock in for warranty please visit our website <http://www.iconvehicledynamics.com/tech-support/shock-service/>



ICON VEHICLE DYNAMICS®
PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504 Phone: 951.689.ICON Fax: 951.689.1016
www.iconvehicledynamics.com



FOLLOW US ON FACEBOOK!

